



Installing PowerBook G4 Titanium DVI Keyboard

Author: iRobot

Parts relevant to this guide


- [G4 Titanium DVI Keyboard](#) (1)

Replacing this keyboard is easy and takes only a few minutes.




Step 1 — Battery

- Locate the battery release tab on the underside of the G4.
- Slide the battery release tab to the left and lift the battery out of the computer.

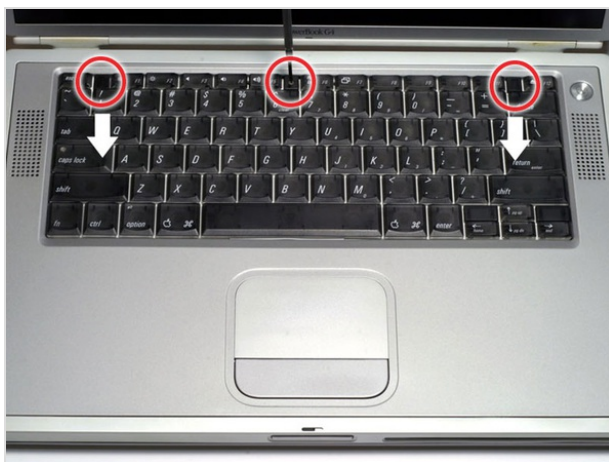

Step 2 — Keyboard

- Turn the keyboard locking screw located in the middle of the keyboard so that it is parallel to the space bar. A half turn from parallel to parallel will unlock it. Another half turn will lock it again.
- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.

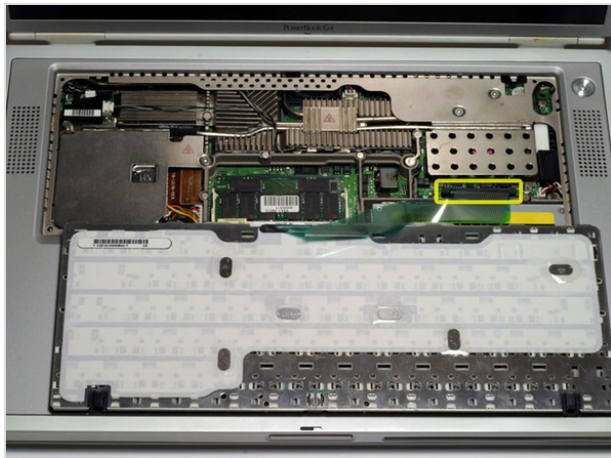

Step 3

- Rest the keyboard face down on the trackpad area.
- Disconnect the keyboard connector from the logic board.



Step 4

- Your laptop should look approximately like this.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on May 16, 2012.