



# Installing iMac G5 17" Model A1144 RAM

Author: Walter Galan

## Tools used in this guide

- [Phillips #1 Screwdriver](#) (1)

## Parts relevant to this guide

- [PC2-4200 2 GB RAM Chip \(Desktop\)](#) (1)

Upgrade your RAM for an instant increase in speed!




### Step 1 — Access Door

- Loosen the two Phillips screws securing the access door to your iMac.
- These screws are captive in the access door.



### Step 2

- Remove the access door from your iMac.

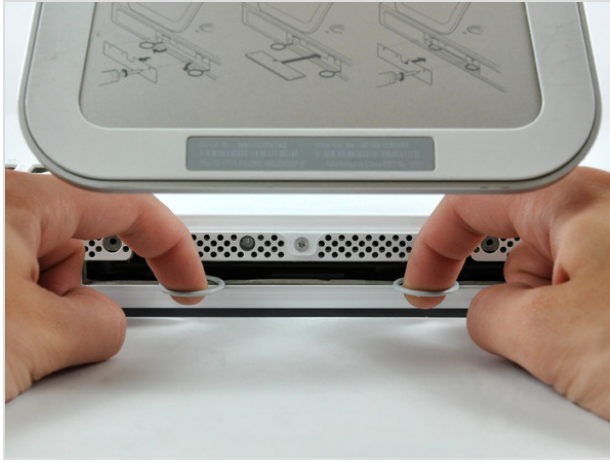

## Step 3 — RAM

- Insert your fingers into the two RAM arms and pull both arms toward yourself to eject the RAM chip.



## Step 4

- Slide the RAM chip straight out of its socket.
- Make sure both RAM arms are fully rotated outward before reinstalling your RAM chip.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 27, 2012.