



# HP Pavilion x2 10-n113dx Battery Replacement

How to take apart the HP Pavilion X2 laptop to replace a dead battery with a new battery.

Written By: David Zambrano



---

## INTRODUCTION

If the HP Pavilion X2's power isn't working, the battery may need to be changed. This guide shows how to take apart the HP Pavilion X2 to expose the battery and therefore take it apart to replace it with a new one.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Precision Tweezers Set](#) (1)
-


## Step 1 — Battery



**i** Before starting, please turn off your laptop.

- Using the blue plastic opening tool or a flat bladed tool, carefully slide the blade in between the display panel and gently slide to prop open the assembly.

## Step 2

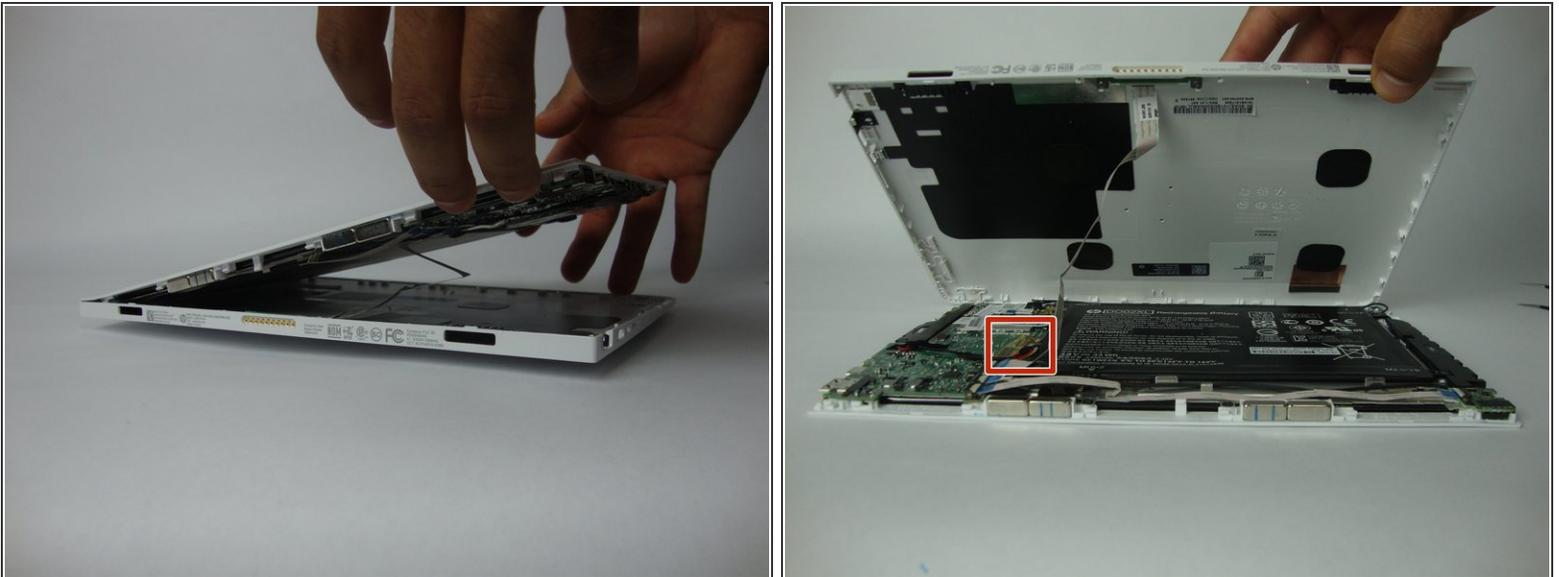

- Gently lift and remove the display panel from the assembly.
- Remove the translucent yellow tape that covers the battery connector on the mainboard.

**i** The tape will be in the way for a future step.

### Step 3



- Flip up the small white colored locking flap using the tip of a spudger or your fingernail. Then the ribbon cable can be removed easily without much effort.
- Carefully disconnect the white ribbon cable from the mainboard.

### Step 4



- Carefully disconnect the battery cable from its connector on the mainboard.

## Step 5



- Using the Phillips #0 screwdriver, carefully remove the 4 corner screws that hold the battery to the display panel.
- ⓘ 3 screws are 3.12 mm head, 2.40 mm length, and 1 screw is 5.85mm head, 2.5mm length.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.