



# HP Envy dv7t-7200 Battery Replacement

Use this guide to replace the HP Envy dv7t-7200 battery if your laptop will not hold a charge without being connected to the power cord.

Written By: Krystal



## INTRODUCTION

Use this guide to replace the HP Envy dv7t-7200 battery if your laptop will not hold a charge without being connected to the power cord.


## Step 1 — Battery



 Turn the power off and disconnect all cables and cords from the laptop.

- Place the computer on its top on a flat surface with the hinges facing away from you.

## Step 2

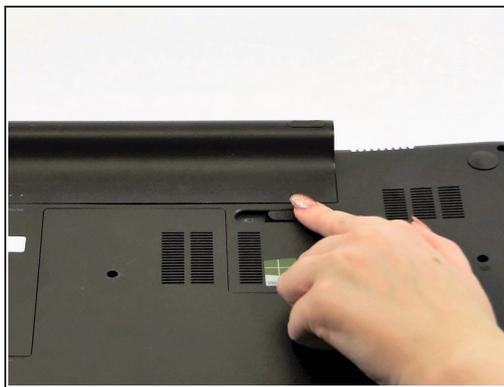

- Slide the battery release latch to the left which is located on the right-hand side of the battery.

### Step 3



- Tilt the battery away from you and lift out.

To reassemble your device, follow these instructions in reverse order.