


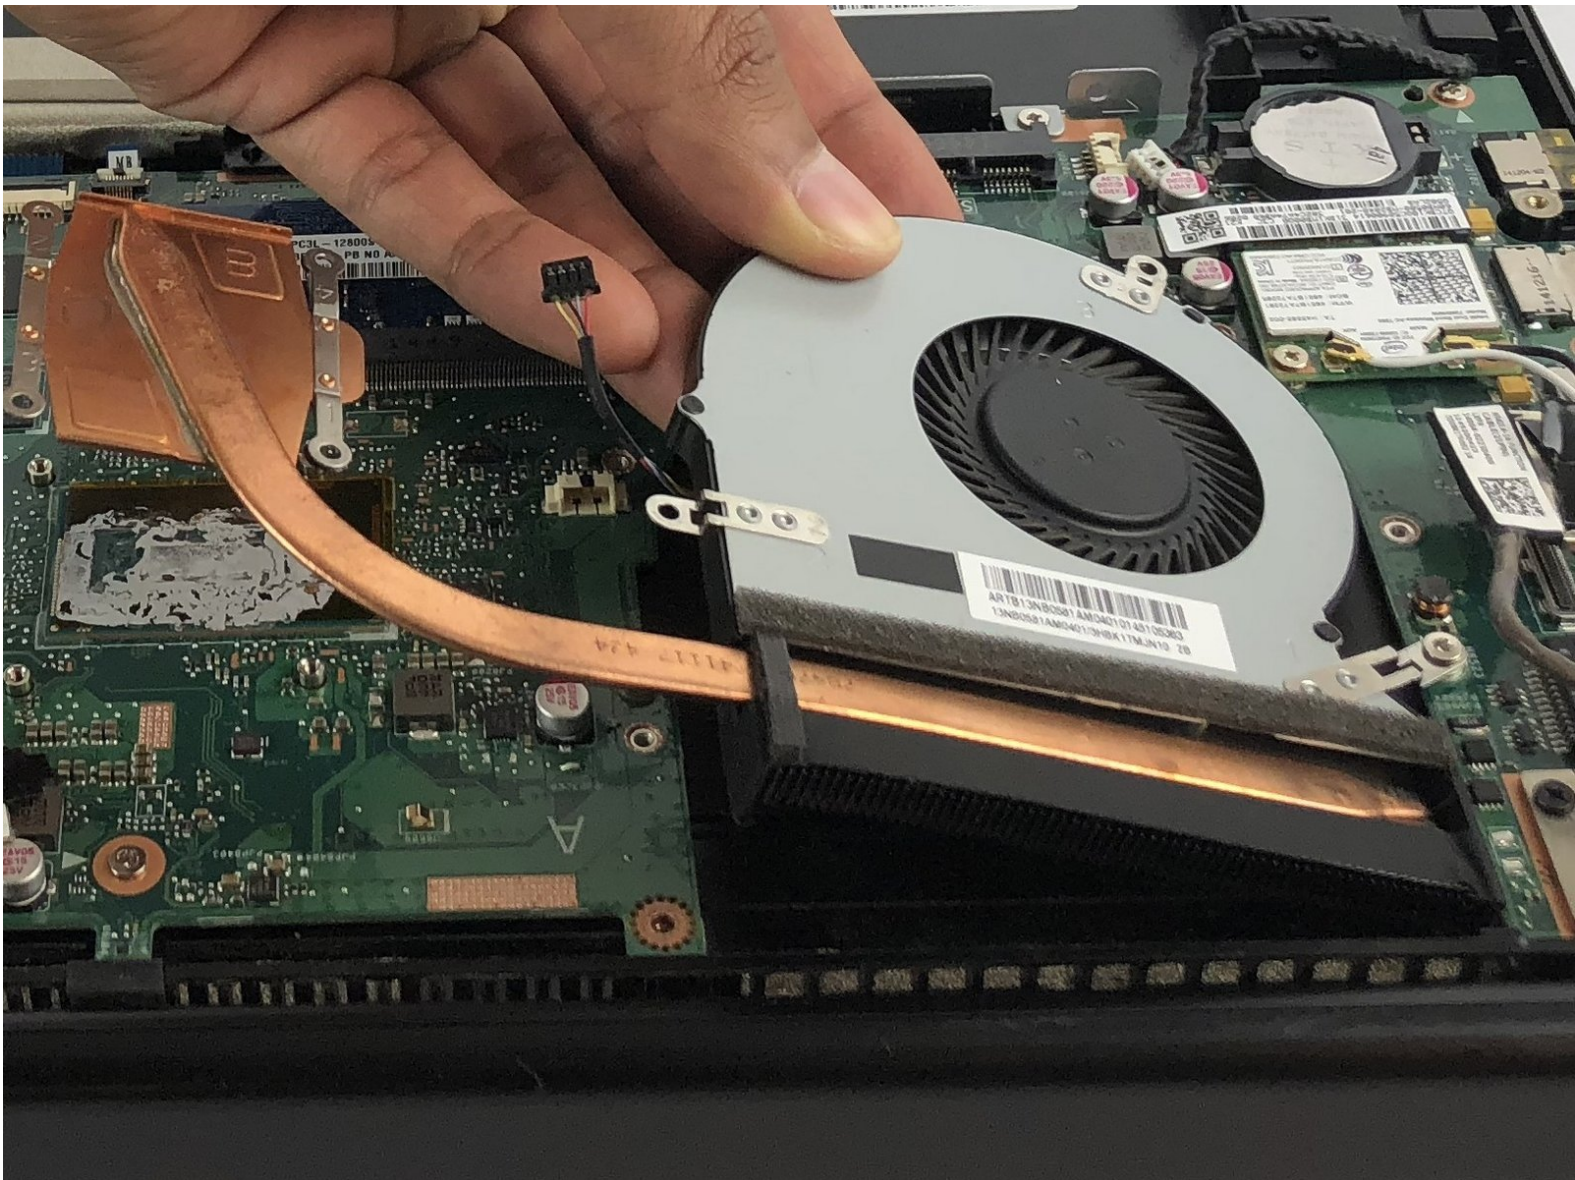

Asus Q502LA-BSI5T14 Fan Replacement

Replace a broken or noisy fan.

Written By: Mary Kounelas



INTRODUCTION

The fan is responsible for cooling your laptop and ensuring that it doesn't overheat. Use this guide to replace a broken fan.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Fan




- **i** Make sure your device is powered off before you begin.
- Flip the laptop over and remove the ten 11 mm Phillips #1 screws securing the back panel.

Step 2



- Carefully insert a plastic opening tool under one corner of the back panel.
- Slide the tool along the seam to gently pry the panel up and away from the device.

Step 3

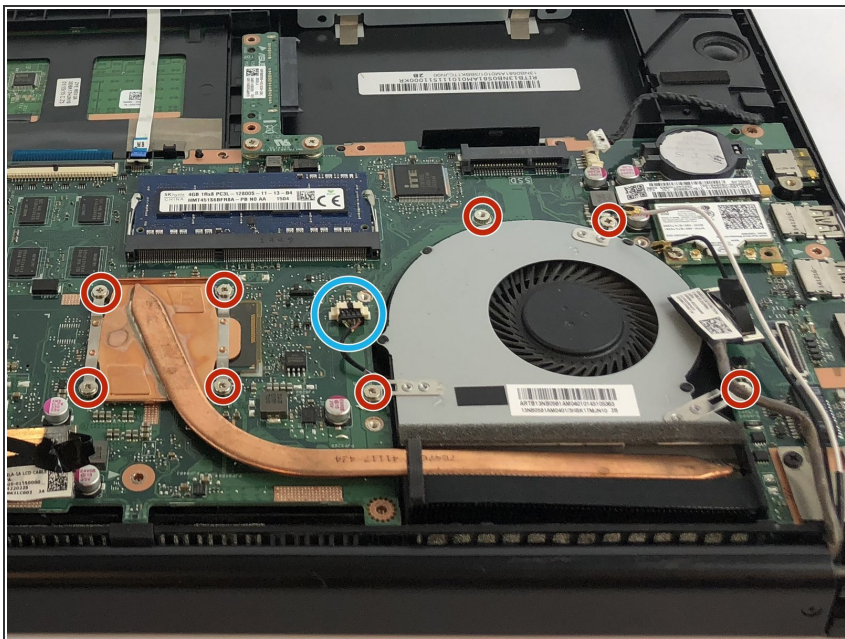

- Remove the eight 5 mm Phillips #1 screws securing the fan and copper piece to the motherboard.
- Remove the wires by gently pulling them out.

Step 4



- Gently lift the fan up and away from the laptop.

To reassemble your device, follow these instructions in reverse order.