



HP Pavilion 17-g119dx Battery Replacement

This guide will show you how to replace your HP Pavilion 17-g119dx Laptop battery in 4 simple steps.

Written By: Morgan Best



INTRODUCTION

In this repair guide, we will show you how to replace the battery in your HP Pavilion 17-g119dx Laptop. No tools are required. It should take about 1 minute to complete.

Step 1 — Battery




- Close your laptop and turn it over so that the bottom is facing up.

Step 2



- In the upper left hand corner, slide the bar with the lock icon to the right. This will unlock the battery.

Step 3

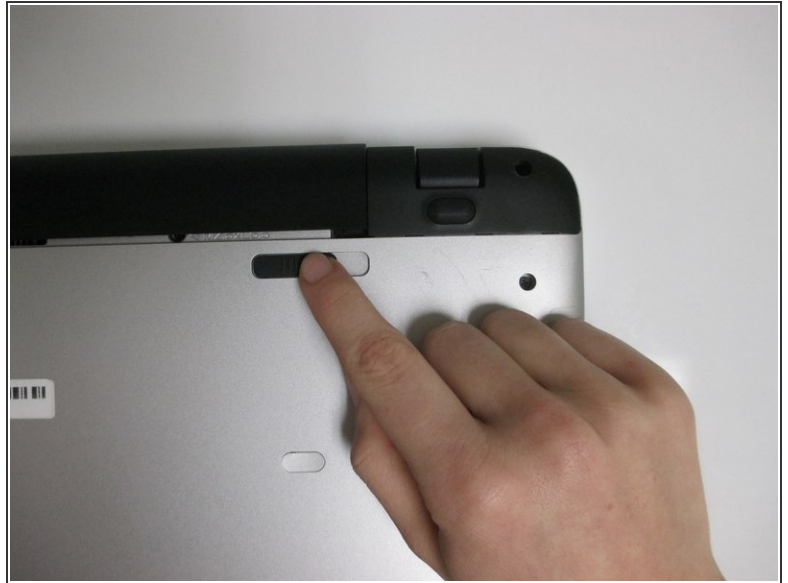

- Slide the bar with the battery icon, on the right of your laptop, to the left to release the battery.

Step 4



- Grab the battery and remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.