


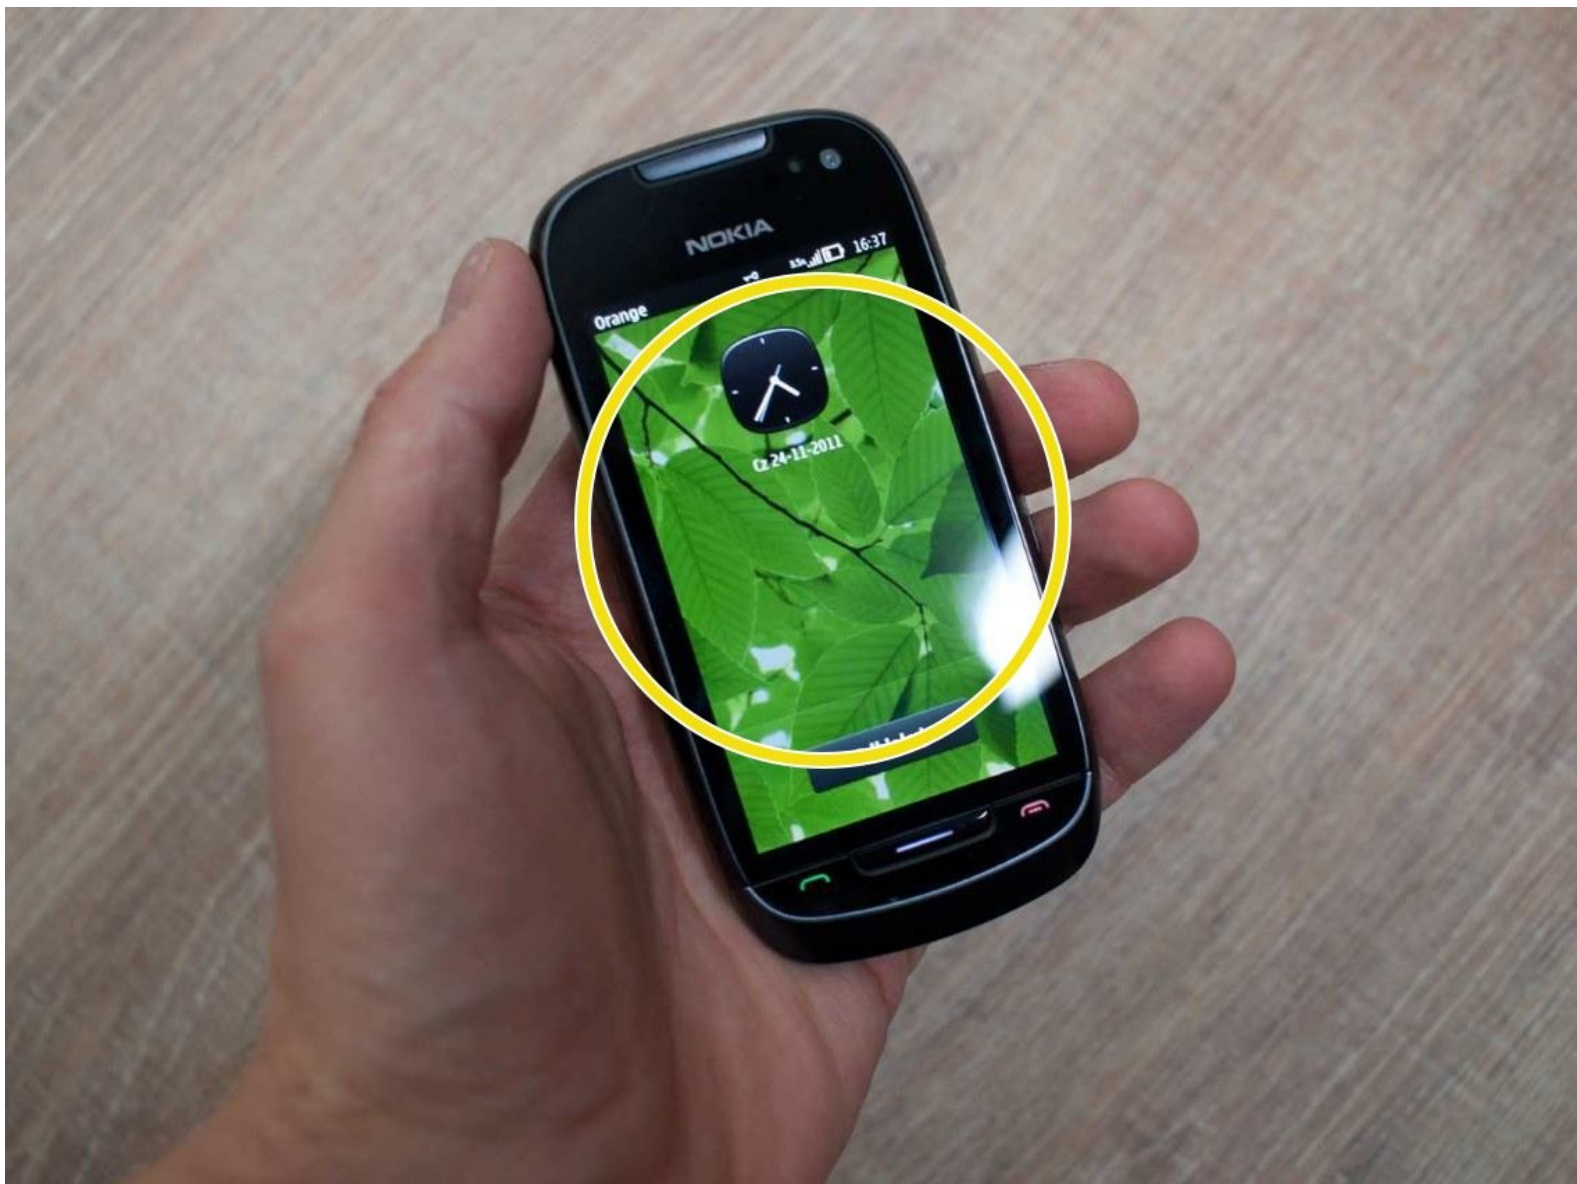

Nokia 701 Accelerometer Replacement

To fix the accelerometer watch the video carefully. This sensor is responsible for the screen rotation.

Written By: Alex Sander





TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Accelerometer



- To fix the accelerometer watch the video carefully. This sensor is responsible for the screen rotation.

To reassemble your device, follow these instructions in reverse order.