

# HP Split 13-r010dx Screen Replacement

This is a step by step guide to replace the screen of HP Split 13-r010dx

Written By: bushraishaq





- Tweezers (1)
- iFixit Opening Tools (1)
- 64 Bit Driver Kit (1)

## **Step 1** — Front and Back Panel





- Locate the four screws at the bottom of the device. (Note that the keyboard attachment is missing from this device.)
- Use a Philips head #0 screwdriver to remove each of the screws (Size: 4mm)

### Step 2






- Gently wedge the plastic opening tool in between where the display and back panel meet.
- Slowly and gently apply force to the plastic opening tool in a downwards motion to loosen the front panel from the back panel.
- Rotate the device so that the side is facing up and repeat the previous step for the sides.
- Do NOT attempt to wedge the plastic opening tool on the bottom. Once the sides and top are loose you are ready to continue to the next step.

#### Step 3



- Gently and slowly pull the front and back panel away from each other (in opposite directions). (Pulling them apart will not separate the two panels)
- Only separate the panels by a few inches from each other so that there is room to separate the front and back panel in the next step. Proceed to the next step.

#### Step 4

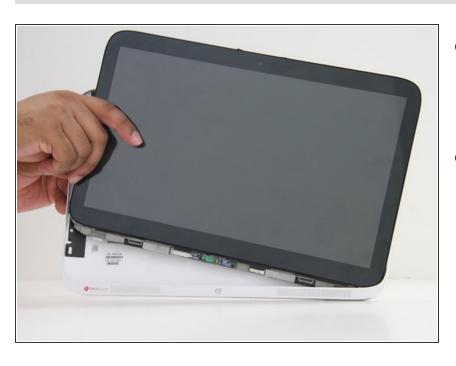

- Hold the back panel firmly and pull the front panel upwards to completely separate the front panel from the back panel.
- The device is now ready to be repaired or replacements installed.

# Step 5 — Screen







• Use the PH1 screwdriver to remove eleven 4mm Phillips screws.

# Step 6





 Unscrew the two 2mm zero insertion force connectors. Slide aside the white wires to properly unscrew.

#### Step 7








- Use a pair of tweezers to pull up the yellow colored display cable connector.
- Pull it to the direction of the cable.

#### Step 8

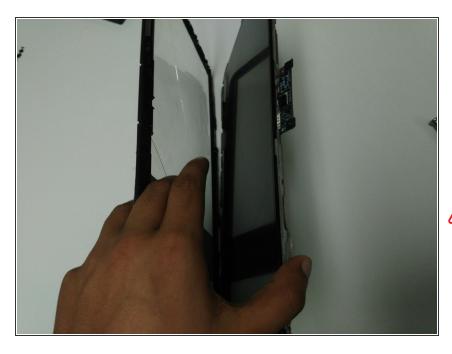

- Glue is attached at the edges. Apply force to the sides of the tablet.
  Separate the digitizer from the body of the tablet.
- Replace the old screen with a new one.
- If your screen is broken or damaged, use caution when pulling the screen from the tablet to avoid self harm.

To reassemble your device, follow these instructions in reverse order.