



IQ America VD-8810L Buttons Replacement

This guide will show users how to replace the keypad on the remote for the IQ AMERICA VD-8810L.

Written By: Jackey Lau



INTRODUCTION

If the keypad has stuck buttons or is unresponsive, you'll need to remove it and clean it or replace it entirely. Follow this guide to do so.



TOOLS:

- [TA20 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Buttons



- Remove the battery cover by pushing downwards and sliding the cover away from the device.

Step 2




- Use a TA20 screwdriver to remove the screw in the center of the battery slot.

Step 3



- Carefully wedge the flat metal spudger between the two sides of the remote until they separate. An intermediate amount of force will be needed to separate the pieces.

Step 4

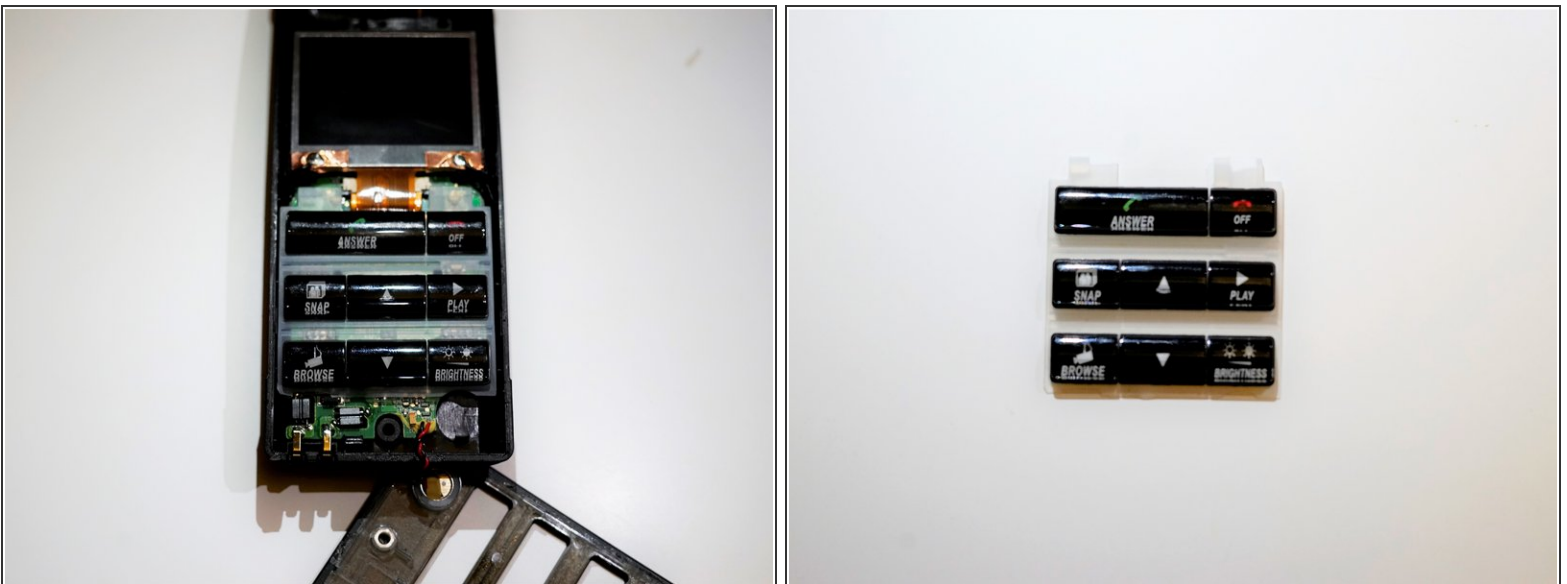

- Remove the buttons.

To reassemble your device, follow these instructions in reverse order.