


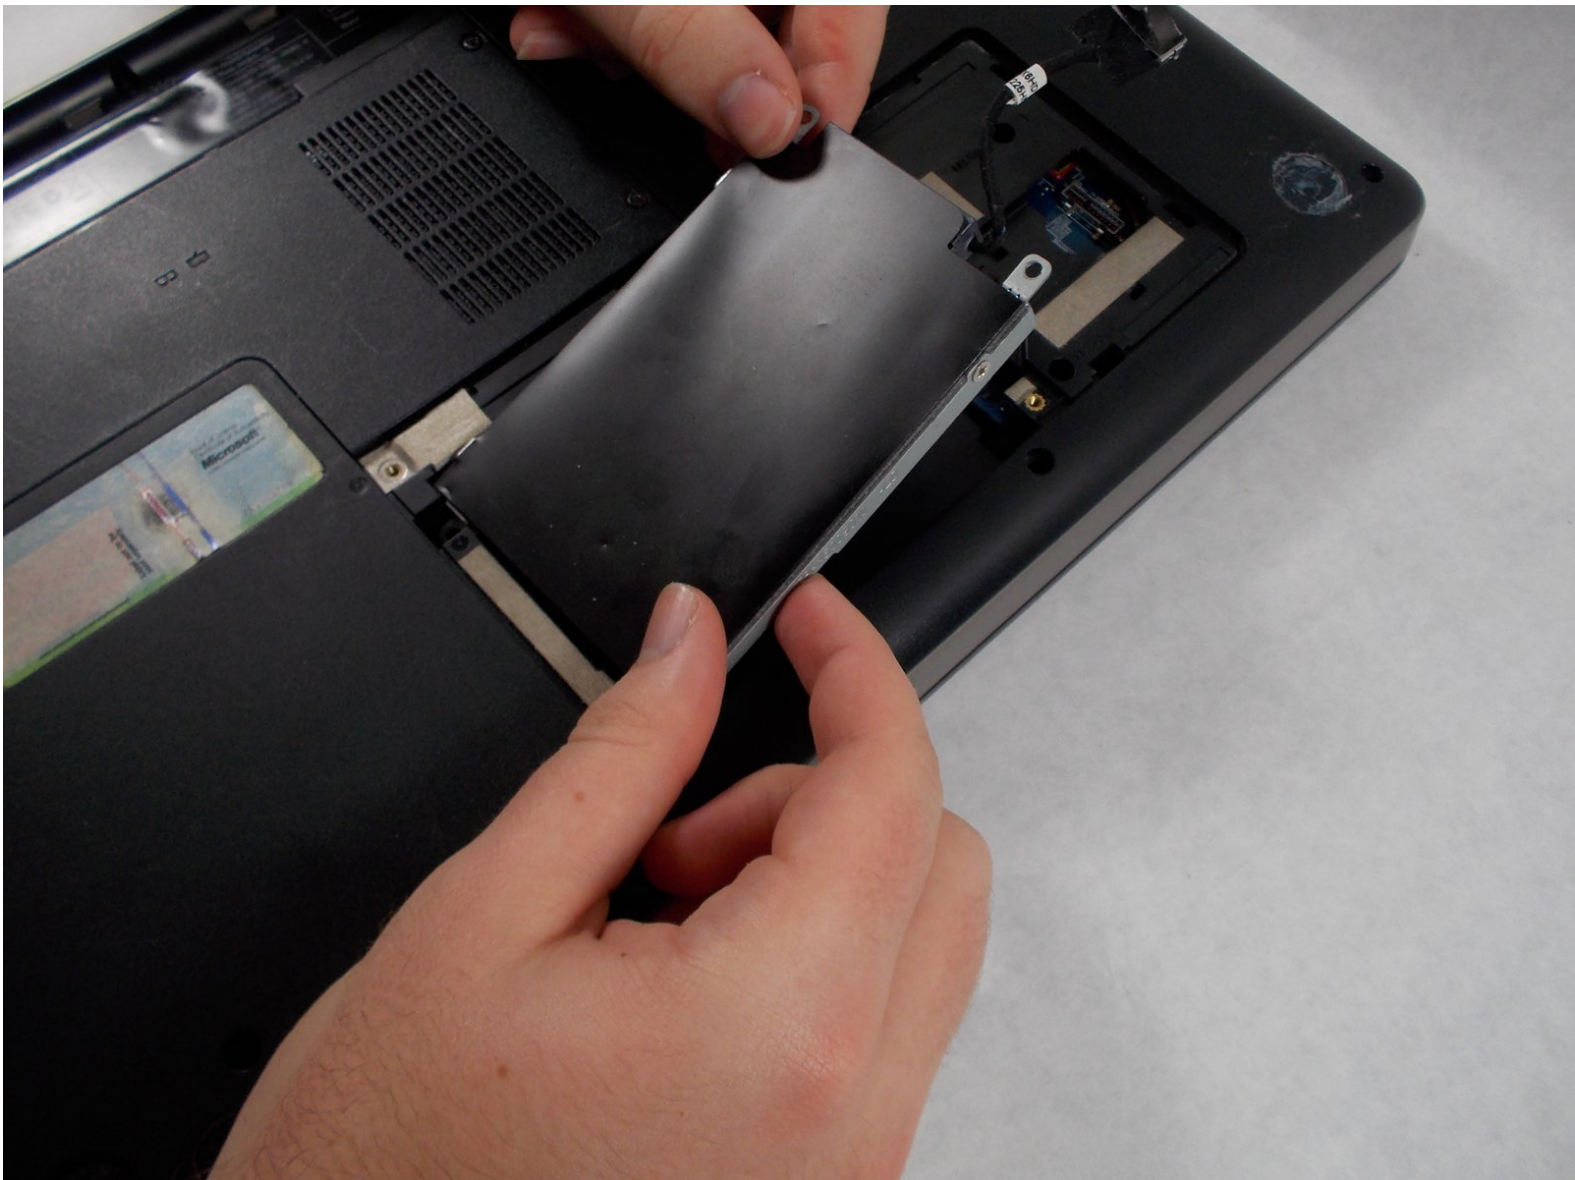

HP G62-144DX Hard Drive Replacement

This guide will show you how to replace the hard drive in the HP G62-144DX

Written By: Cameron Moran



INTRODUCTION

The hard drive is where all of the data on the computer is stored. Follow this guide to replace the hard drive in the HP G62-144DX



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



⚠ Make sure to turn off the laptop before removing the battery.


- Slide the lock to the right, located slightly above the battery location.
- While pulling the lock, pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

Step 2 — Hard Drive



- Loosen the 2 Phillips 2.5x6 screws in the rectangular panel with a Phillips #1 screwdriver.
- ⓘ The screws will stay in the panel, but come free from the body of the computer.
- Gently remove the panel with a plastic opening tool.

Step 3

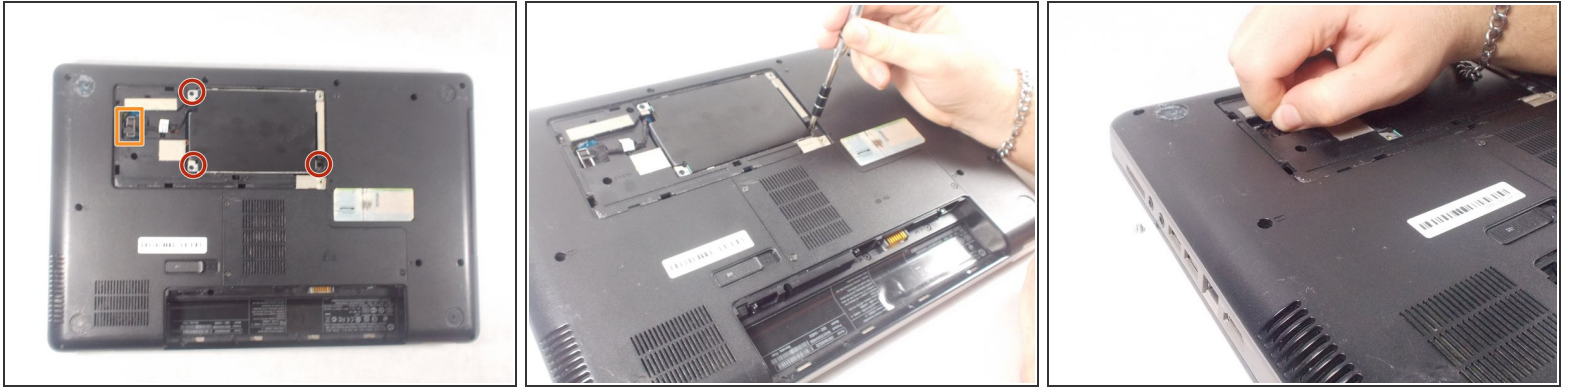

- Unscrew the three 3x4 Phillips screws holding the hard drive in with a Phillips #1 screwdriver.
- Pull the hard drive cable out of the motherboard.
- Pull the hard drive out of the computer.

To reassemble your device, follow these instructions in reverse order.