




Asus Q302UA-BHI5T20 Battery Replacement

How to remove the battery and replace it.

Written By: Dymon Alfred

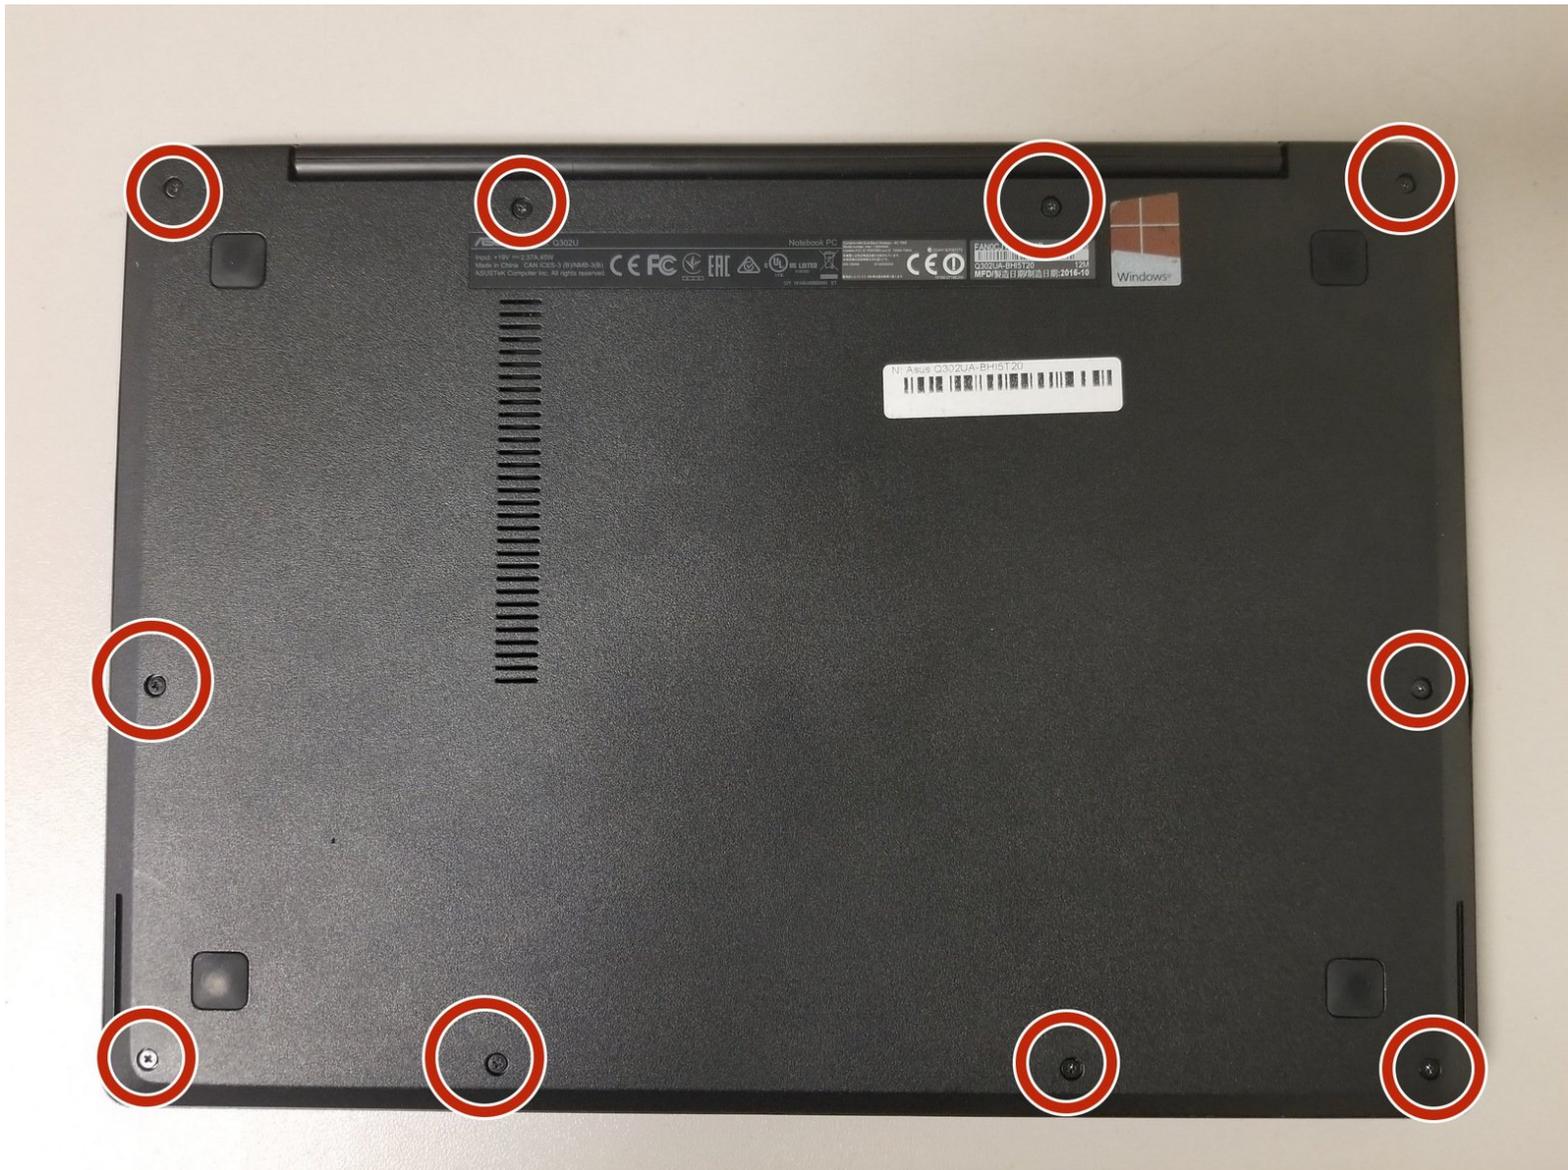

INTRODUCTION

How to remove the battery and replace it.

TOOLS:



- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Place laptop upside down
- Remove the cover by unscrewing the 10 screws highlighted in the picture
- Use PH0 bit to remove the 1cm black screws

Step 2

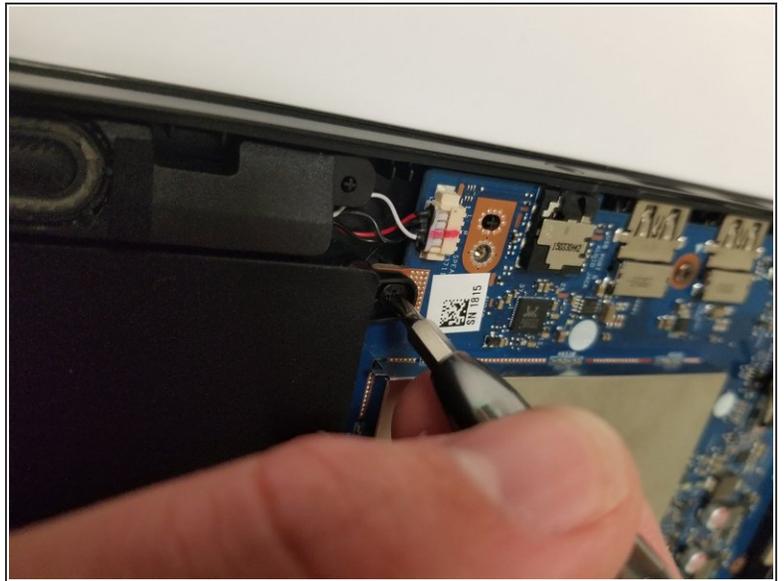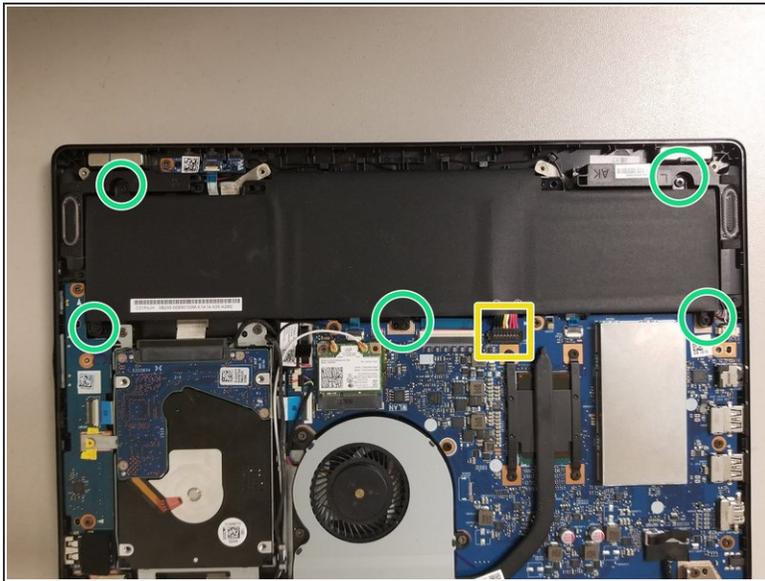

- Unscrew the 5, 5mm screws with the PH0 bit
- Lift up the battery connector, indicated in yellow
- Remove the battery by lifting it in upward motion pulling it towards

To reassemble your device, follow these instructions in reverse order.