


# Sony VAIO VGN-FW 590 Keyboard Replacement

This guide will show you how to replace the keyboard on your device.

Written By: Jennifer Pache

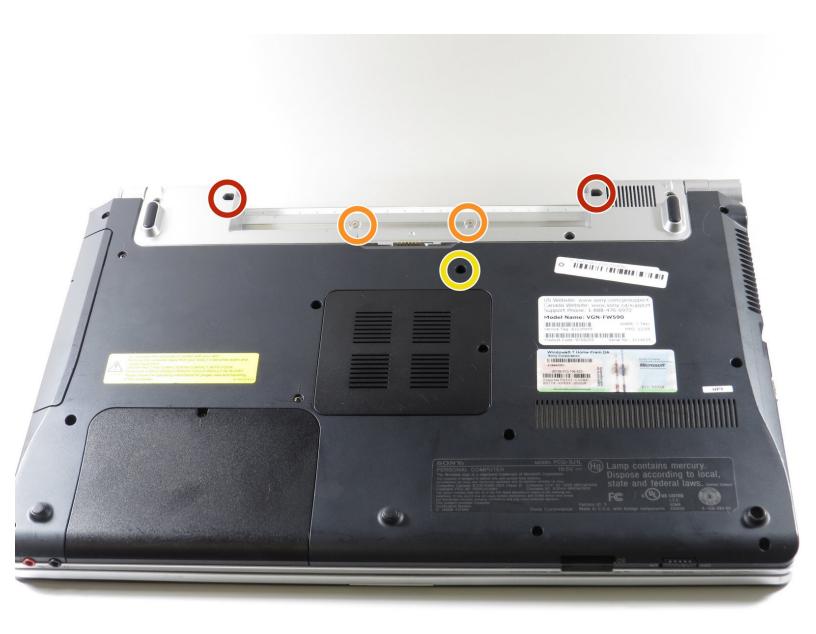

This document was generated on 2020-11-25 06:52:07 PM (MST).

#### **INTRODUCTION**

This guide is for users whose VAIO VGN-FW590 keyboard no longer functions. Before starting please be aware that keyboards warps easily during the removal/replacement process. If you wish to reuse/replace your keyboard be very careful and perform each step gently.



## **TOOLS:**

Phillips #0 Screwdriver (1)



#### **PARTS:**

 Vaio VGN-FW590 Replacement Keyboard (1)

#### Step 1 — Battery





- Turn the computer off, close the LCD screen, and insure the computer is unplugged from any outlet.
- Turn the computer over so that the bottom of the computer is facing up and the "screen swivels"
  (DC in port and On button) are facing away from you.
- Locate the battery pack between the two "screen swivels" at the top of the computer back.



- Locate two sliding release switches below the battery pack.
- Slide the "Lock" release to the right toward the center of the computer.
- Slide the "Release" switch to the left, toward the center of the computer. It must be held in place because it is spring loaded.





- While holding the "Release" switch toward the center of the computer, press on the raised portion of the battery pack away from you. The battery pack will pop up.
- Once the battery pack has popped out of its compartment, lift it out of the computer.

#### Step 4 — Keyboard



- Remove the circled screws using the Phillips #0 screwdriver.
  - The outer two screws are 7.7mm
  - The center two screws are 2.5mm
  - The bottom screw is 7.6mm



Open the computer

# Step 6



- Remove the audio panel above the keyboard.
  - Lift one corner gently with a flat tool or fingernail.
  - Pull the rest of the panel gently out by hand.




- Lift the keyboard gently, starting with one of the top corners.
  - Pull keyboard gently from body of computer to prevent warping or breakage.
  - Caution Do not remove completely.

#### Step 8





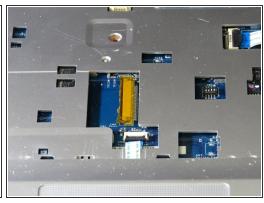

- Locate the connector ribbon behind the keyboard.
- Gently pull the ribbon from the locking device. It may take a few tries.
- **Caution** Do not tear the ribbon.

To reassemble your device, follow these instructions in reverse order.