

iPhone 8 Plus Display Assembly Replacement

Prerequisite-only guide for detaching the display assembly.

Written By: Jeff Suovanen



INTRODUCTION

Prerequisite-only guide for detaching the display assembly from the iPhone 8 Plus.



TOOLS:

- Spudger (1)
- Tri-point Y000 Screwdriver (1)
- Tweezers (1)



PARTS:


• iPhone 8 Plus Screen (1)

Step 1 — Display Assembly




- Use the tip of a spudger or a fingernail to disconnect the large lower display connector by prying it straight up from its socket.
- To re-attach press connectors like this one, press down on one side until it clicks into place, then repeat on the other side. Do not press down on the middle. If the connector is even slightly misaligned, the connector can bend, causing permanent damage.


Step 2

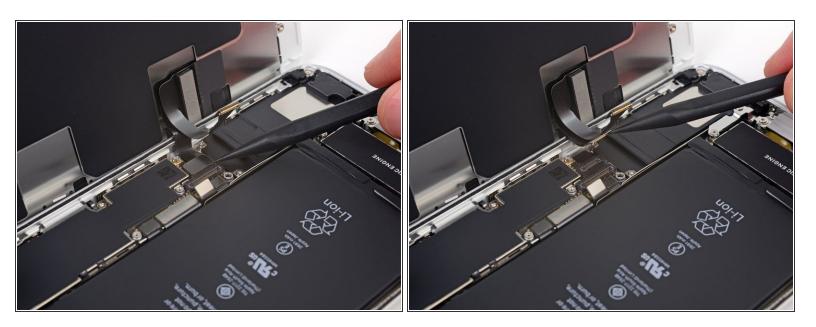

 Disconnect the second lower display cable connector, directly behind the one you disconnected in the previous step.

Step 3

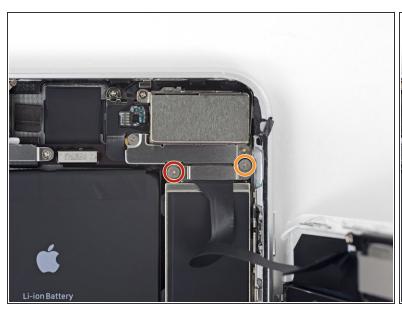

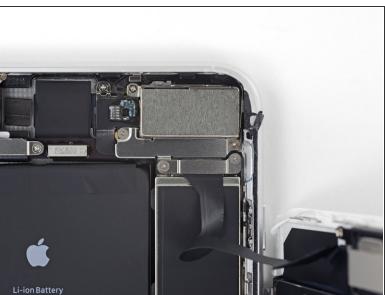

- Remove the two tri-point Y000 screws securing the bracket over the front panel sensor assembly connector:
 - One 1.0 mm screw
 - One 1.2 mm screw

Step 4



 Remove the bracket covering the front panel sensor assembly connector.

This document was generated on 2020-11-28 06:20:48 AM (MST).

Step 5



 Use the tip of a spudger or a fingernail to disconnect the front panel sensor assembly connector from its socket.

Step 6



- Remove the display assembly.
- During reassembly, pause here if you wish to replace the adhesive around the edges of the display.

To reassemble your device, follow these instructions in reverse order.