



# Lenovo A7-50 A3500 Battery Replacement

Written By: Stefan K



## TOOLS:


small cross screw driver, plastic opening tool (1)

### Step 1 — Battery



- Remove SD and SIM card from device


### Step 2

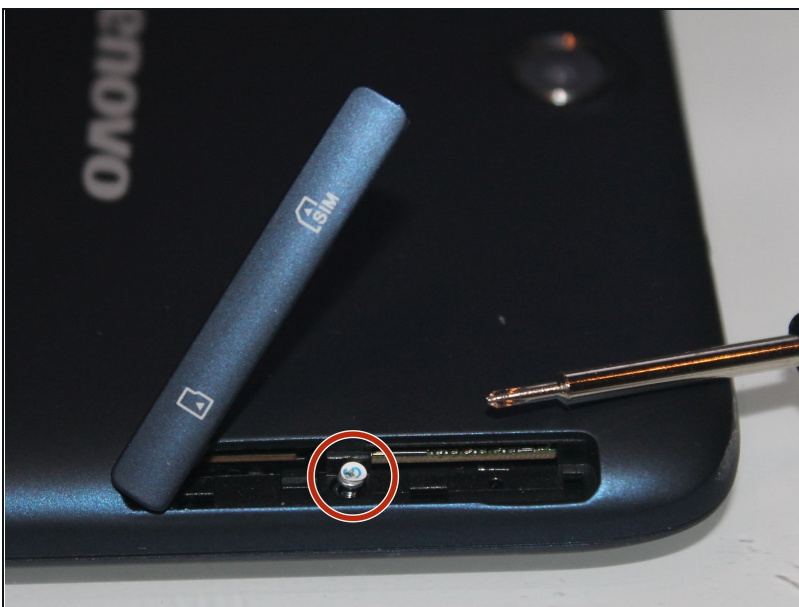

- Remove screw with a simple cross screwdriver




### Step 3

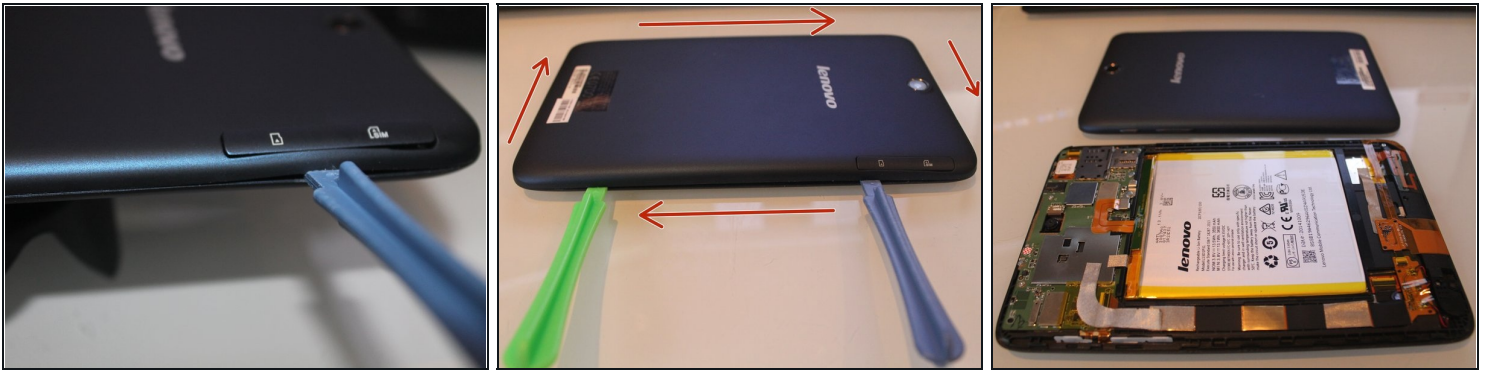


- Remove cover. Starting from the point where you removed the screw.
- Disassemble cover clockwise.

### Step 4

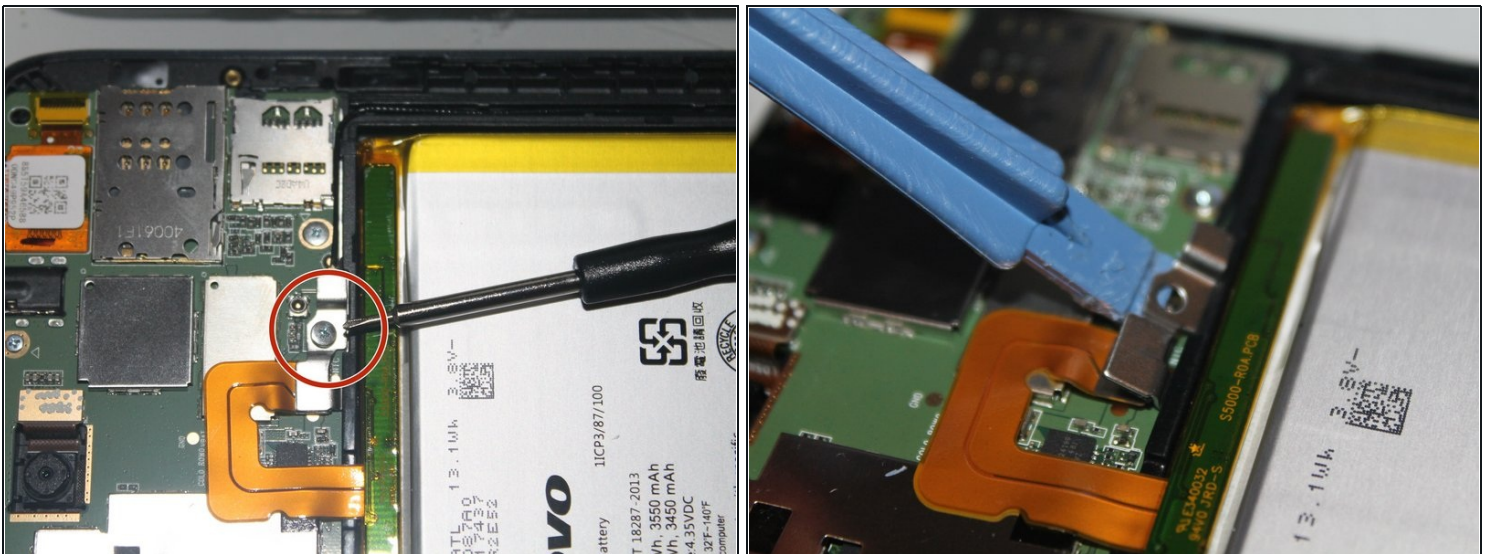

- Remove screw with simple screw driver
- Remove metal holder as shown in picture

## Step 5

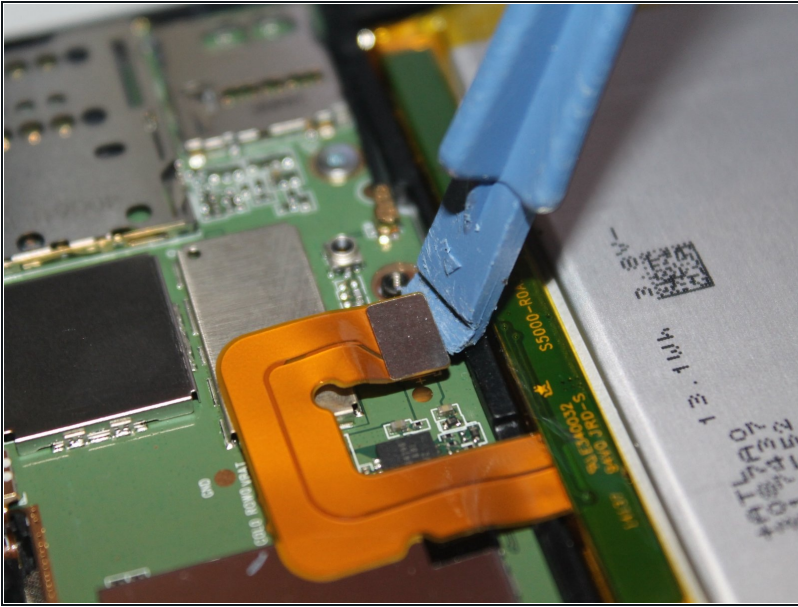

- Remove connection cable as shown.

## Step 6



- Disassemble battery pack. This might require a bit of pressure as it is glued

To reassemble your device, follow these instructions in reverse order.