




HUAWEI HONOR 5X Front And Back Camera Replacement

If the camera has been cracked or shows blurry...

Written By: Klara Asllani

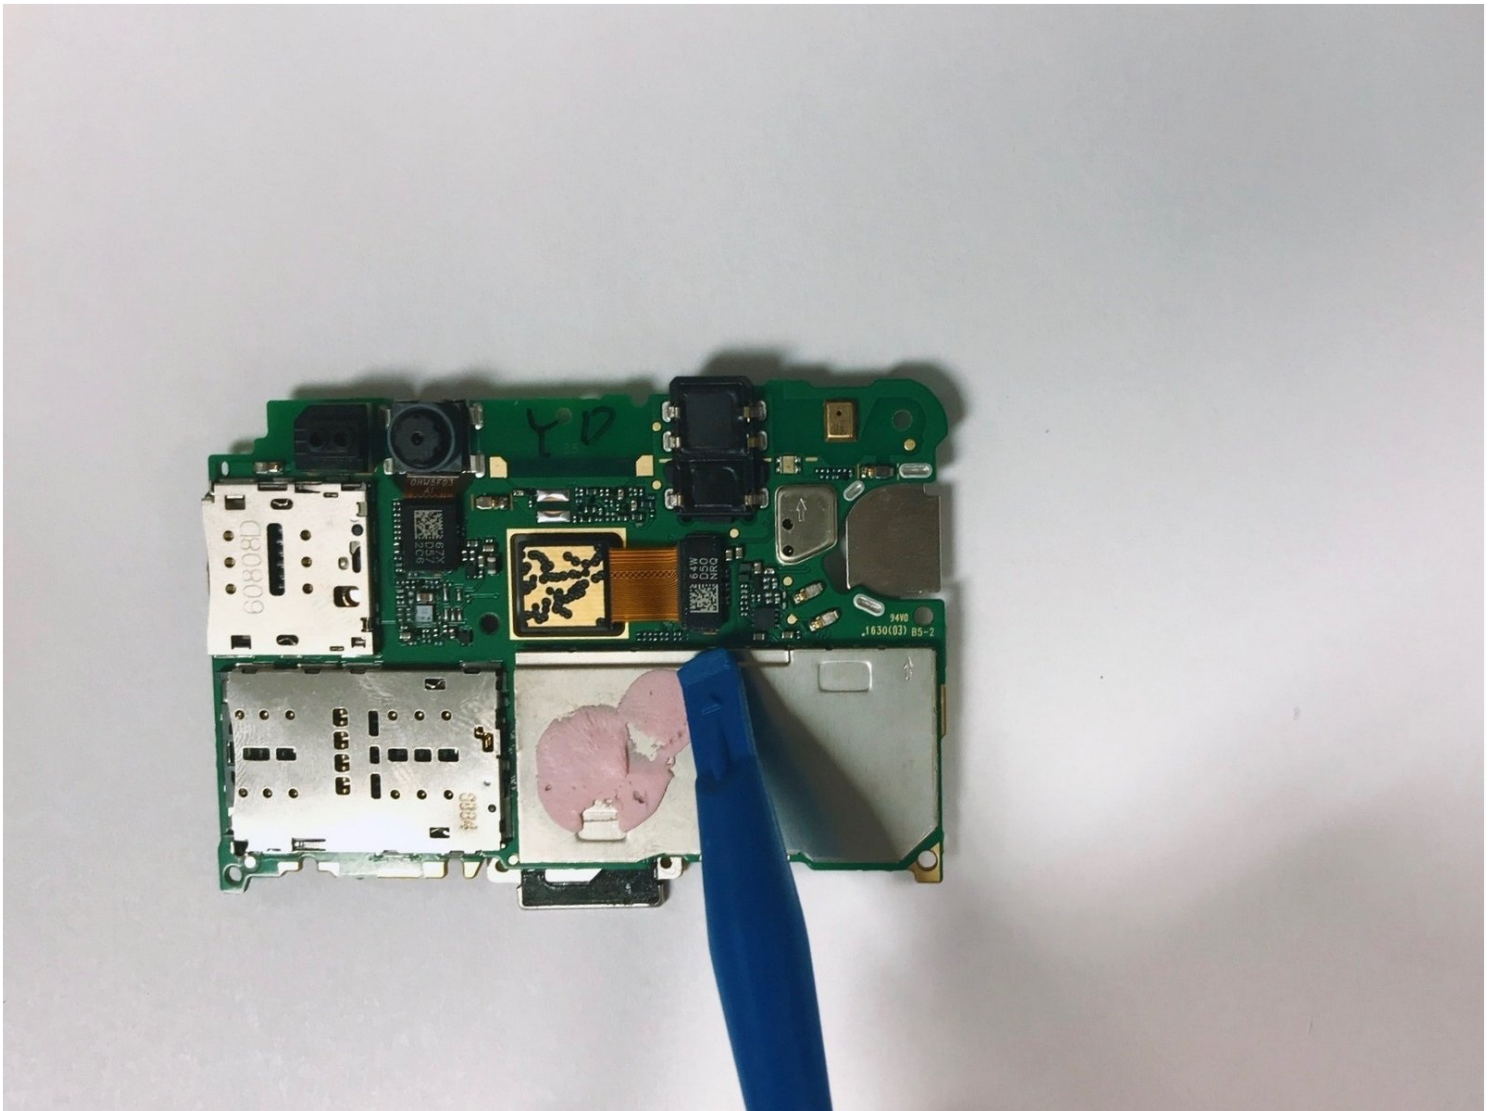

INTRODUCTION

If the camera has been cracked or shows blurry pictures, it may need to be replaced.

TOOLS:

[Phillips #000 Screwdriver](#) (1)

[T3 Torx Screwdriver](#) (1)

[iOpener](#) (1)

[SIM Card Eject Tool](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

Step 4





- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

Step 5





- Pry off the back with a plastic opening tool.

Step 6 — Motherboard

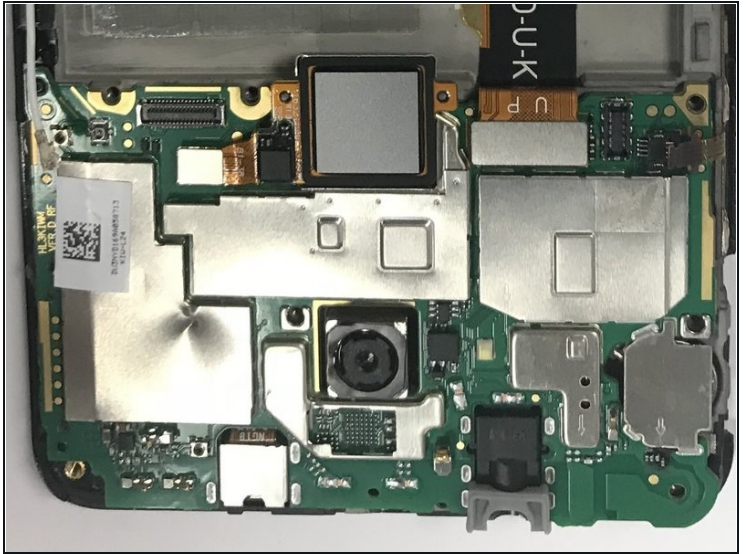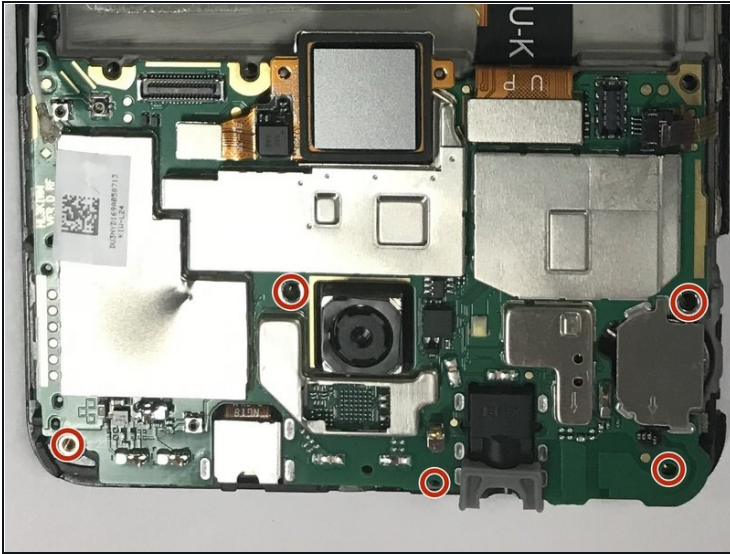



- Remove the five 1.5mm Phillips #000 screws from the motherboard.

Step 7

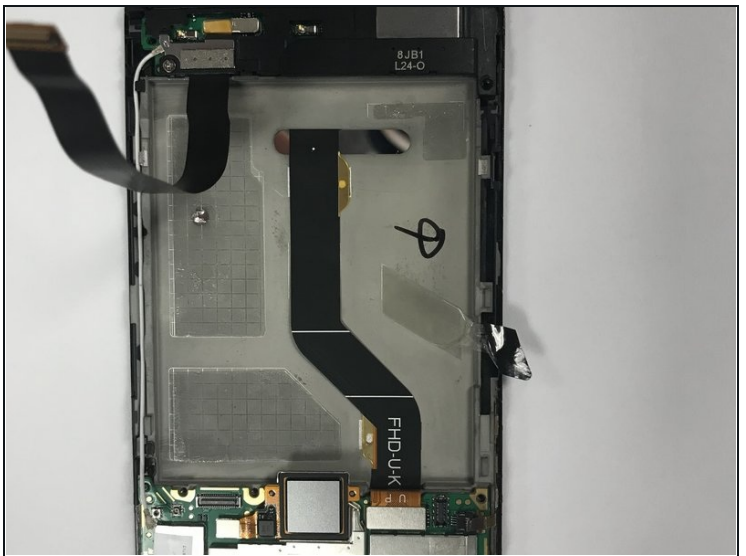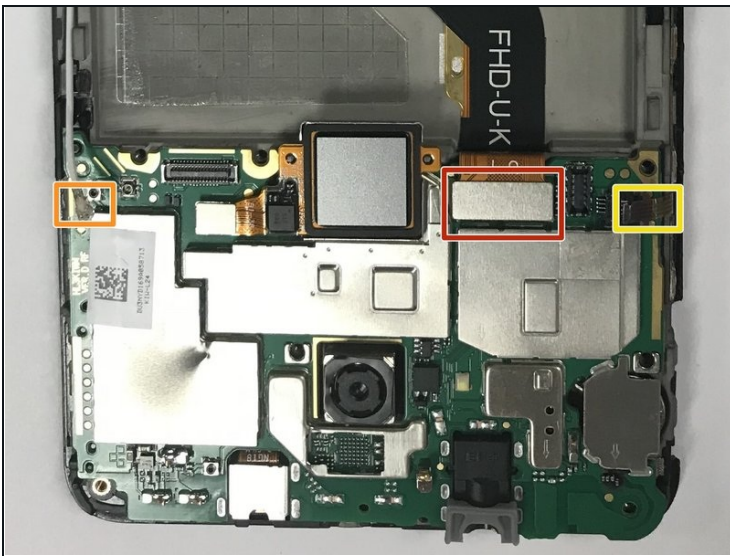


- Use a plastic opening tool to pry up and disconnect the display cable from the motherboard.
- Use [tweezers](#) to disconnect the white coax cable.
- Use tweezers to disconnect the power and volume cable.

Step 8

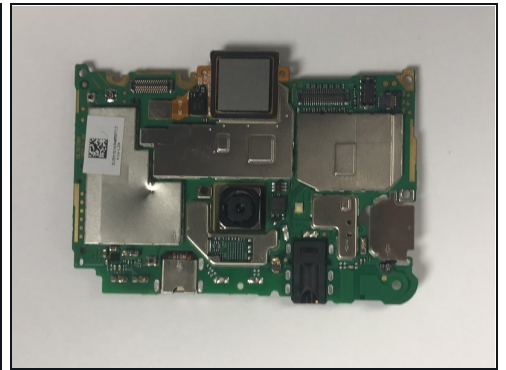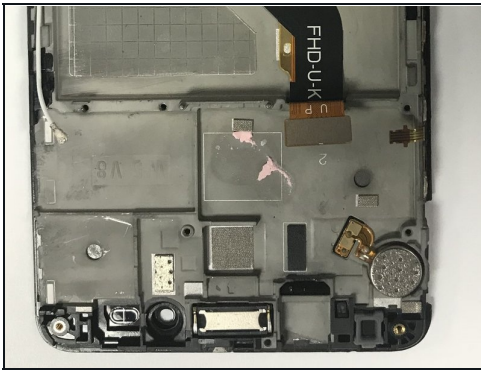


- Remove the motherboard.

Step 9 — Front And Back Camera

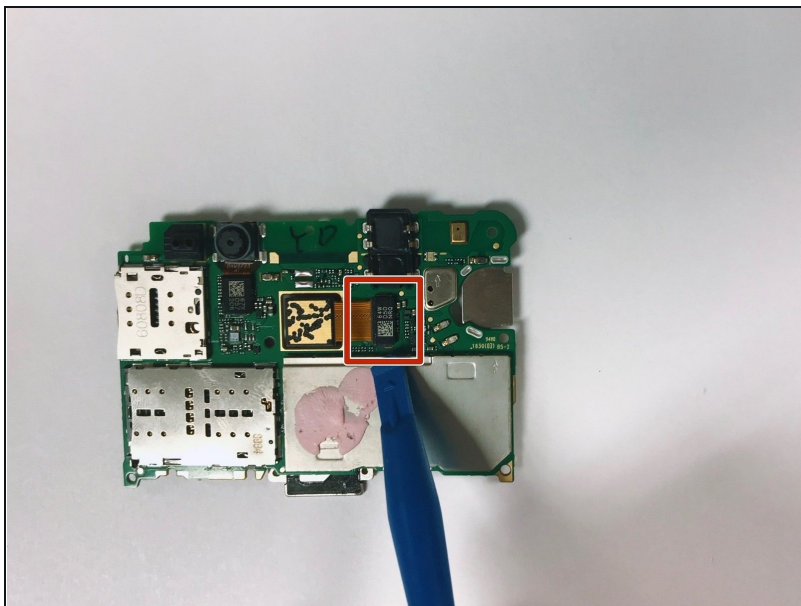

- Use a plastic opening tool to pry up and disconnect the camera from the motherboard.

Step 10

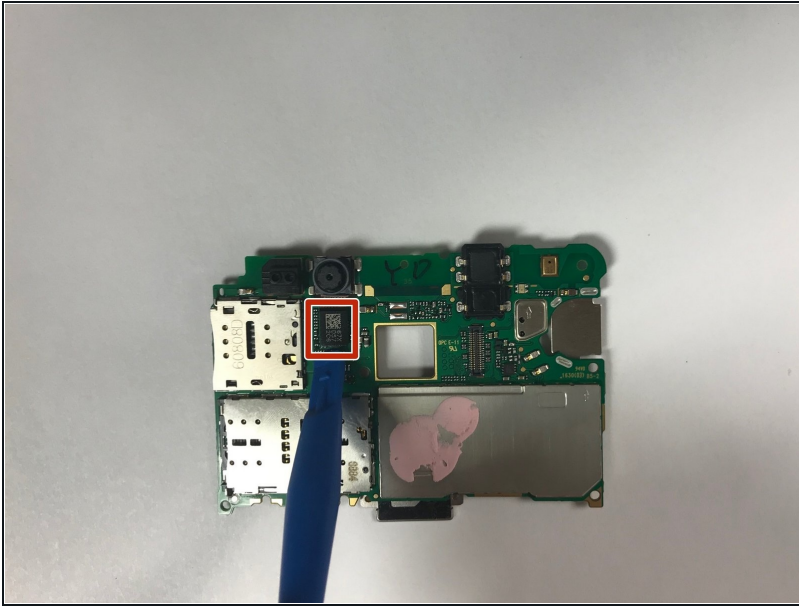

- Use a plastic opening tool to pry the front camera connector from its socket on the motherboard.

To reassemble your device, follow these instructions in reverse order.