

How to dismantle a Sennheiser CC 520 headset

How to open a Sennheiser CC 520 with the goal of redoing the welds of HP.

Written By: testcibles22



INTRODUCTION

To disassemble the headset, remove the small cap to access the Phillips screw.

TOOLS:

1

• Tournevis Cruciforme PH1 (1)

Step 1 — How to dismantle a Sennheiser CC 520 headset



• The headset no longer works.

Step 2




 Carefully remove the plastic cap using a flat screwdriver or a thin spudger.

Step 3




• Unscrew the central screw.

Step 4

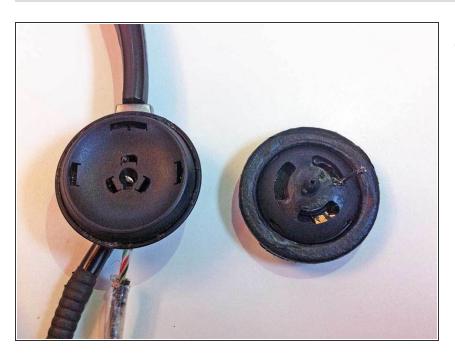

• Unlink the speaker from the earcups.

Step 5

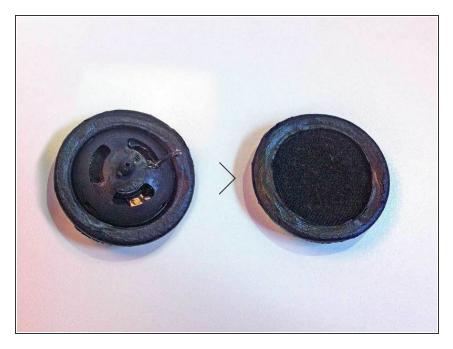

• Remove the protection for the ears.

Step 6



• Carefully remove the plastic cover with a flat screwdriver.

Step 7



 Redo the welds and reassemble the headset.

To reassemble your device, follow the instructions in reverse order.