



Dell mouse MOC5UO and M0C5U0 Teardown

For example to clean the inside of the mouse.

Written By: David D.





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Dell mouse MOC5U0 and M0C5U0 Teardown



- Bottom references.

Step 2




- First remove the screw.

Step 3




- Now put the mouse this way.

Step 4

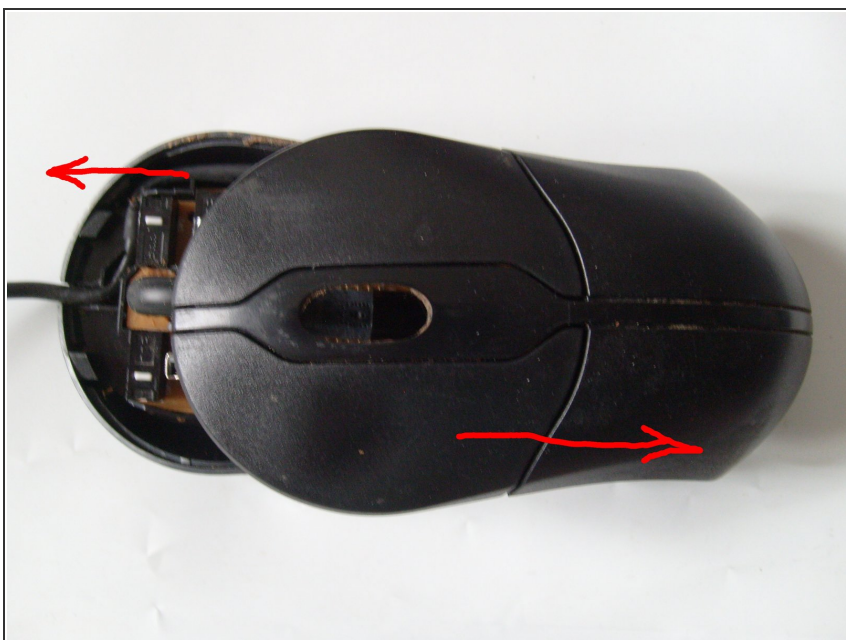


- Push the top part to the right, and the bottom part to the left.

Step 5

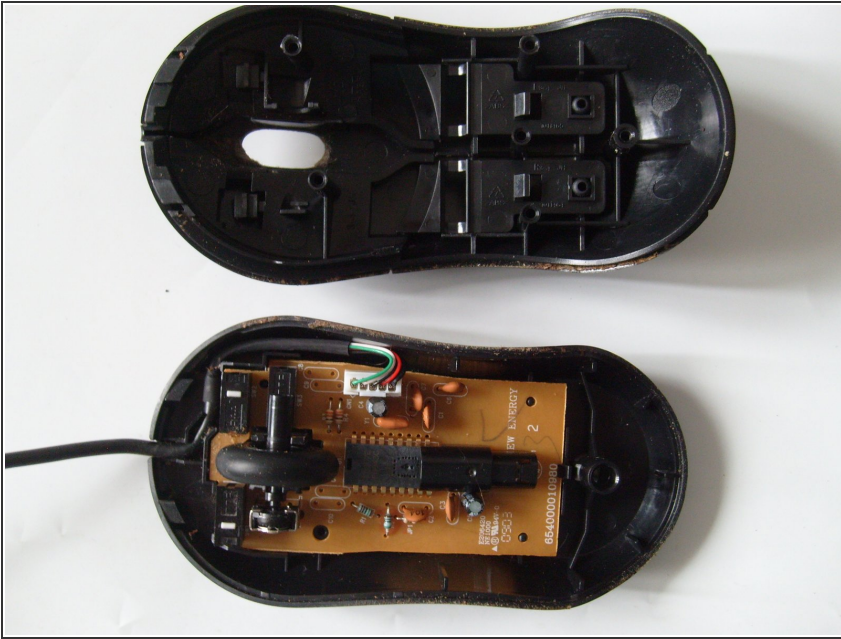

- This is the mouse disassembled.

Step 6

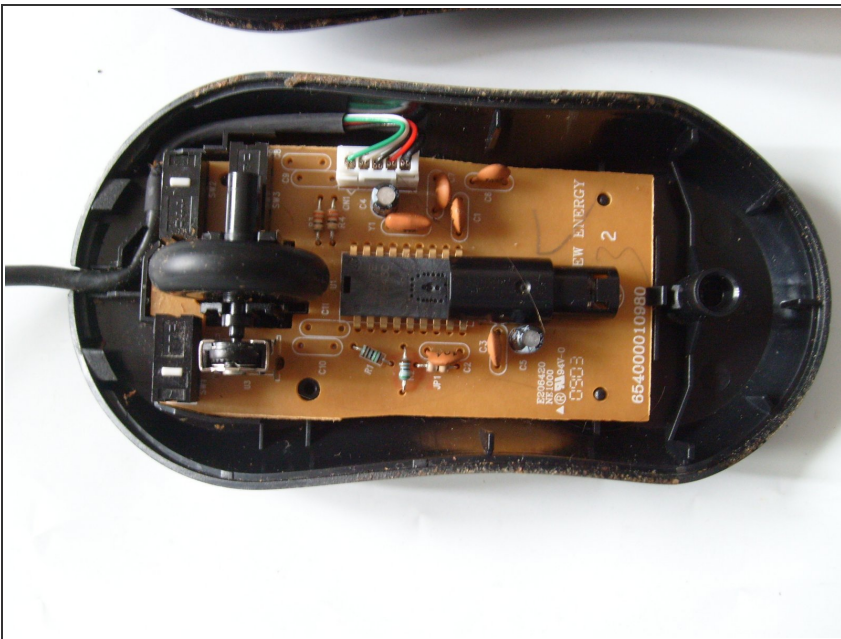

- A photo zoom to the electronic board.