


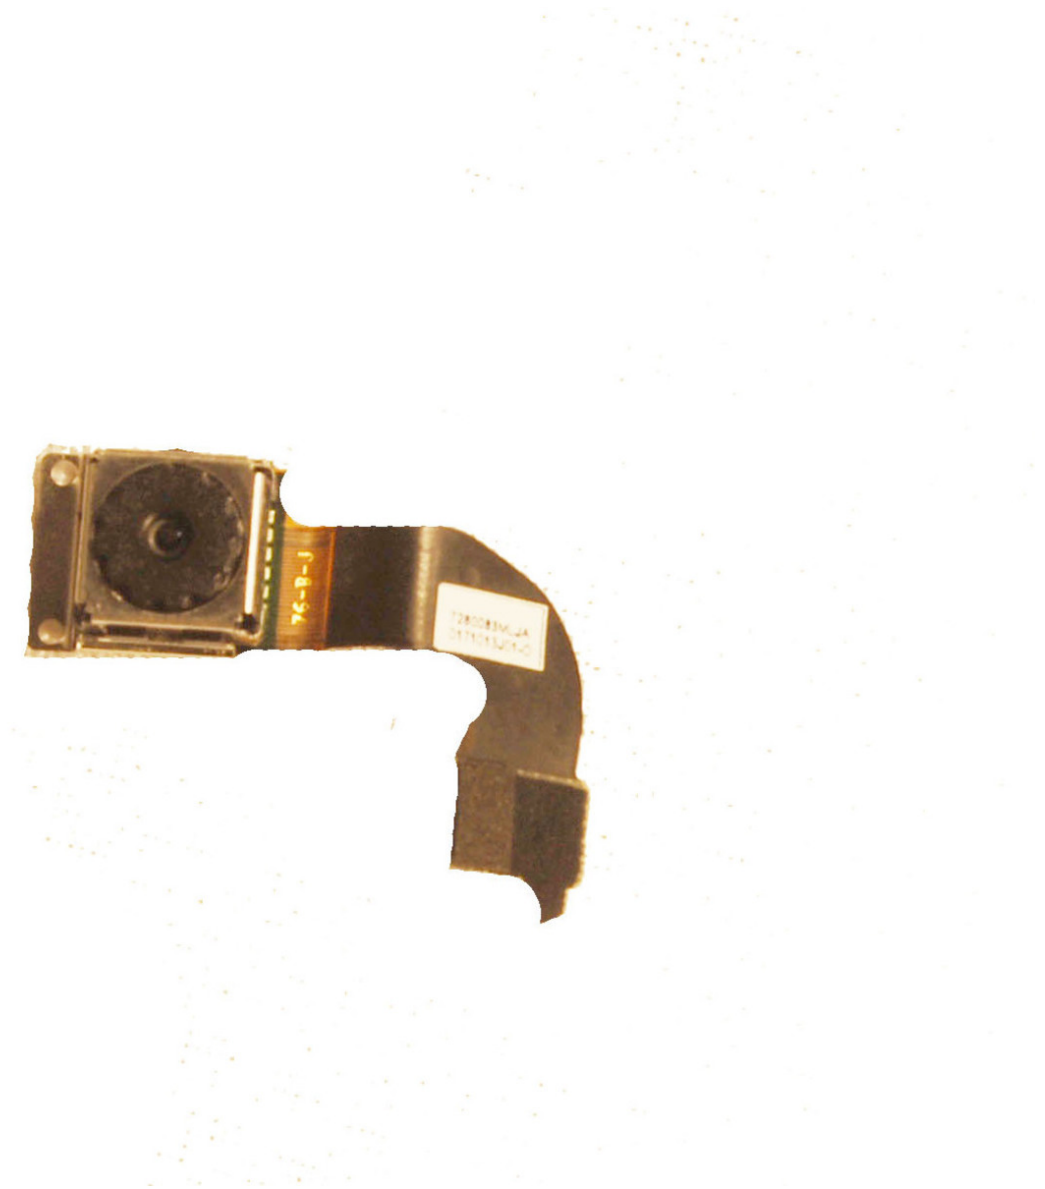

Written By: Will Edwards







## TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



## Step 1 — Camera



- Open the phone so that the keypad and screen are facing up.

## Step 2



- Use the blue plastic opening tool to pry off all four of the rubber stickers from the upper inside face.




## Step 3



- Use the Torx T5 screw driver head to remove the four 5.4 mm screws from the upper inner face.



## Step 4

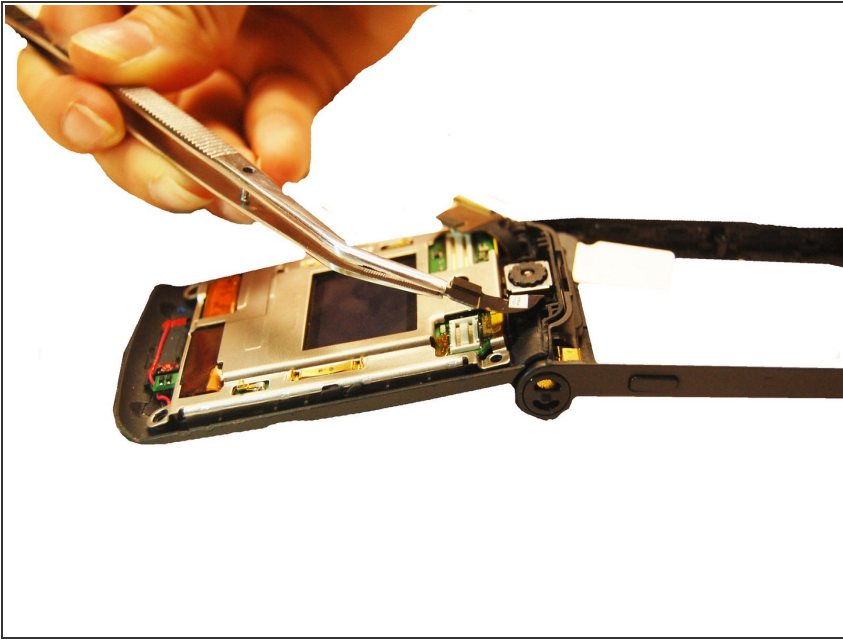

- Once the screws and upper casing have been removed, locate where the camera attaches to the upper circuit board and detach it using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.