


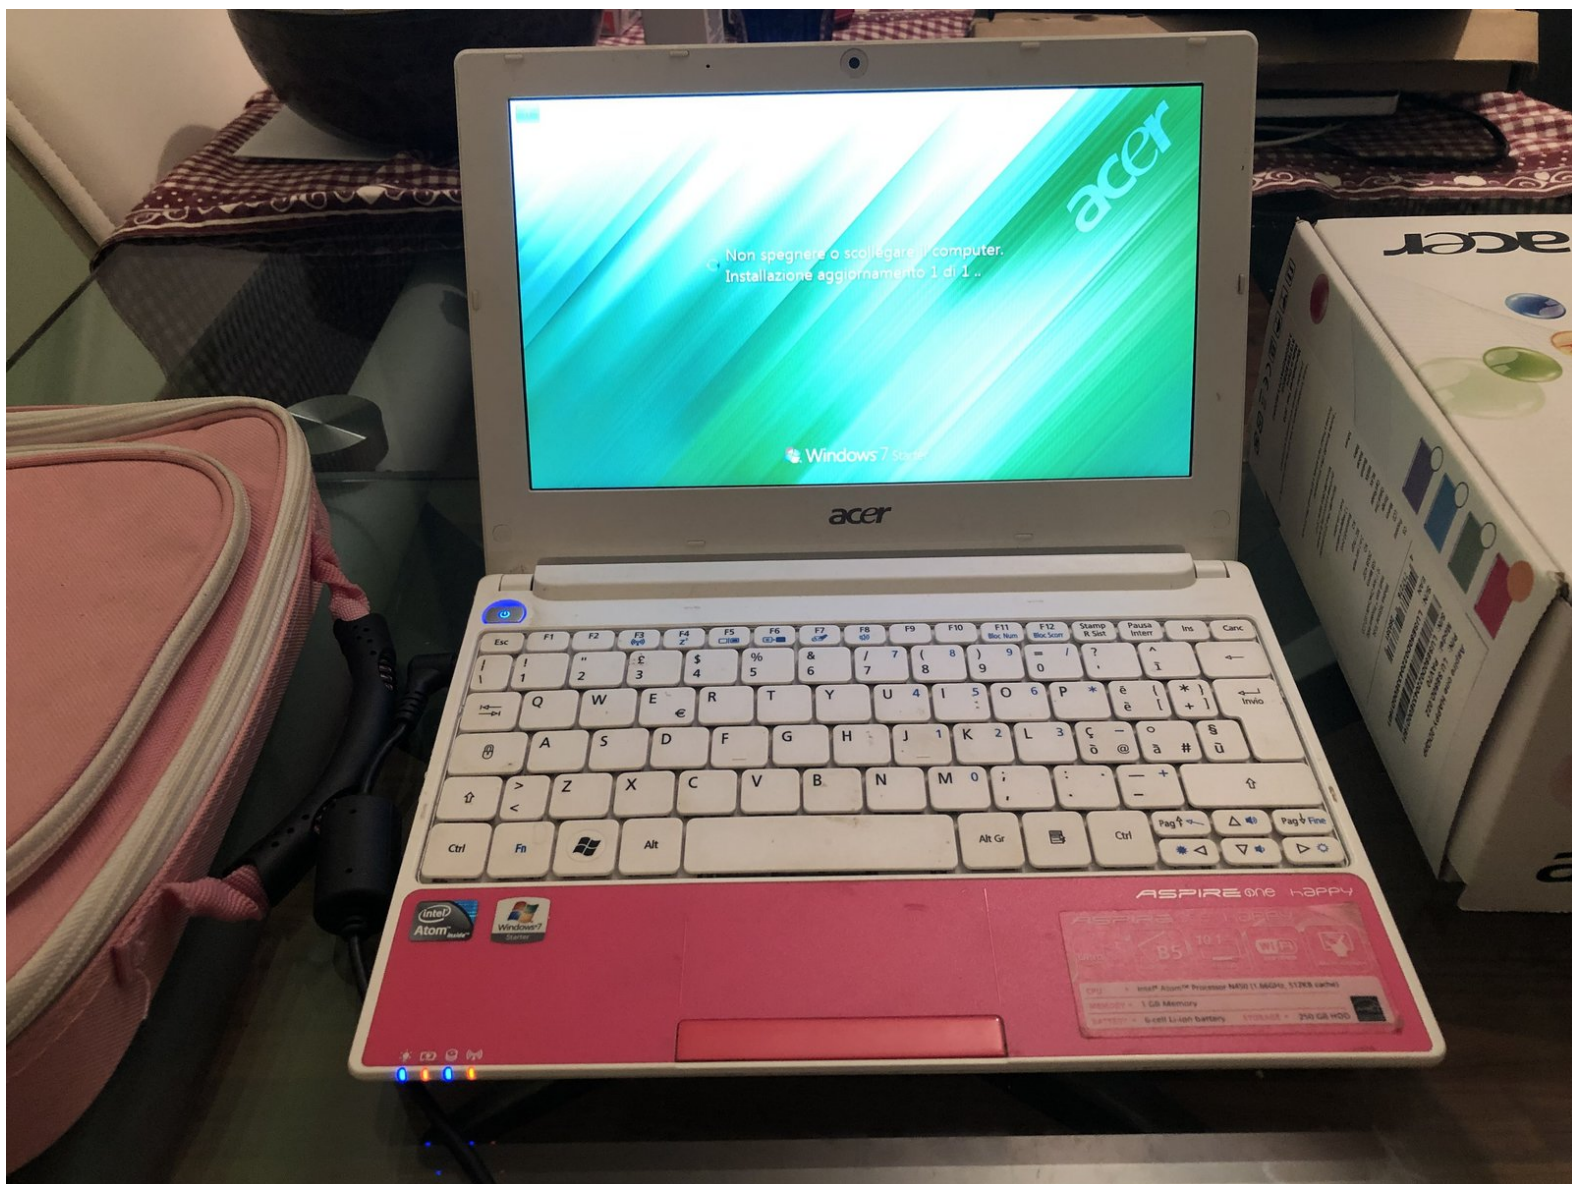

Acer Aspire One Happy Display Replacement

This guide will help you replace the display to...


Written By: Smilzo



INTRODUCTION

This guide will help you replace the display to a Acer Aspire One Happy Display

Step 1 — Display

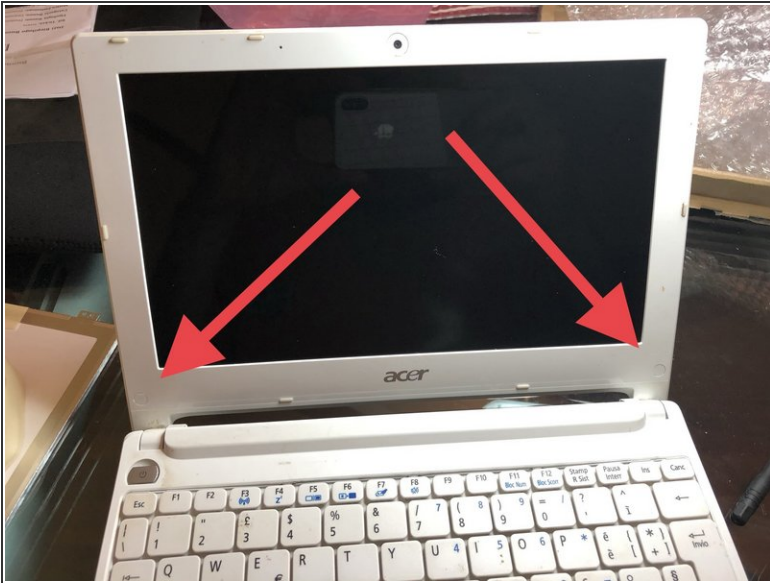


- Remove the adhesive pads that covers 2 screws
- Remove the screws that hold the front bezel to the back shell

Step 2




- Remove the battery by pulling it out.

Step 3

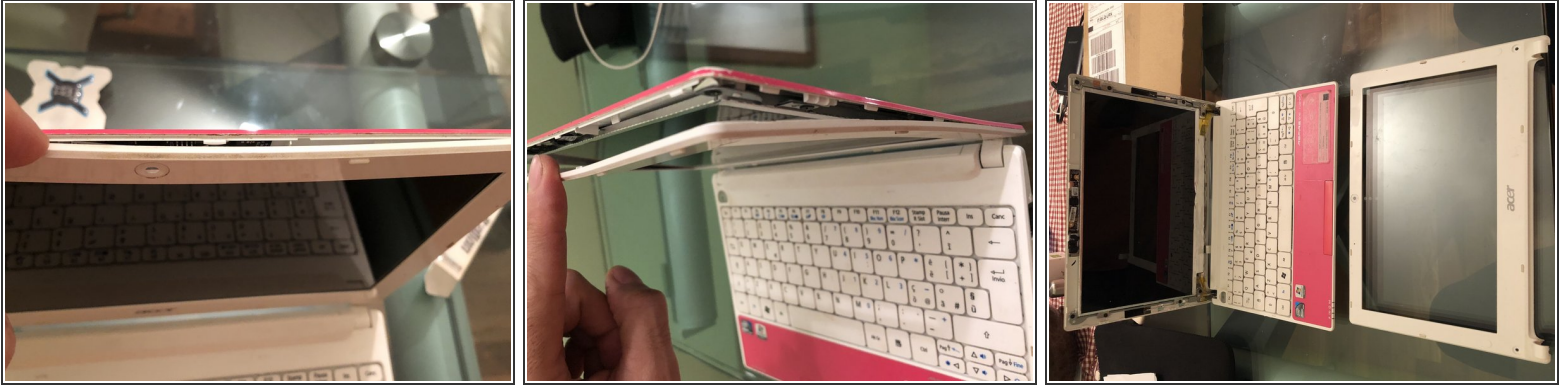

- Using a thin tool , unclip the front bezel from the back shell, along side the perimeter. It holds by pressure clips that release upon touch.
- Remove the bezel

Step 4

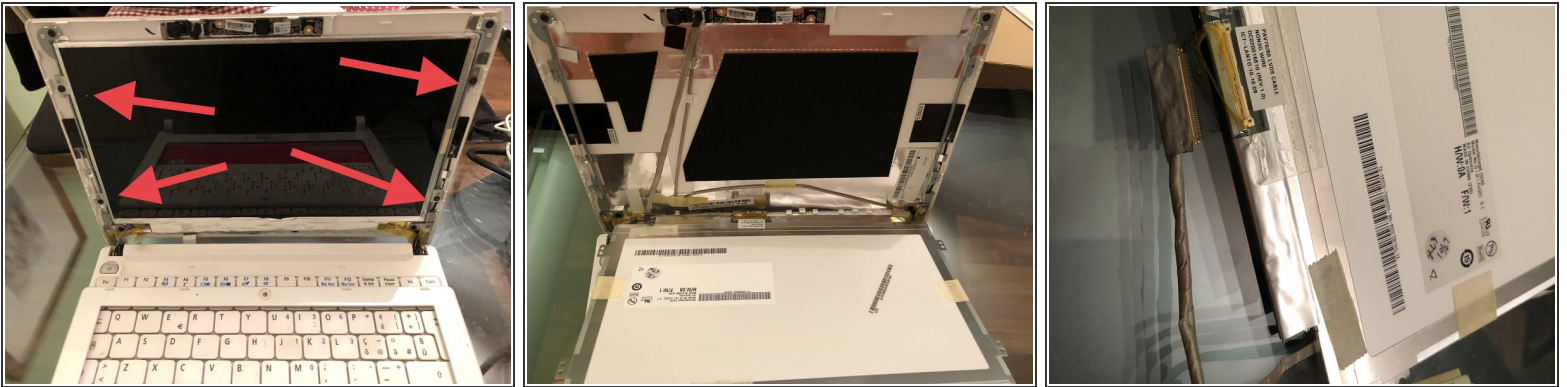

- Remove the 4 screws that secure the LCD panel from the back shell
- Place gently the display on the keyboard, minding any of the cables that may still be connected and the adhesive tape
- Disconnect all of the cables and remove the Display

To re-assemble your device, follow these steps in reverse order.