



Acer Aspire S3 MS2346 Speakers Replacement

Replacement guide for the speakers of an Acer Aspire S3 laptop.

Written By: Nikolas I Steckley




INTRODUCTION

This guide will walk you through removing the speakers. The speakers may need to be removed if they are damaged, or just to access the components beneath them.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover

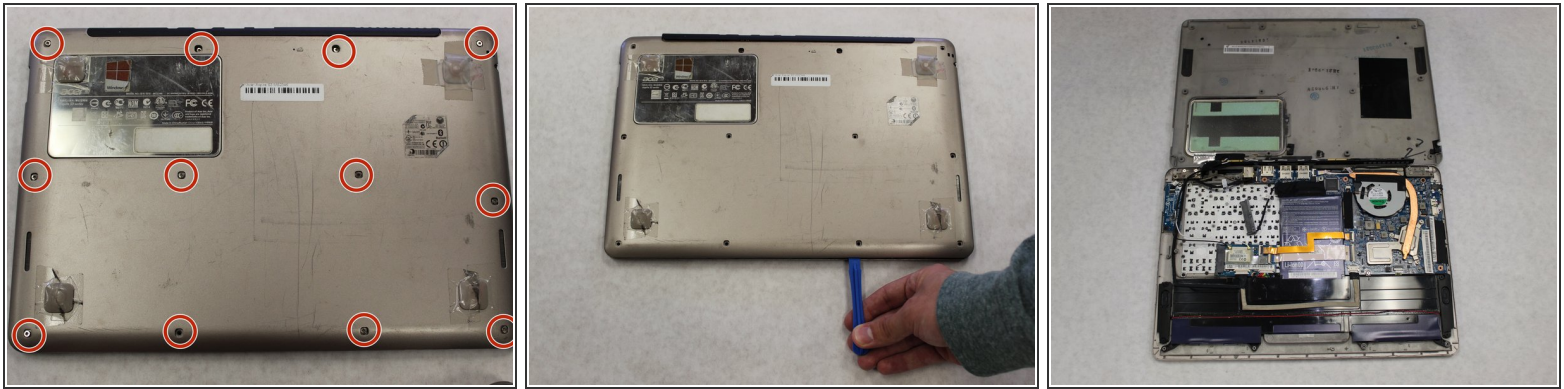


- Remove the 12 5mm Phillips #00 screws.
- Use a plastic opening tool to gently pry open the back panel.
- Gently lift up the back panel, exposing the internals of the laptop.

Step 2 — Speakers

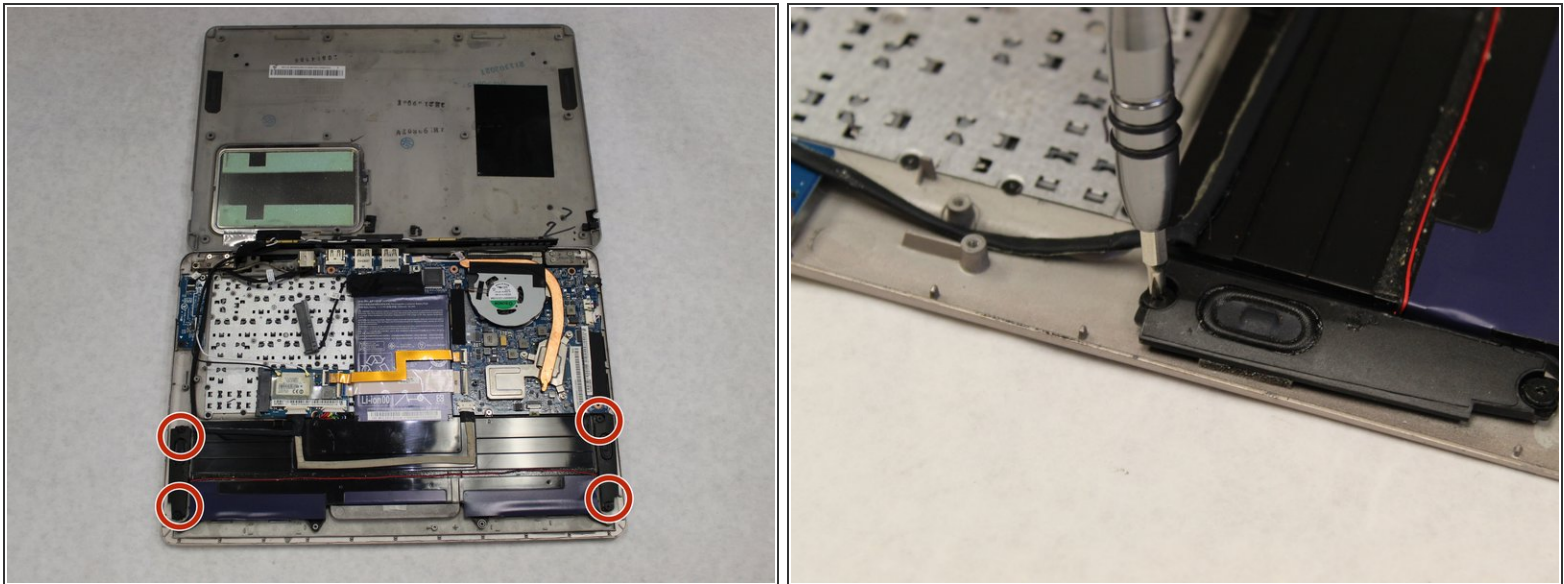

- Unscrew the 4 1mm PH00 screws attaching the speakers to the frame.

Step 3

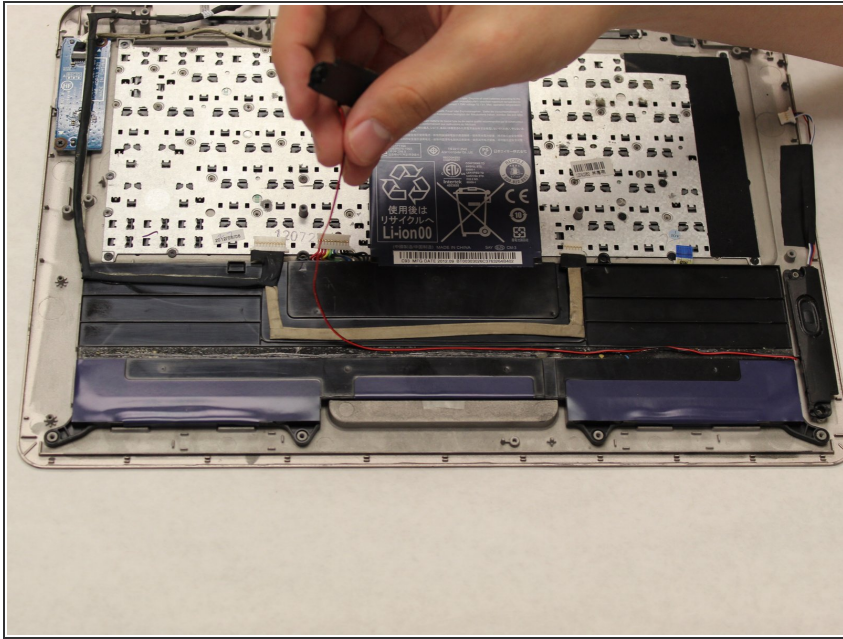

- Gently remove the speakers. Note that the wire connecting them may be lightly glued down. If so, gently pry up.

To reassemble your device, follow these instructions in reverse order.