




Nokia Lumia 925 Battery Replacement

Written By: Guillermo Lara

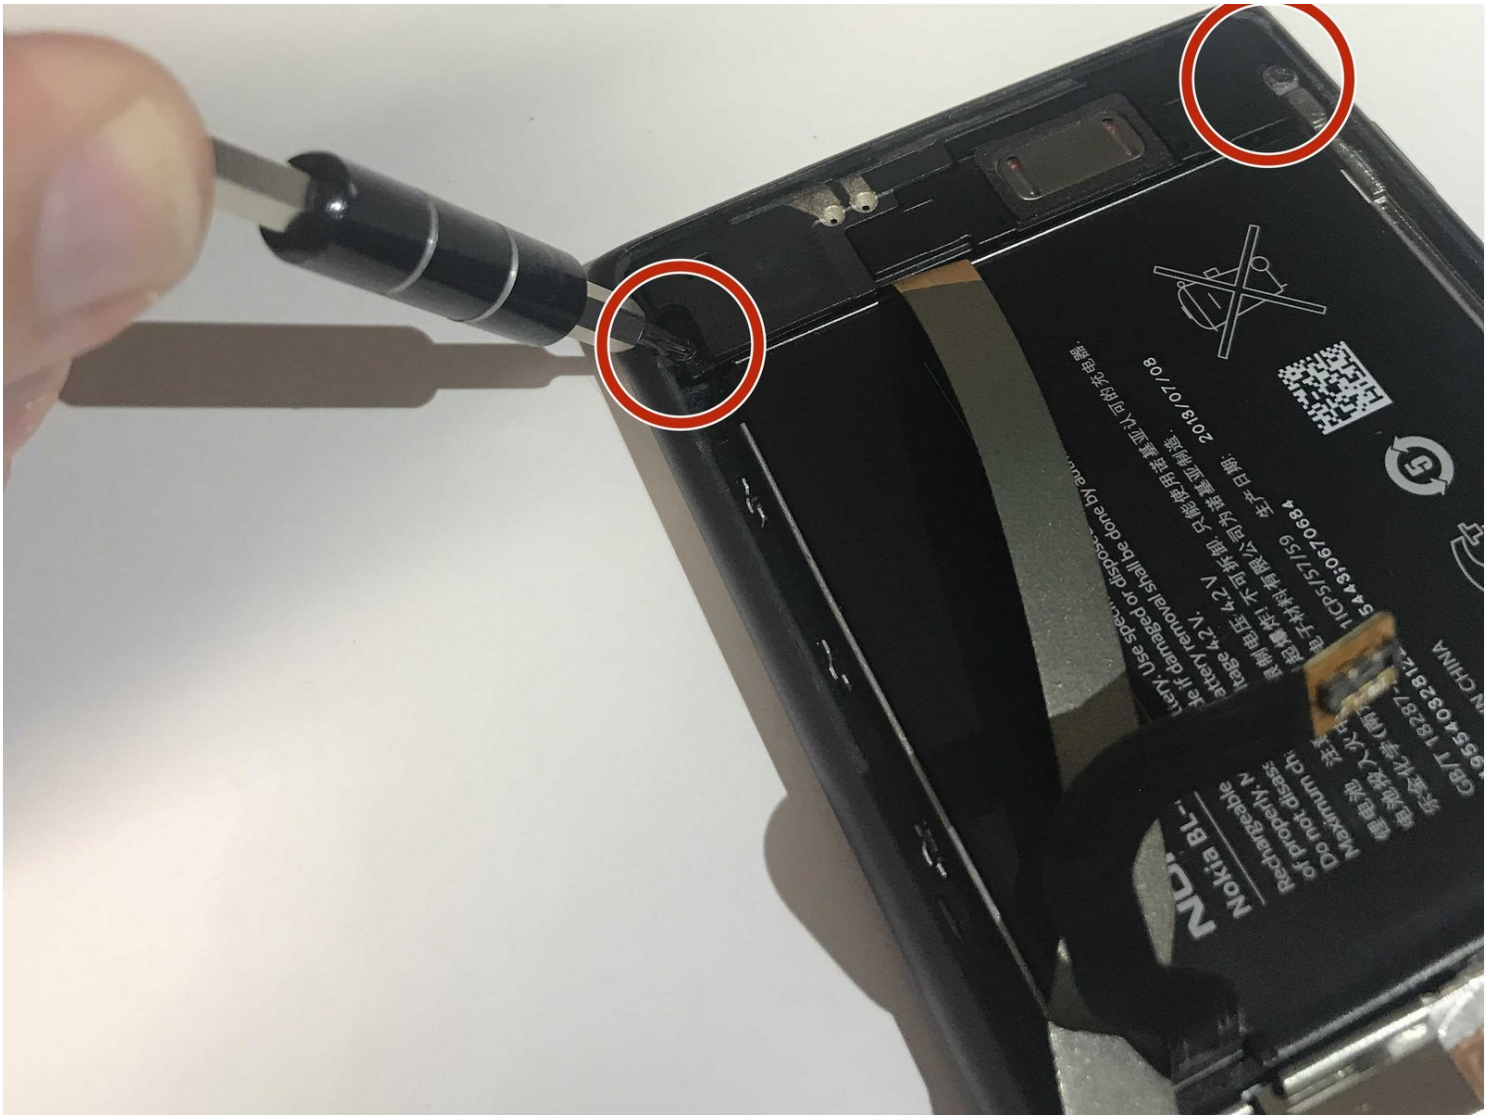

TOOLS:

iFixit Opening Tool (1)
Tweezers (1)
ESD Safe Blunt Nose Tweezers (1)
TR7 Torx Security Screwdriver (1)
T5 Torx Screwdriver (1)

PARTS:

Nokia Lumia 925 Battery (1)

Step 1 — Motherboard



- Remove the sim card holder by inserting [tweezers](#) into the hole. Push down and the holder will spring back up.
- Pull out the holder until it is completely separate.
- ① Something like a paperclip will work if there are no tweezers available.



Step 2



- Slide a plastic opening tool under the back cover.
- Slide the tool around the outsides of the cover to fully dislodge the pins holding the cover to the phone.

⚠ Some pins are facing the opposite way from the others.

Step 3

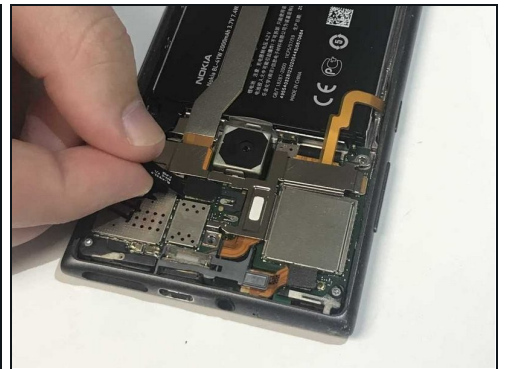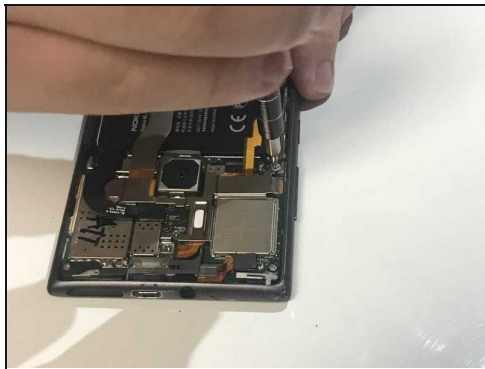

- Remove the 3 screws using the T7 Torx screwdriver.
- Unclip the black tab connector.

Step 4



- Remove the silver metal cover.


⚠ Be careful of the tape under the right square side of the panel. Using a spudger helps.

Step 5



- Unclip the two orange tabs.
- Remove the four silver screws using the T5 Torx screwdriver.

Step 6

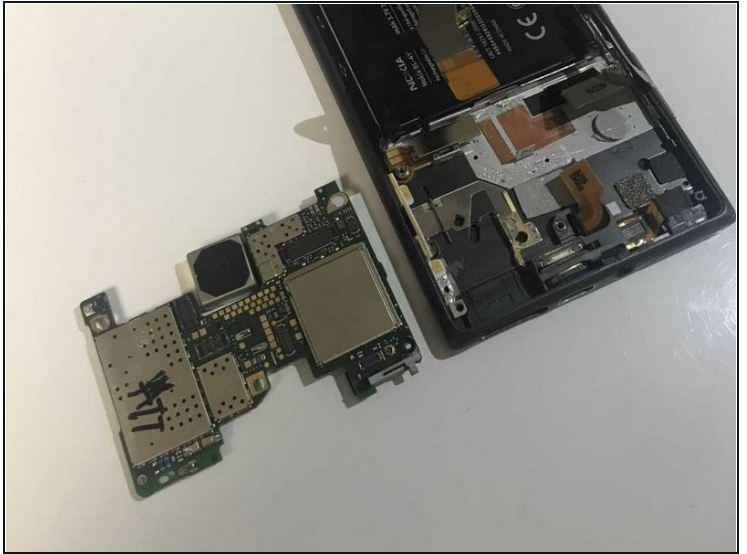


- Remove the motherboard by sliding tweezers between it and the back of the screen. Lift up.

Step 7 — Display





- Push the screen from the inside of the phone.
- Pull the screen off.
- ① Slide the electronic strip through the small opening.

Step 8 — Speaker

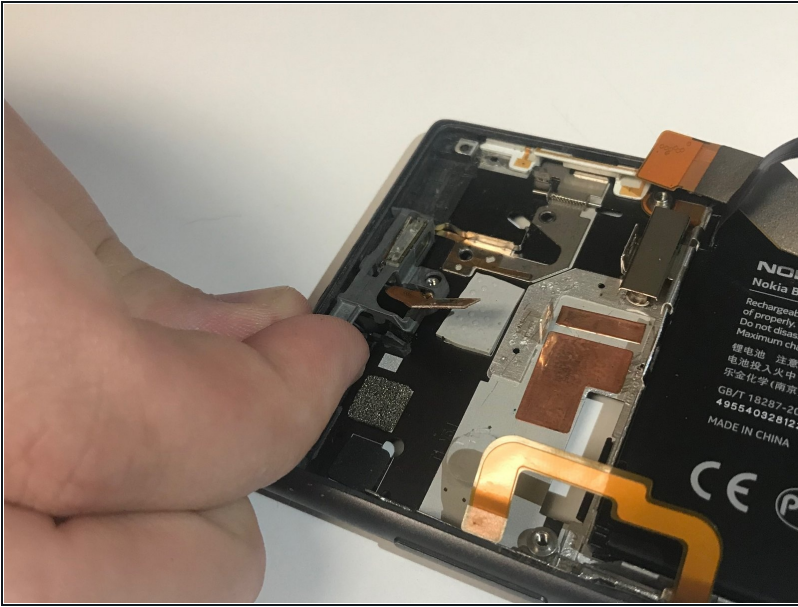


- Locate the grey speaker/camera cover.
- Carefully remove the cover with either a pair of [tweezers](#) or your fingers.

Step 9

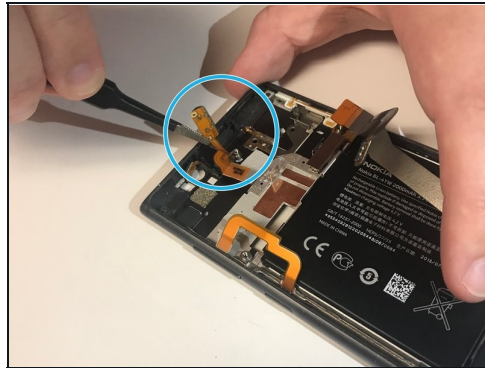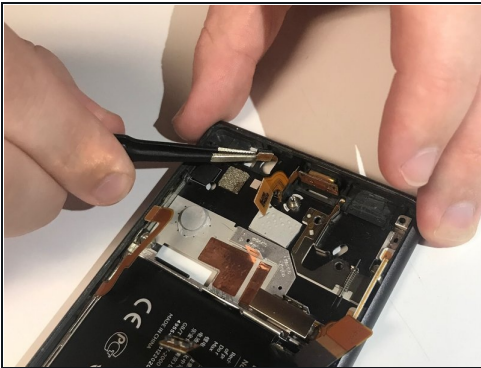

- With a pair of tweezers, gently remove the orange colored tab closest to the speaker.

Step 10 — Front Camera

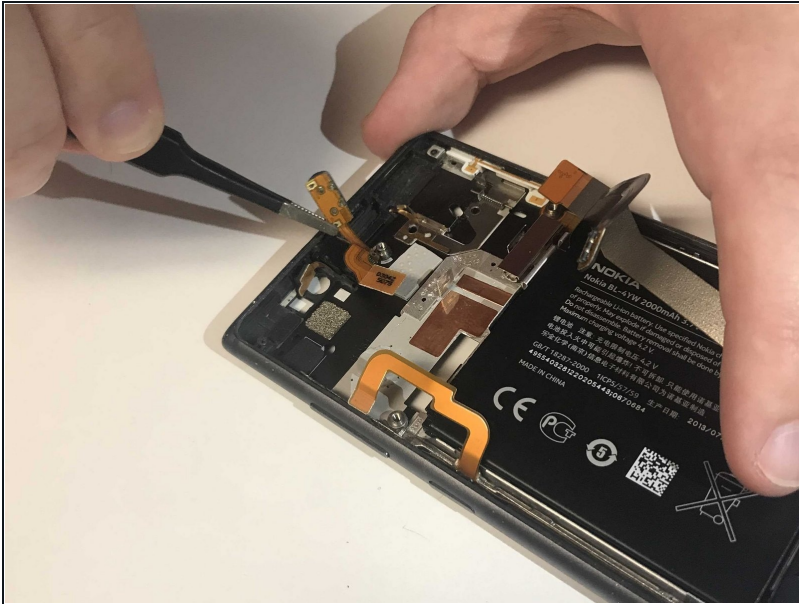



- Pull at the orange section until it becomes loose.
- ⓘ It is located in the upper leftmost section of the phone behind the front camera.

Step 11



- Pull vertically on the same orange section until the front camera comes out.
- ⚠ The front camera as well as the speaker may come out after the last step so be careful.

Step 12 — Battery

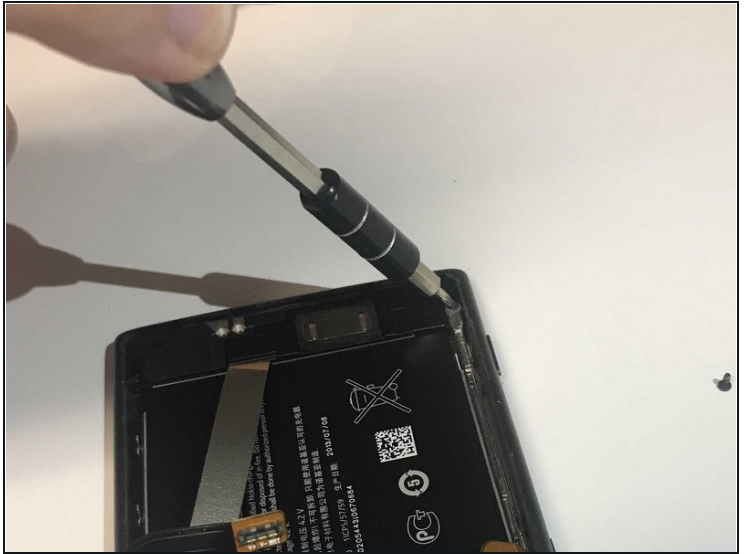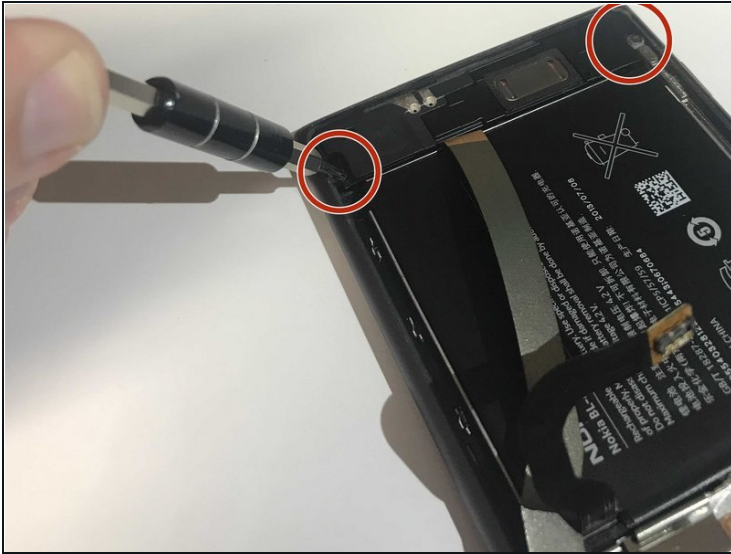

- Remove the two black screws by using the T5 Torx screwdriver.

Step 13




- Carefully pull the metal rod out.

Step 14



- Pry off the speaker.
- ① Apply heavy pressure, and pull towards the battery.

Step 15

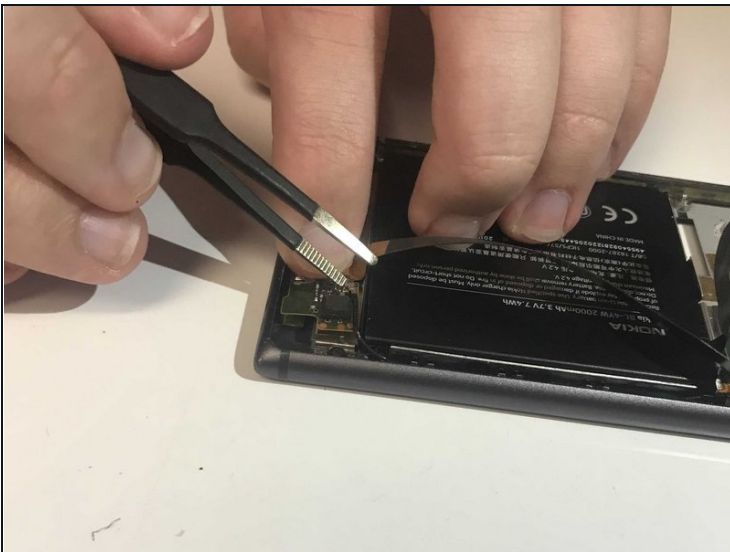

- Unclip the black wire.


Step 16



- Peel off the electronic strip.

⚠ Be careful not to tear.

Step 17

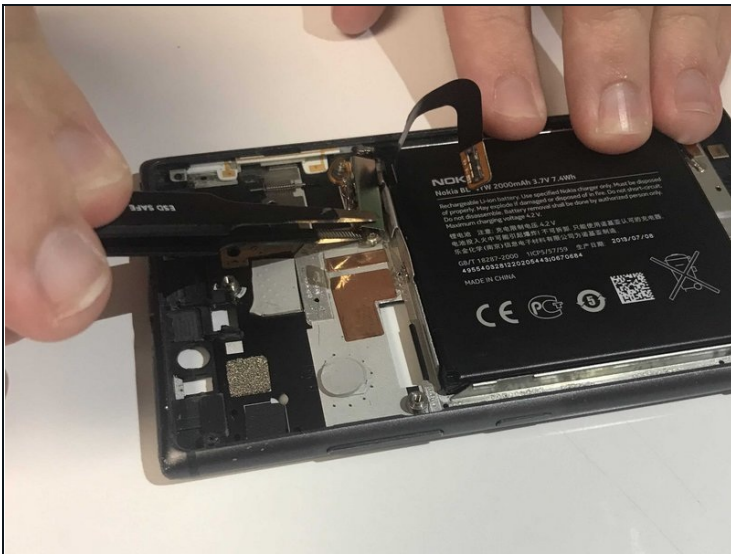

- Pry off the metal vibrating unit using [tweezers](#).

⚠ This requires a lot of force.

Step 18



- Insert the tweezers under the corner of the battery, and lift out.
- ① You have successfully removed the battery.

To reassemble your device, follow these instructions in reverse order.