

Lenovo G580 Keyboard Keys Replacement

Keyboard keys can be damaged through extensive...

Written By: khalid massad



INTRODUCTION

Keyboard keys can be damaged through extensive use or spills. It is important to be able to replace missing keys as a keyboard is unusable without all keys in working order. This is a simple task that only requires a spudger and a few minutes of time.



Prying and Opening Tool Assortment (1)

PARTS:

Lenovo G580 replacement keyboard key (1) Lenovo G580 Keyboard (1)

Step 1 — Keyboard Key




 For damaged keys, start by having a prying tool handy.

Step 2



- Start by pushing a plastic opening tool gently under the key.
- ⚠ Do not force the plastic opening tool as this will damage the keyboard mechanisms.

Step 3

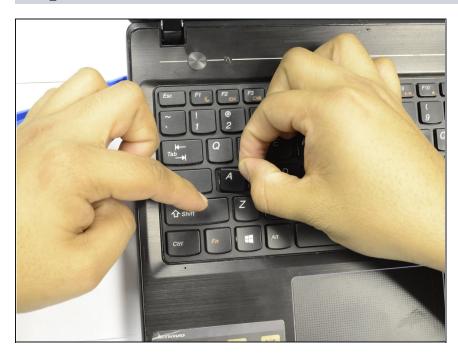

- Gently pull upwards with the prying tool until the key comes off.
- Use your hand to remove the key once the key is fully released.

Step 4



 To replace the key, place the key above its mechanism and gently press it into place.

To reassemble your device, follow these instructions in reverse order.