



Lenovo Yoga 920-13IKB Speaker Replacement

Guide on how to replace Lenovo Yoga 920-13IKB speakers.

Written By: Alyssa McCulloch



INTRODUCTION

This guide will show you how to replace the speakers in the Lenovo Yoga 920-13IKB.



TOOLS:

- [iFixit Opening Tool](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)




PARTS:

- [Lenovo IdeaPad Flex Pro and Yoga 920-13 Right Speaker](#) (1)
- [Lenovo IdeaPad Flex Pro and Yoga 920-13 Left Speaker](#) (1)

Step 1 — Back Cover



-  Flip the device over to access the screws on the back cover.
- Remove the ten 5mm Torx T5 screws on the back cover to loosen the back cover.

Step 2





- Slide the iFixit Opening Tool under the back cover to lift it up.
- Pull up on the cover with your hand to release the tab holding the center of the cover in place.

Step 3 — Speaker




- Remove two 3mm Phillips #00 screws that hold the speaker in place.
- ⓘ These steps are applicable for the speaker on the right or left. Identify the speaker to replace then proceed.

Step 4

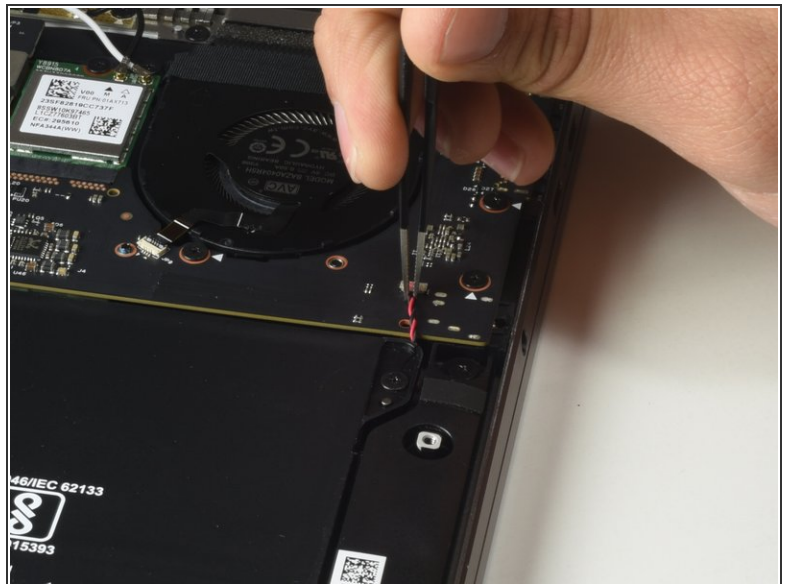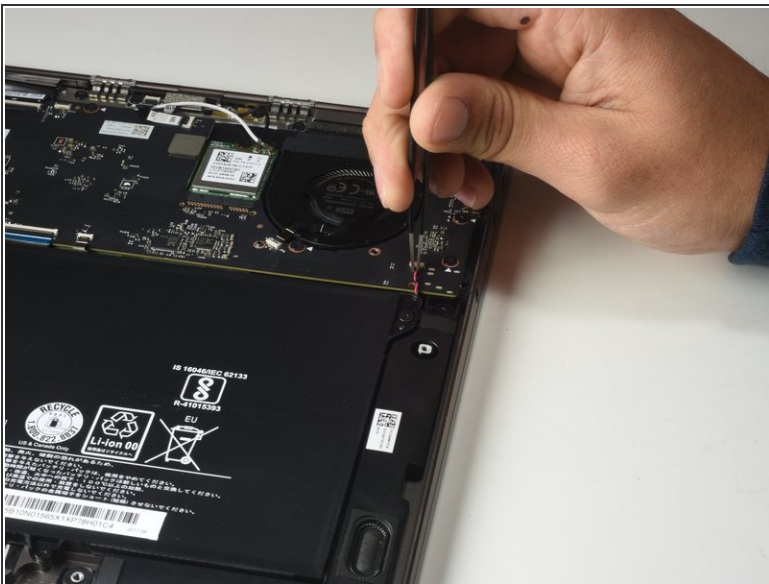

- Disconnect the red and black wire from the motherboard to free the speaker.

Step 5

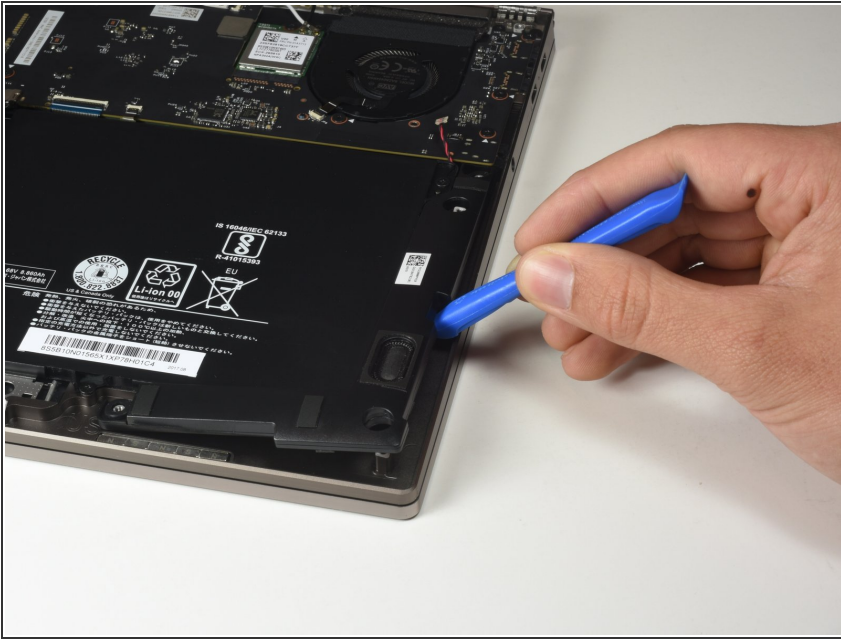

- Lift up the speaker with the iFixit Opening Tool and remove the speaker.

To reassemble your device, follow these instructions in reverse order.