



Sony Xperia XZ2 LCD Screen Replacement

If you need to replace the LCD screen on your...

Written By: Matthew Ionescu



INTRODUCTION

If you need to replace the LCD screen on your Sony Xperia XZ2 use this guide. The LCD screen is the most important method of communication between you and your phone. If the screen is damaged or is not working, a screen replacement may be required. For this guide you will need a hair dryer, opening picks, angled tweezers, and a spudger. Opening the phone can be moderately difficult because you need to carefully remove the glue under the phone screen and remove the open the connectors.

TOOLS:

[Hair Dryer](#) (1)

[iFixit Opening Picks \(Set of 6\)](#) (1)

[Tweezers - Pro/ESD/Angled](#) (1)

[Spudger](#) (1)

Step 1 — LCD Screen



- Weaken the glue that is keeping the screen in place by heating up the edges of the phone with a hair dryer or heat gun.


 The phone gets very hot and can hurt the user handling it.

Step 2



- Scrape all the glue from the inside edges by inserting opening picks into the bottom edge of the phone and working your way around the edges.
- ① If the glue hardens and becomes difficult to move the plastic around the edges, reheat the phone.

Step 3

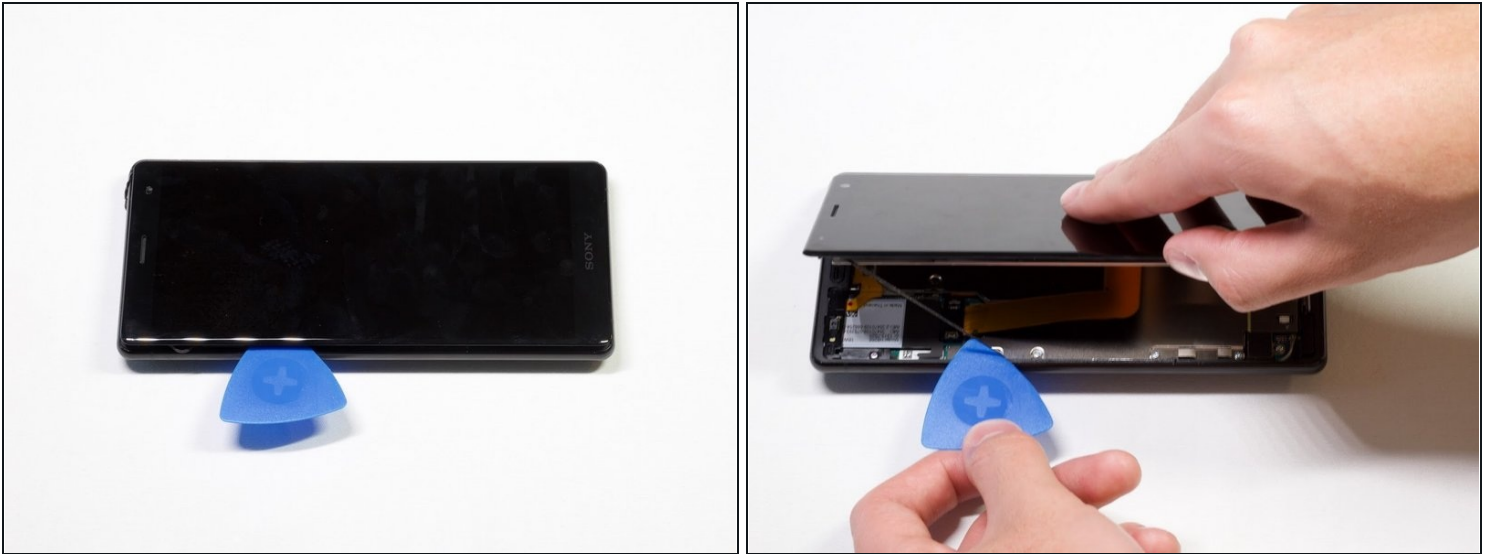


- Pry open the phone by inserting an opening pick under one of the edges and removing the screen.
- ① The screen is still attached by a connector, so do not pull the pieces apart.

Step 4



- Remove the bracket covering the connector by grabbing one side of the bracket with angled [tweezers](#) and gently pulling it off.

Step 5

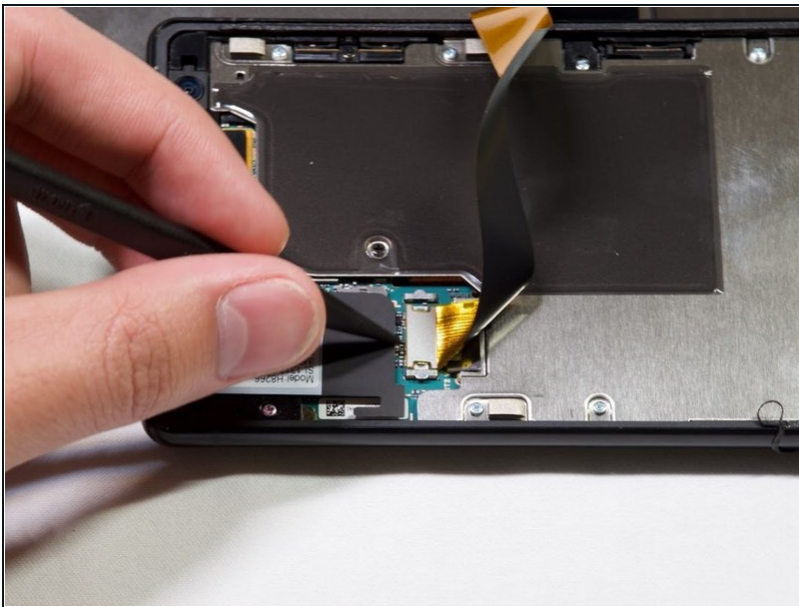

- Gently remove the connector by using a spudger to pop it off.

To reassemble your device, follow these instructions in reverse order.