



Hover-1 XLS Brake Replacement

How to replace the brakes in the Hover-1 XLS.

Written By: Jonathan Hidalgo



INTRODUCTION

The screws on the brakes are tight, but it's best to use hand tools so the screws don't get stripped.



TOOLS:


- [4 mm Hex Key](#) (1)
 - [5mm Hex Key](#) (1)
-

Step 1 — Front Brake



- Remove the two, 23 mm Hex #5 screws holding the brake to the bike.
- Slide the brake mechanism off and turn it upside down to reveal the screw holding the brake wire.

Step 2

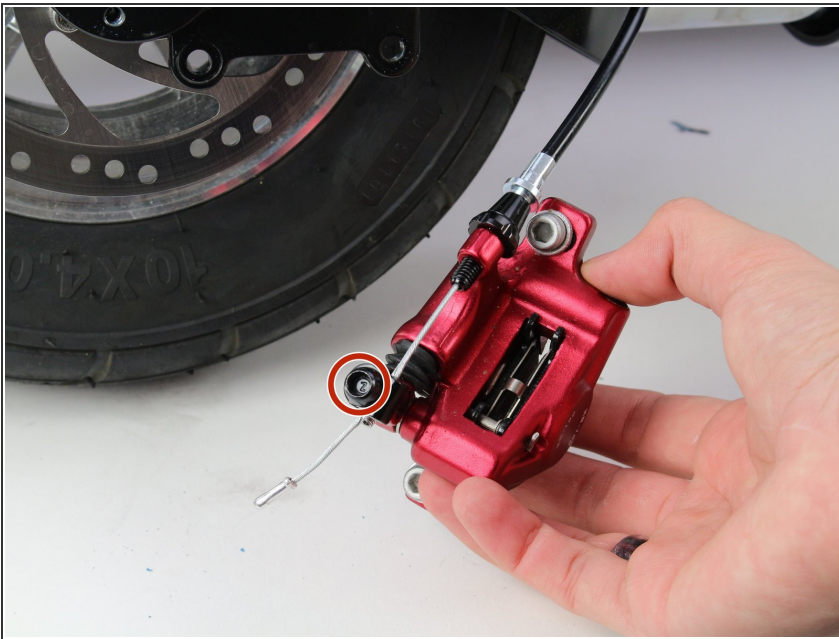

- Remove the one, 14 mm Hex #4 screw pushing down the brake wire to the brake mechanism on the bottom.

Step 3



- Remove the side screw holding the brake wire and mechanism together with your hands.
- Slide the brake mechanism off from the brake wire.

To reassemble your device, follow these instructions in reverse order.