



HP Pavilion g7-1368dx Keyboard Replacement

In this guide, you will learn how to replace the keyboard of your HP Pavilion g7-1368dx.

Written By: Kianna Young



INTRODUCTION

In this guide, you will learn how to replace the keyboard of your HP Pavilion g7-1368dx. this process takes roughly 25 minutes. The tools that you will need to preform this replacement are a Philips #1 Screwdriver, and the plastic iFixit opening tool.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn the device over so that the lower case is facing up.
- Slide the battery release latch. The battery will pop up.

Step 2



- Lift and remove the battery from its compartment.

Step 3 — Keyboard



- Loosen the two Phillips #1 screws that connect the service panel to the device.
 - ⓘ These are captive screws and cannot be fully removed. They will remain attached to the service panel.
- Slide the service panel down and pull it up to remove.

Step 4





- Remove the one 7 mm Phillips #1 screw securing the keyboard to the device.

Step 5



- Flip over the device and open the screen.

Step 6

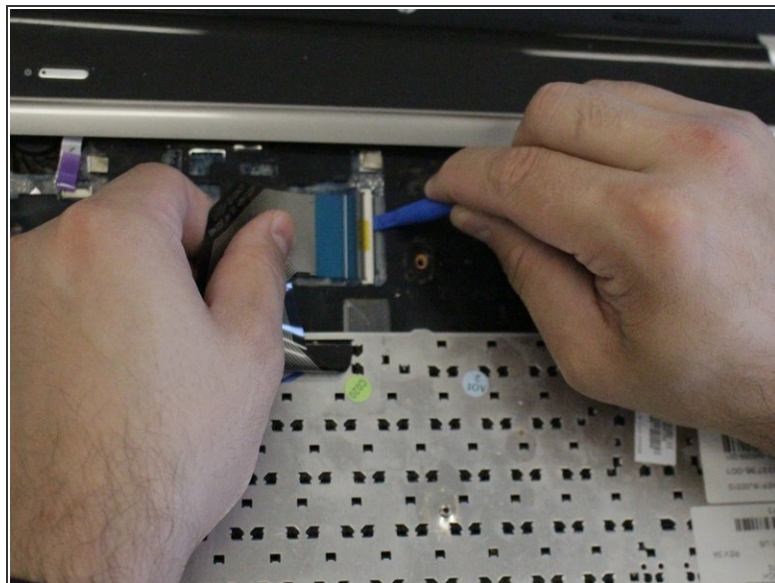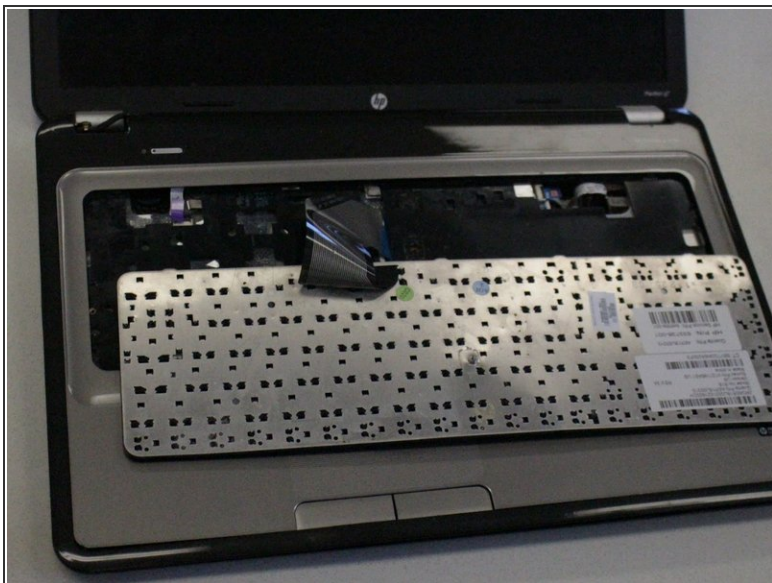

- Flip the keyboard over and locate the black ribbon cable that attaches the keyboard to the device.
- Using a plastic opening tool, flip up the white tab on the zero insertion force connector.
- Disconnect the ribbon cable by sliding it out of the ZIF connector.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.