


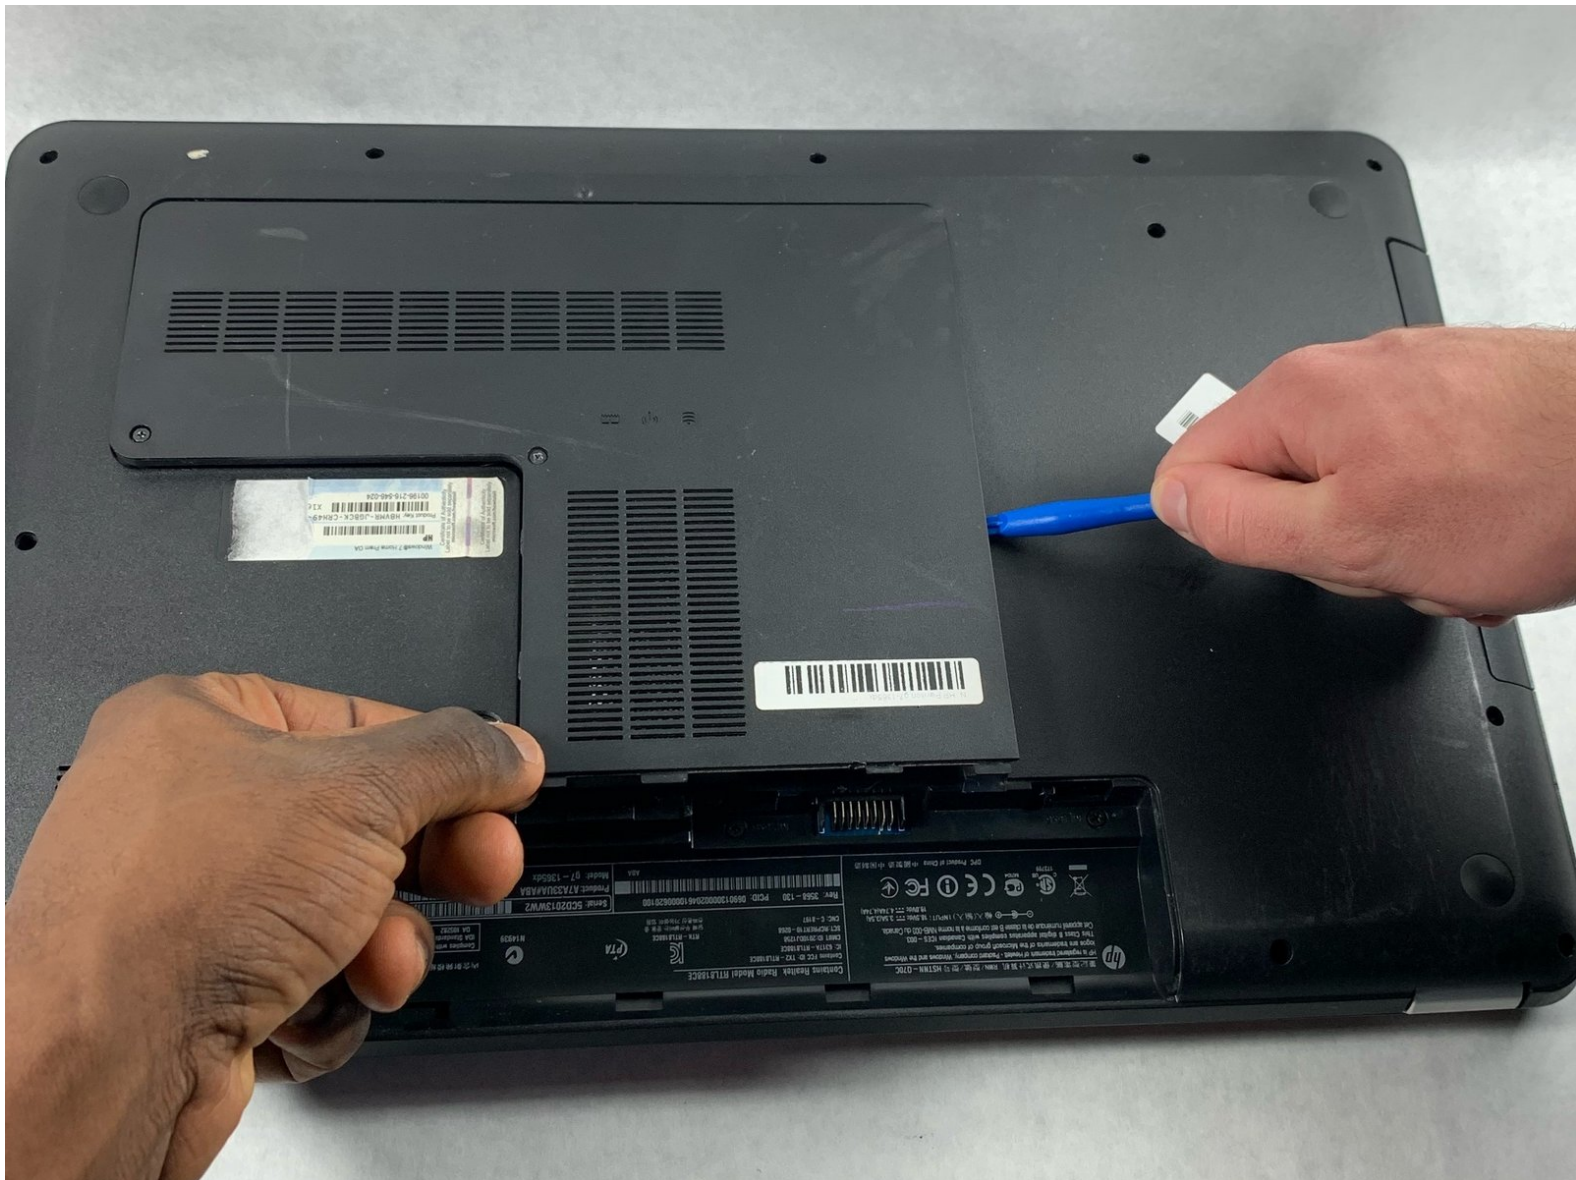

HP Pavilion g7-1365dx Service Door Replacement

How to remove the service door on the HP Pavilion g7-1365dx for replacement or for more involved replacements.

Written By: Colin Klaes



This document was generated on 2020-11-28 07:25:32 AM (MST).


INTRODUCTION

This guide will give step by step instructions on how to remove the service door from an HP Pavilion g7-1365dx. Use this as a prerequisite guide for more involved guides.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

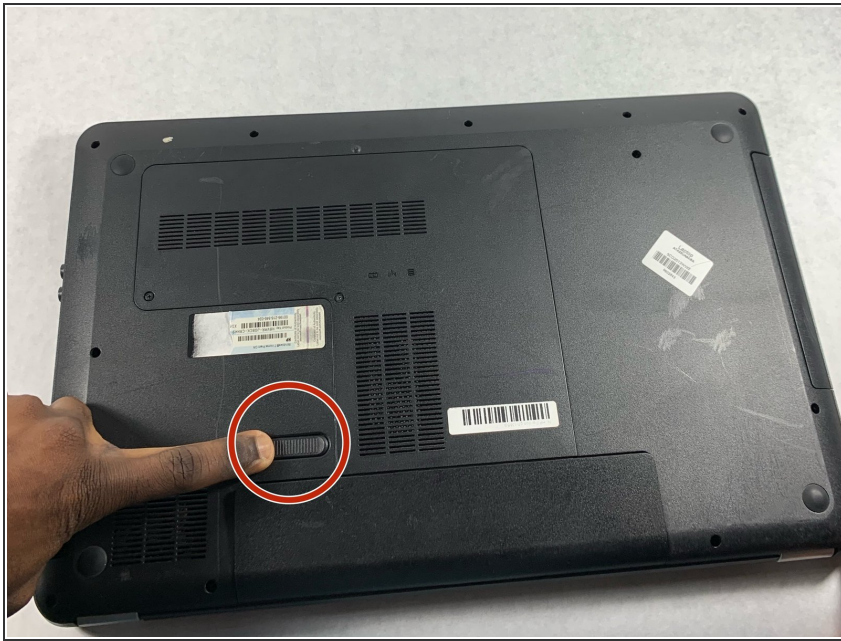



- ⚠ To prevent injury, make sure the laptop is powered off before removing the battery.
- Flip the laptop so that it is upside down and opens away from you. This exposes the battery, it will be centered at the bottom of the laptop .
- Push the switch above the battery towards the center of the laptop .

Step 2



- While pushing the switch, lift the battery by the side closest to the switch up and away from the laptop.

Step 3 — Service Door

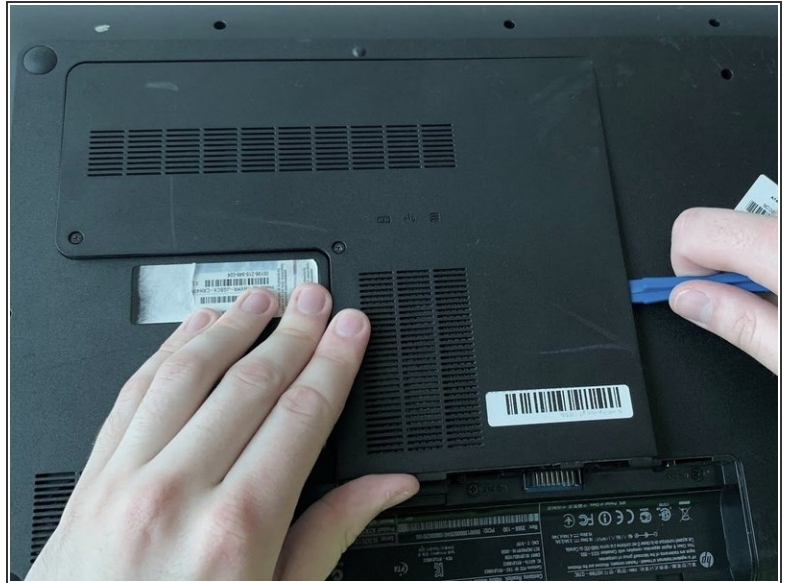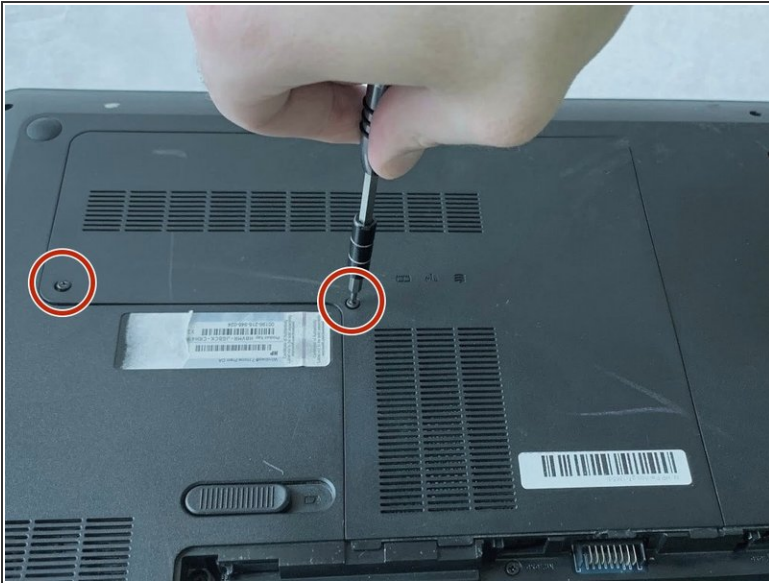

- Using a Phillips size 0 screwdriver, unscrew the 2 Phillips screws.
- Use the opening tool around the edges of the service door to loosen it and remove it.

To reassemble your device, follow these instructions in reverse order.