



# HP Pavilion 15-p214dx Battery Replacement

This guide will show you how to replace the battery in a HP Pavilion 15-d214dx.

Written By: Patrick Seaver



---

## INTRODUCTION



This guide will show you how to remove your HP Pavilion 15-p214dx's battery if you need to remove or replace it. The only tools you need to complete this guide are your hands, so completing this task is fairly easy and straightforward.



### PARTS:


- [HP VI04 Replacement Laptop Battery](#) (1)
-

## Step 1 — Battery

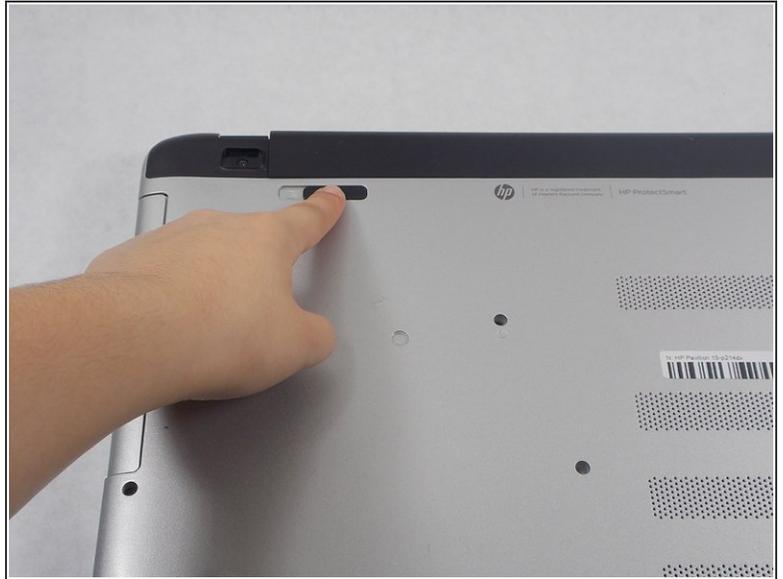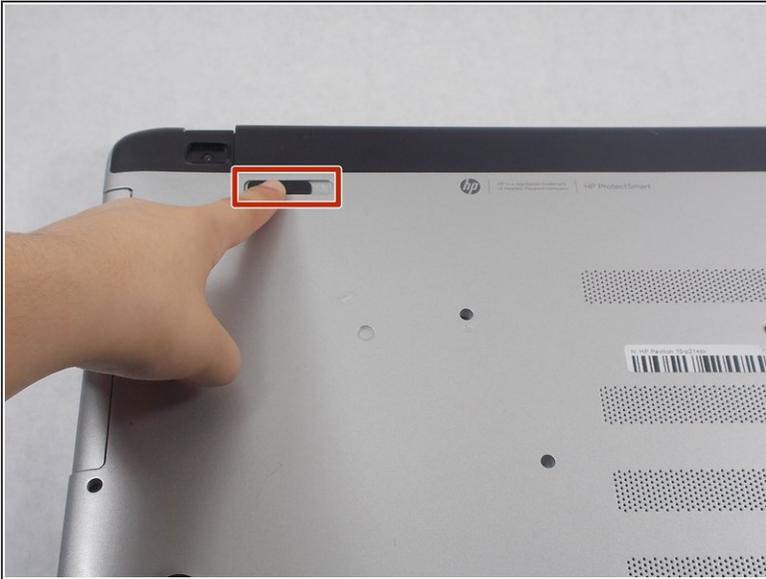

- Slide the battery lock (the switch at the upper left corner of the laptop's underside) to the right until it clicks into place.

## Step 2

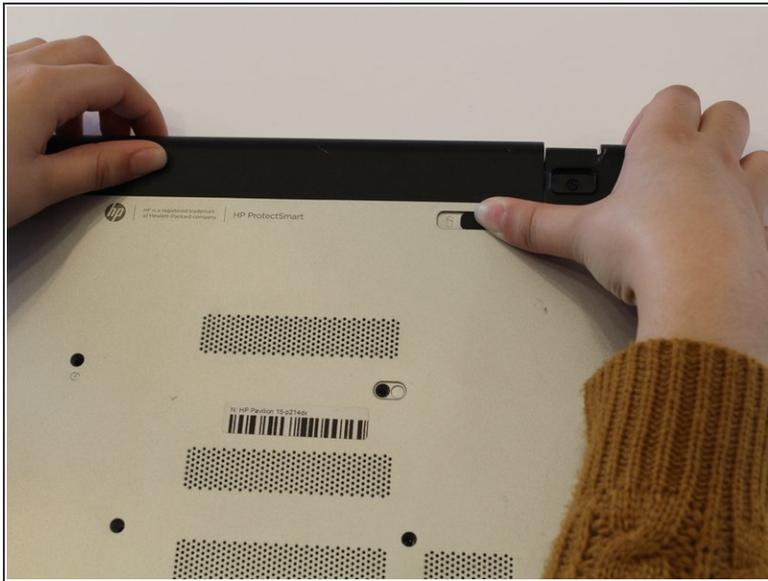

- Slide the battery release latch (the upper right-hand switch on the laptop's bottom) to the left.
- While holding the latch in place, remove the battery from the laptop's battery bay.
- When inserting a battery into the battery bay, the battery release latch does not need to be held open.

To reassemble your device, follow these instructions in reverse order. Opening the battery release latch is not required to plug the battery back in.