




ASUS Vivobook Q301LA-BSI5T17 Memory Card Replacement

This step will teach users how to replace the memory/ram of their IASUS Vivobook Q301LA-BSI5T17.

Written By: Mark Fanelli

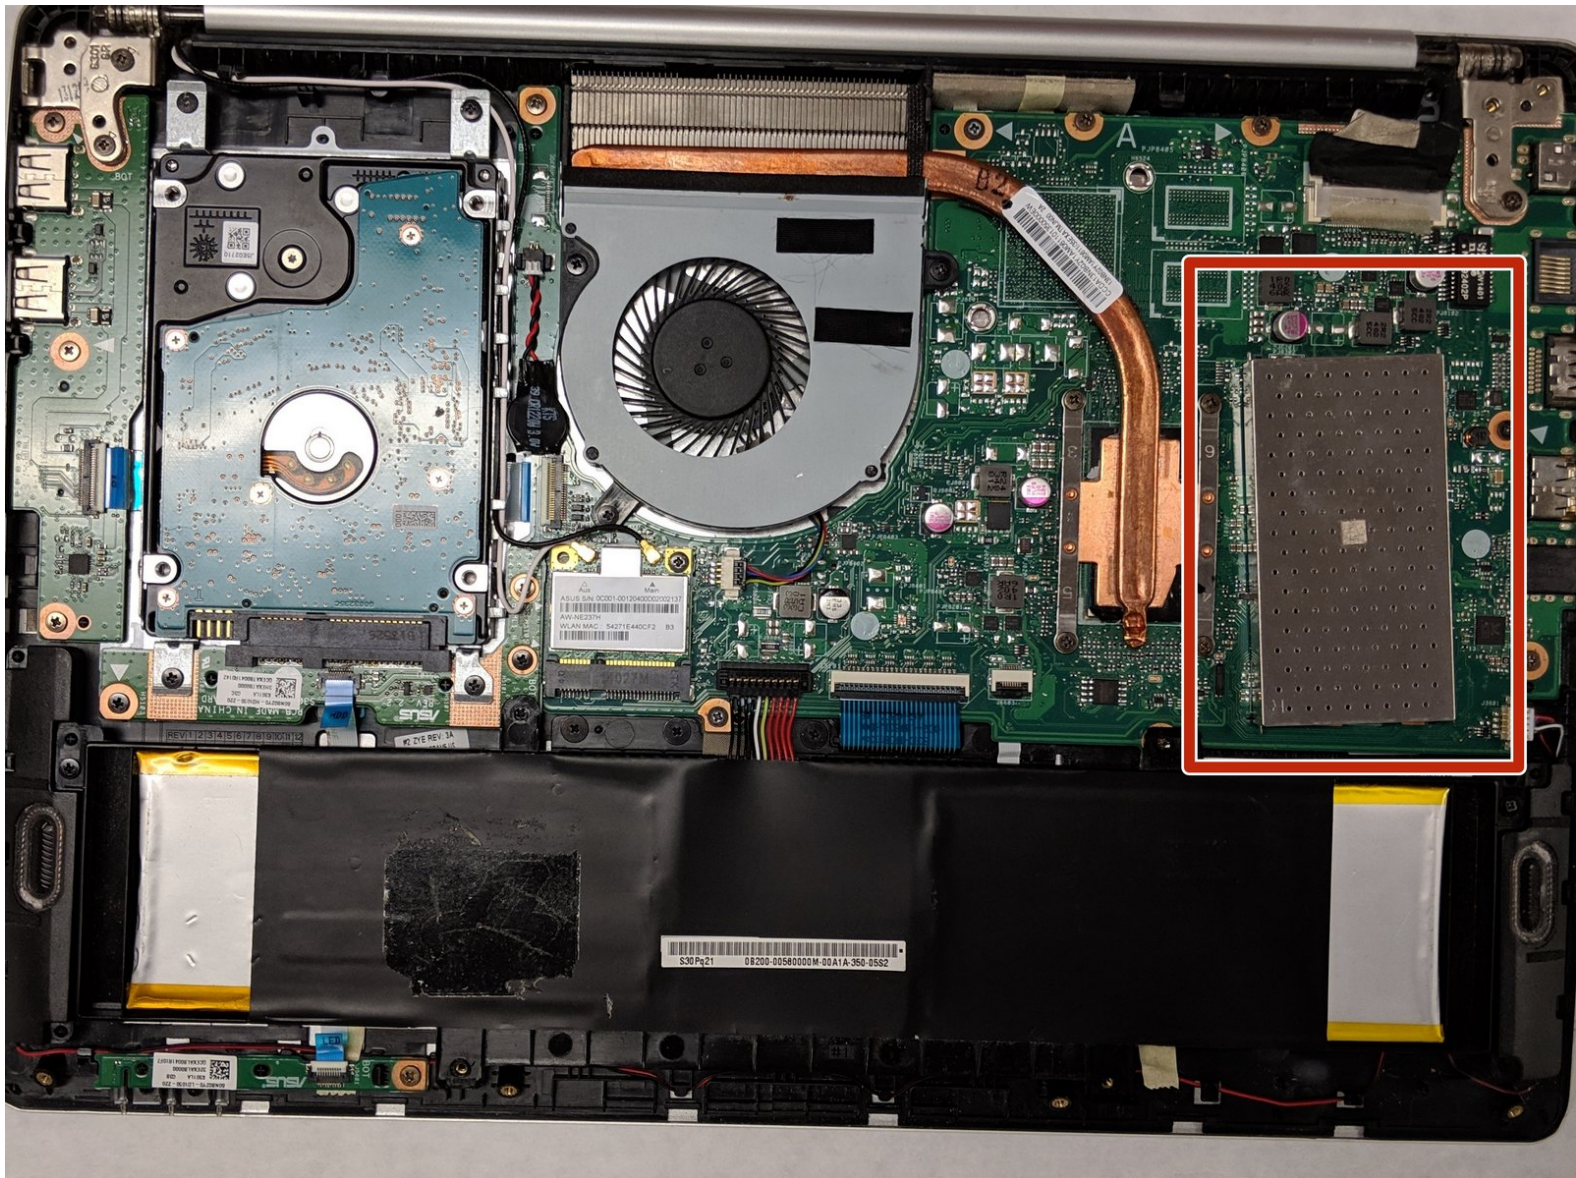

INTRODUCTION

Random access memory aka RAM, is used for a short-term storage for your laptop. Memory size can vary for personal needs. This step will help you if you need to replace your RAM or if you want to increase your RAM size in your ASUS Vivobook Q301LA-BSI5T17 laptop.



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Magnetic Project Mat](#) (1)



PARTS:

- [ASUS Vivobook Q301LA-BSI5T17 memory card](#) (1)

Step 1 — Back Case Housing





- Remove all ten 6mm Phillips #1 screws from the bottom of the computer chassis.

Step 2





- Carefully pry open the back cover from the laptop and place it to the side.

Step 3 — Memory Card

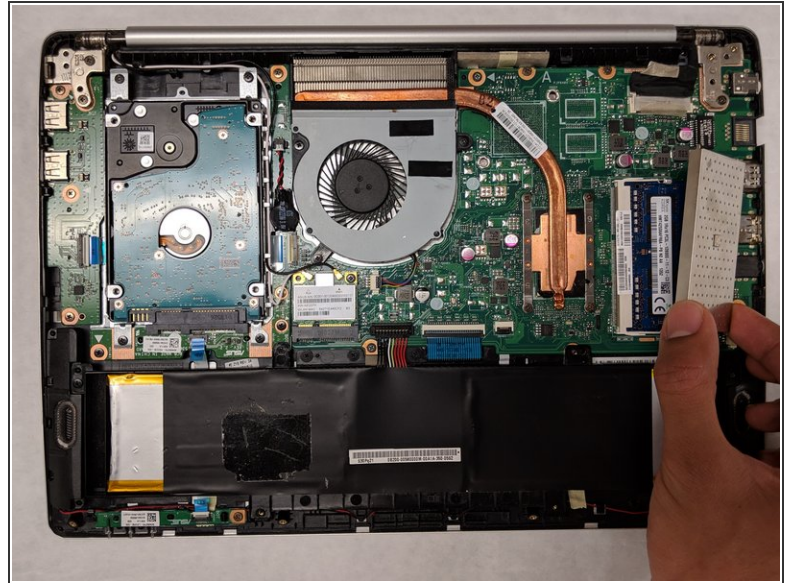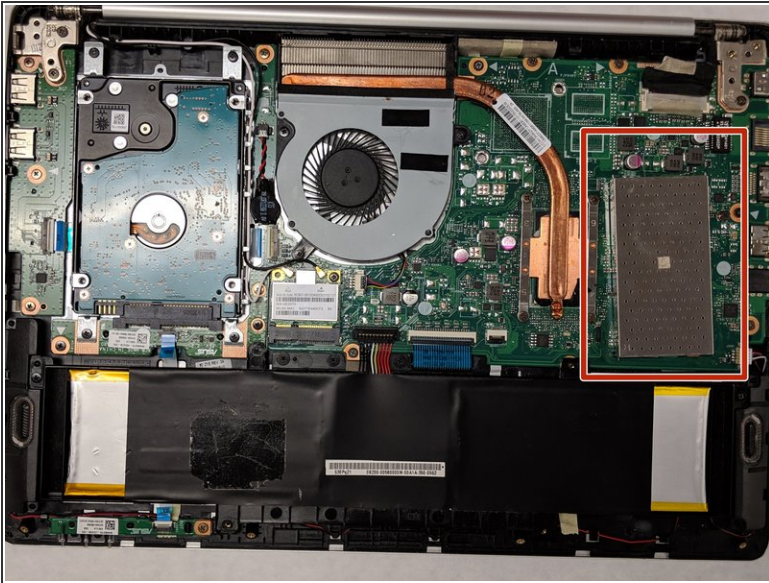

- Lift the perforated metal cover up from the motherboard to expose the memory cards.

Step 4

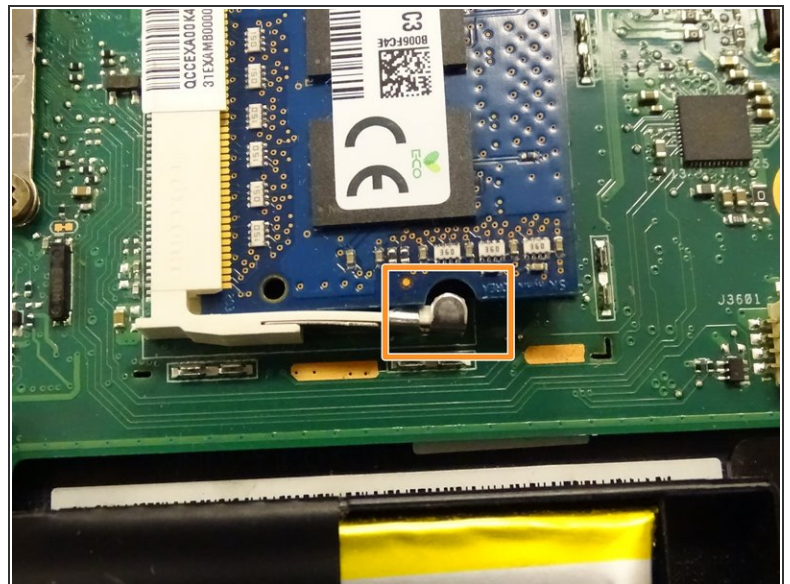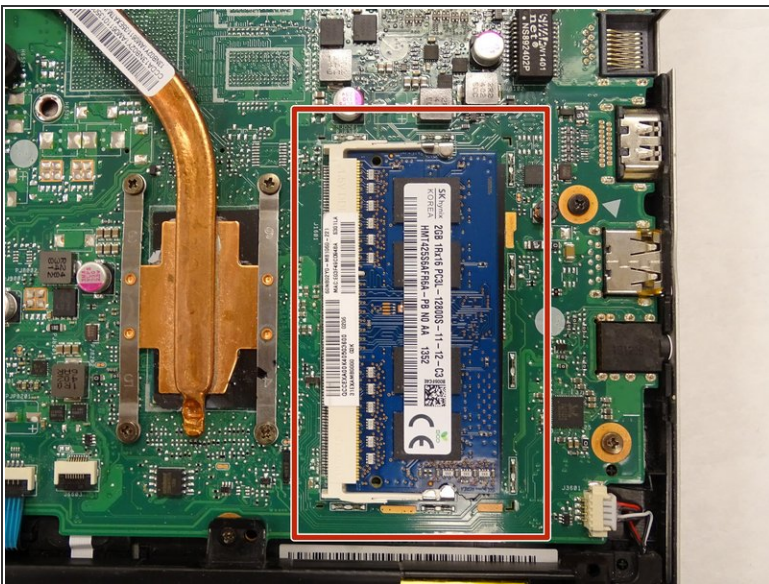

- Once the cover is removed the RAM will be accessible.
- Use your fingertips to pry out the metal guards outlining both of the sides of the memory card.
- ⓘ The RAM stick should then pop up to rest at an angle to the motherboard.

Step 5



- Using your fingertips, slide the memory card out from the plastic housing and remove it from the board.
- ⚠ Be sure to remove the card at the same angle at which it rests to avoid damaging the card or the contacts of the slot.

To reassemble your device, follow these instructions in reverse order.