




ACER Aspire 7750G-6645 Battery Replacement

Follow this guide to replace the battery of ACER Aspire 7750G 6645.

Written By: Matt Soule

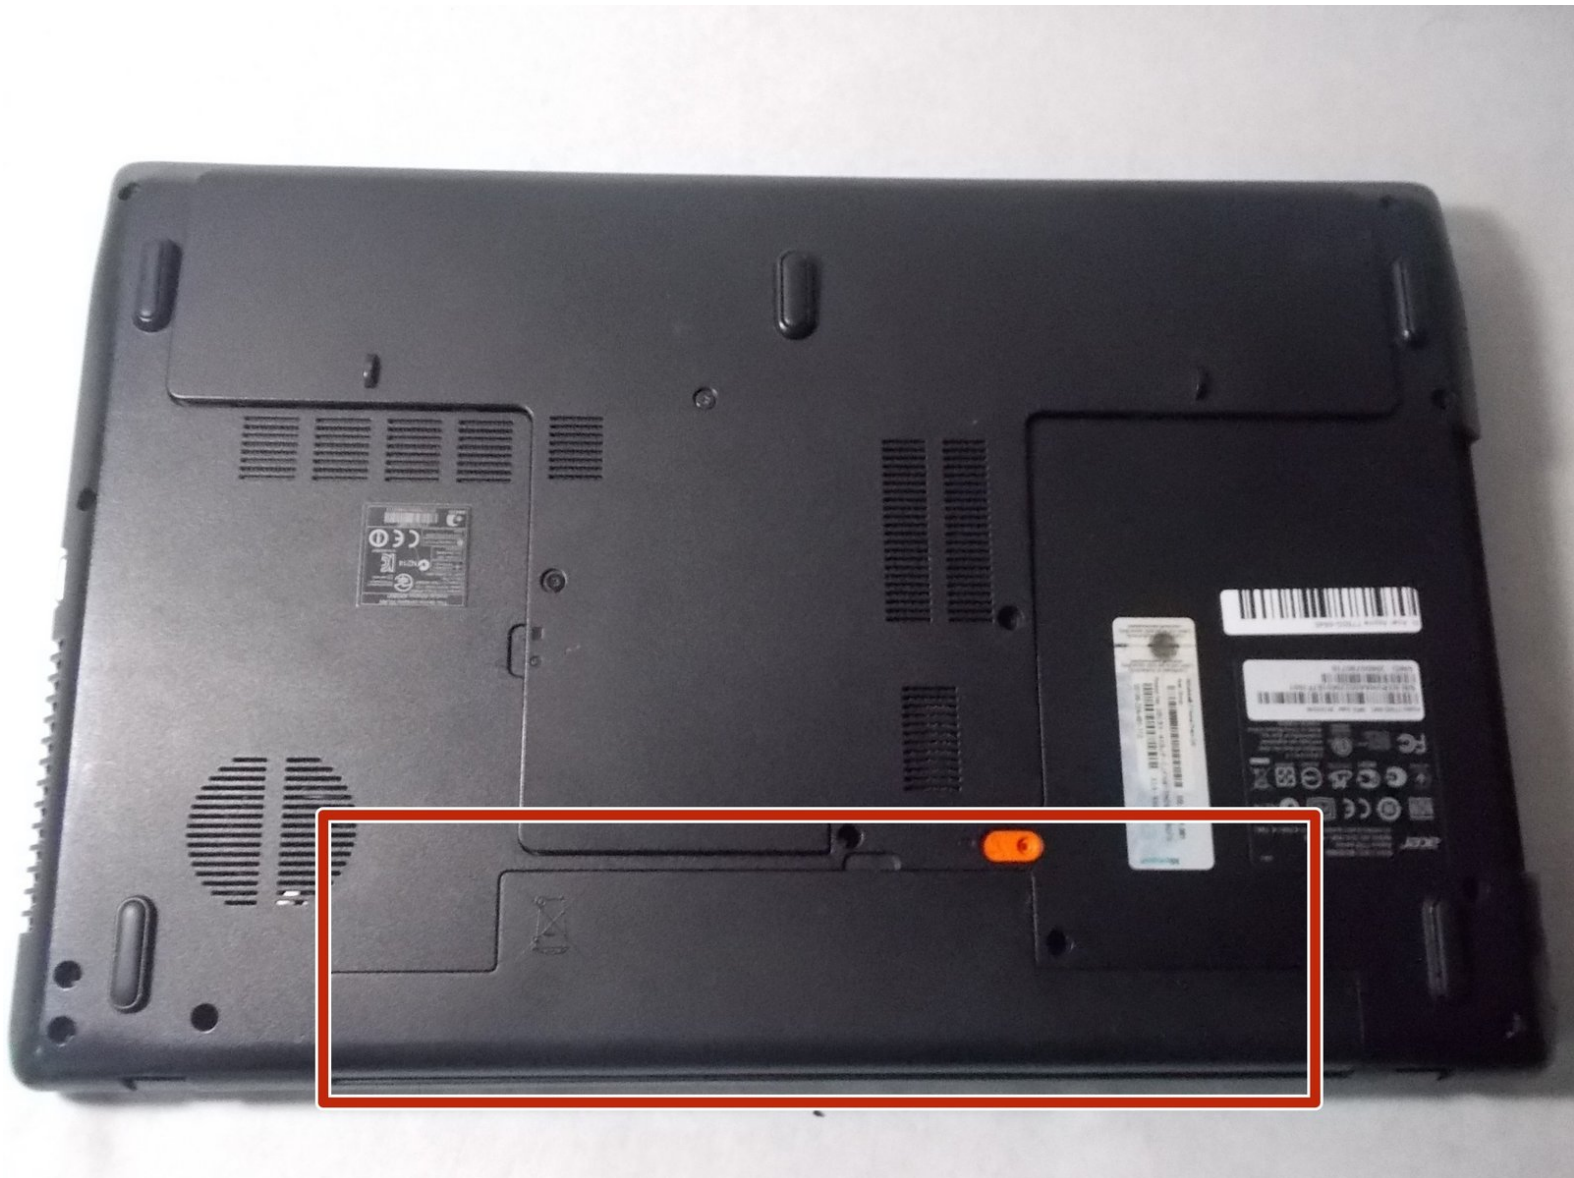

INTRODUCTION

If you have a faulty battery on a ACER Aspire 7750G 6645 then this guide will help you remove the faulty battery and replace it with a working battery. Once this process is completed it is recommended that the laptop is plugged in for a couple of hours to allow the new battery to fully charge.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [ACER Aspire 7750G-640 Battery](#) (1)

Step 1 — Battery

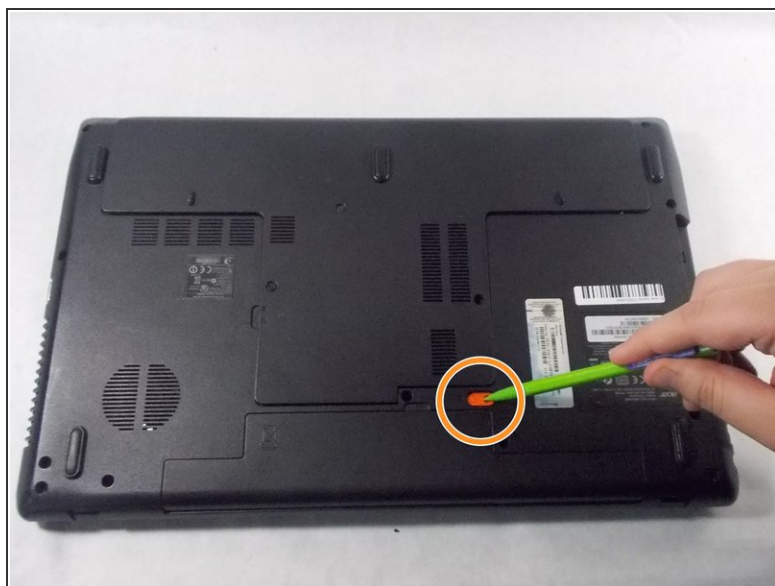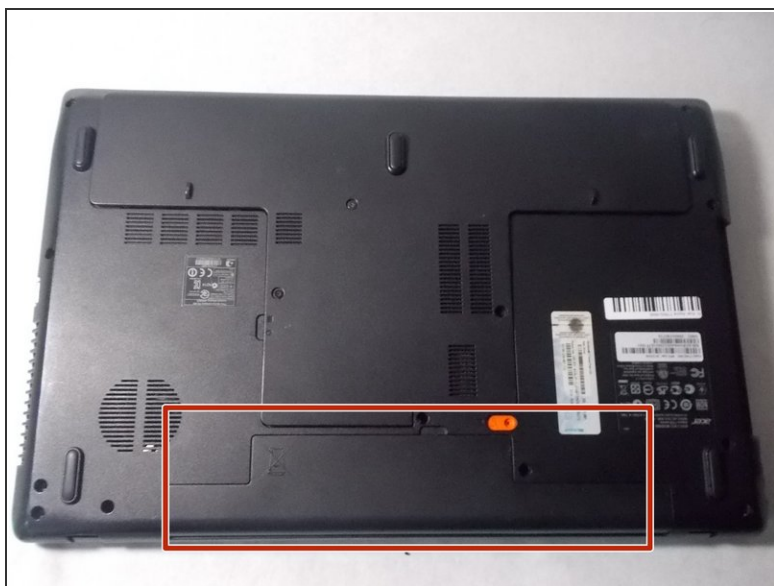

- The battery is on the back of the device, on the underside of the laptop.
- Push the switch over to unlock the battery. You may need a pen/spudger to push the lock.

Step 2



- Remove the battery and then pull it out of the device.

To reassemble your device, follow these instructions in reverse order.