


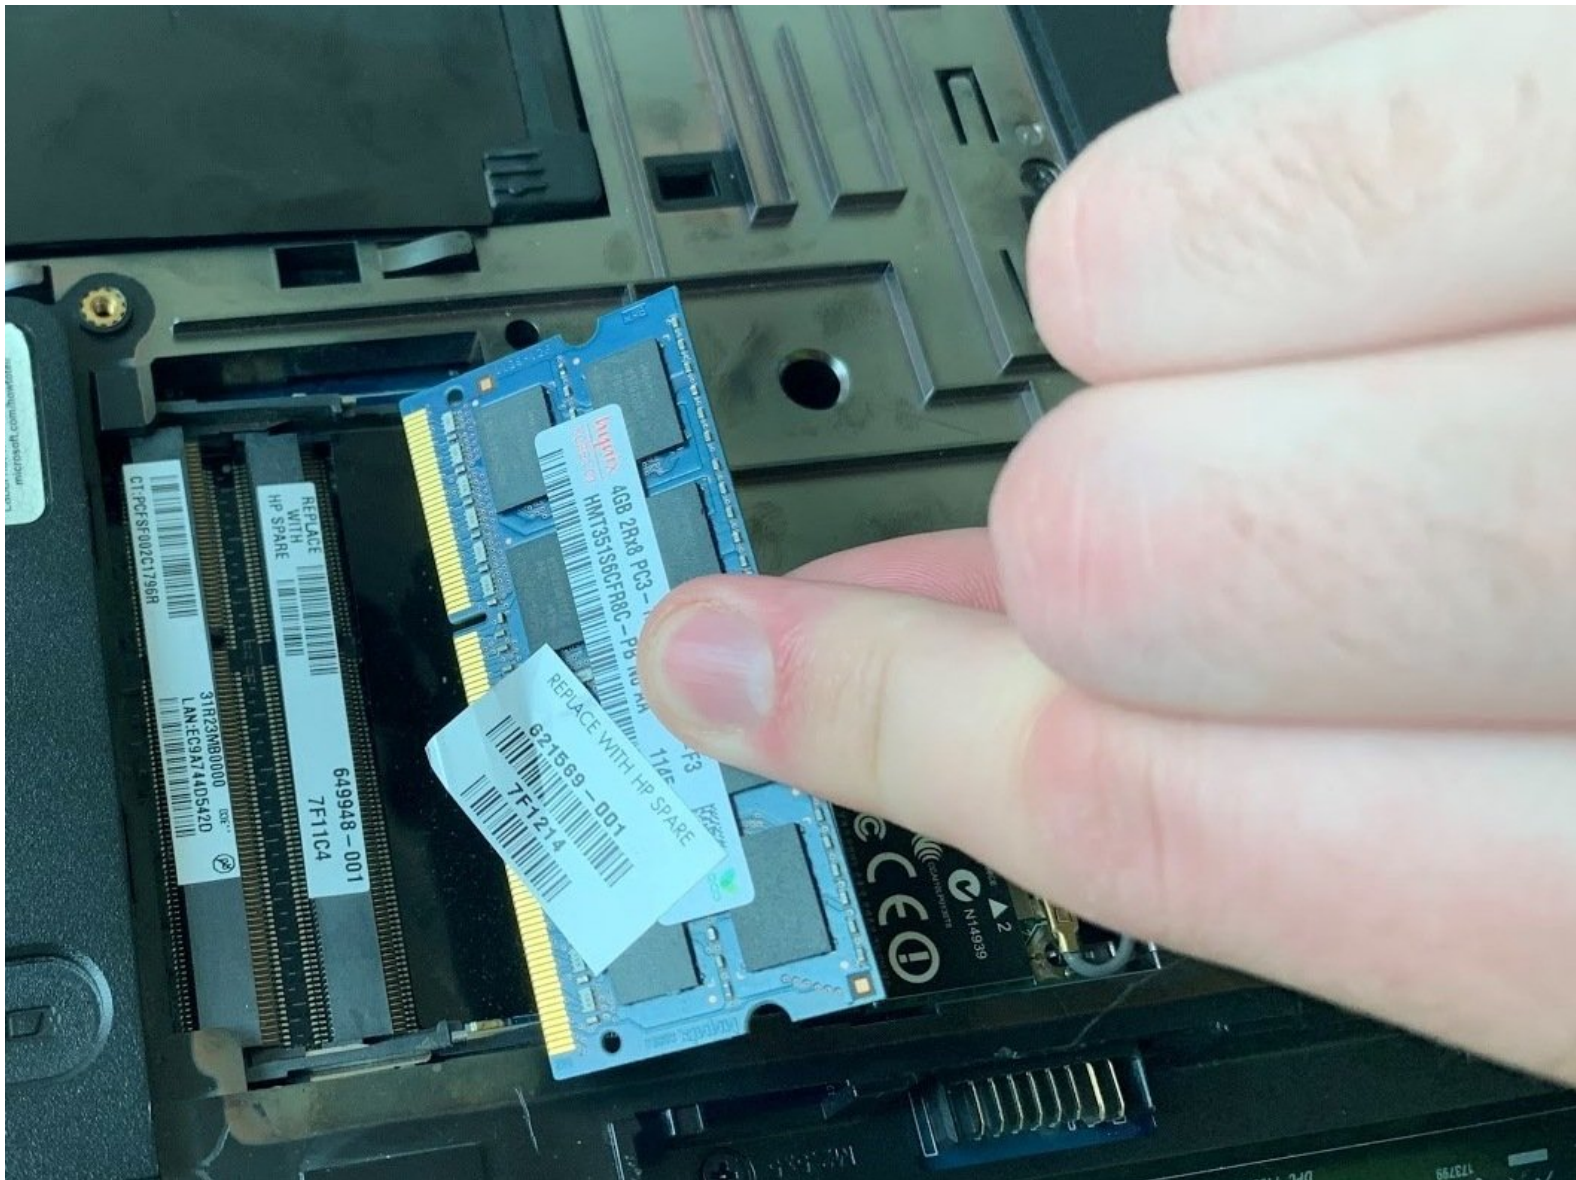

HP Pavilion g7-1365dx RAM Replacement

How to remove or replace a memory module/ RAM stick in an HP Pavilion g7-1365dx.

Written By: Rafal Szmyd



INTRODUCTION

This guide will give step by step instructions on how to remove and replace a Memory Module in an HP Pavilion g7-1365dx. Use this guide if you're having issues with not enough RAM or a faulty RAM stick which could cause the laptop to be slow, frozen, or have no screen display.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery





- ⚠ To prevent injury, make sure the laptop is powered off before removing the battery.
- Flip the laptop so that it is upside down and opens away from you. This exposes the battery, it will be centered at the bottom of the laptop .
- Push the switch above the battery towards the center of the laptop .

Step 2




- While pushing the switch, lift the battery by the side closest to the switch up and away from the laptop.

Step 3 — Service Door

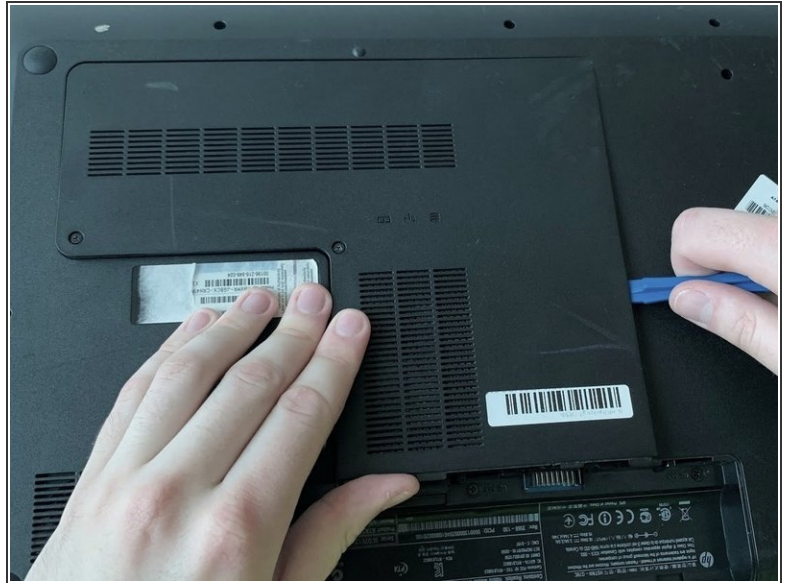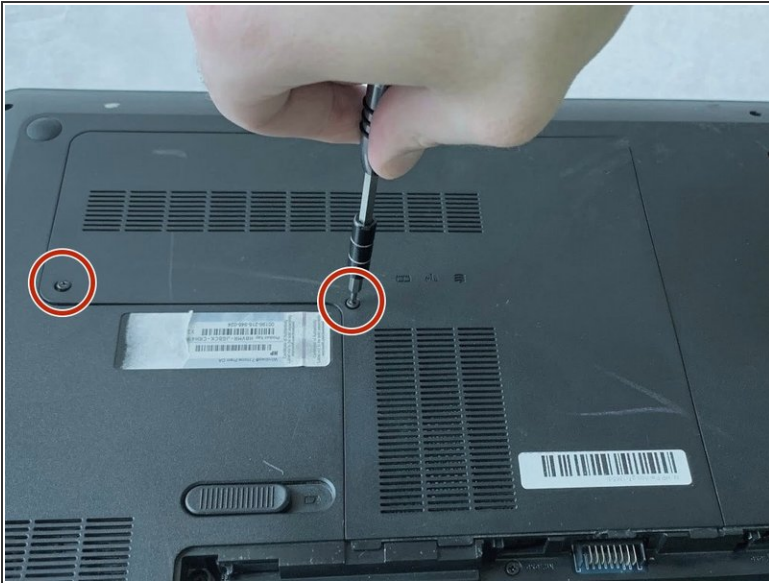


- Using a Phillips size 0 screwdriver, unscrew the 2 Phillips screws.
- Use the opening tool around the edges of the service door to loosen it and remove it.

Step 4 — RAM

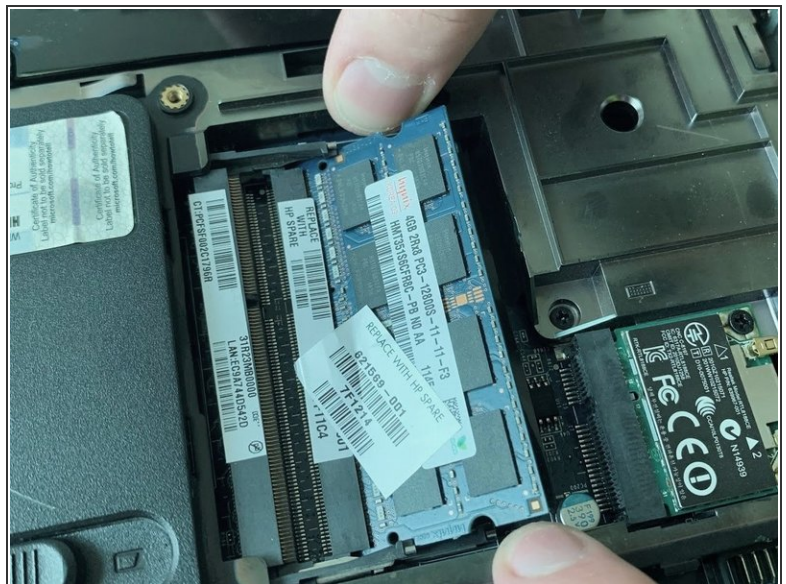

- Use your fingers to simultaneously pull apart both tabs holding the module.
- ⓘ The memory module will pop up once the tabs are pulled so that it can be removed.

Step 5

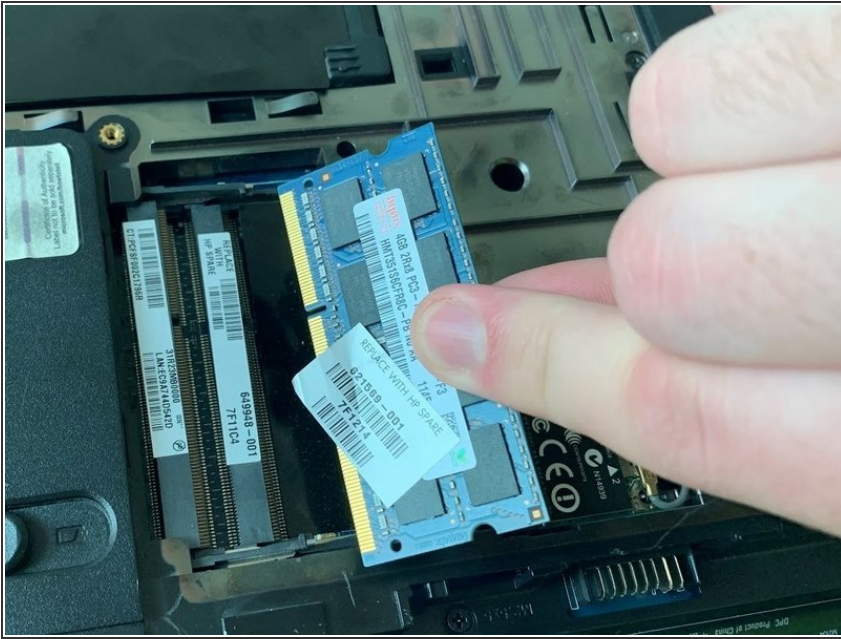

- Directly pull out the memory module as shown.

To reassemble your device, follow these instructions in reverse order.