



# Acer Aspire 7750G-6645 Back Cover Replacement

This guide will provide the steps to remove the back cover of ACER Aspire 7750G 6645 and give the access to the device parts underneath.

Written By: Thong



## INTRODUCTION

This guide show below is use to remove the back cover of ACER Aspire 7750G 6645. The guide will show the step by step to remove the back cover and give the access to the device parts underneath.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:

- [ACER Aspire 7750G-6645 Back Cover](#) (1)

## Step 1 — Back Cover

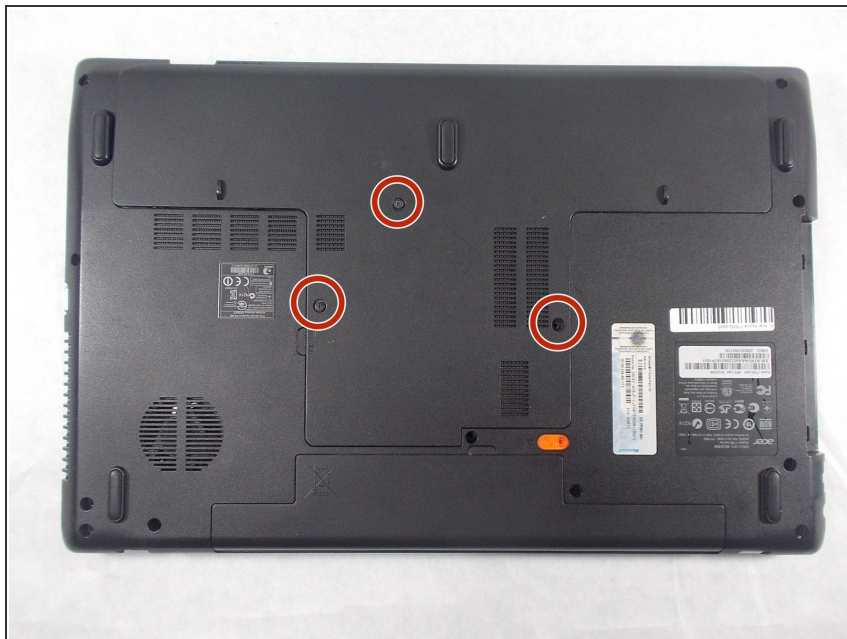

- Remove three 60mm Phillips #00 screws that are holding the bottom cover in place.

## Step 2



- Lift up the back cover of the device, you may need to use a spudger to assist.

To reassemble your device, follow these instructions in reverse order.