



Lenovo ThinkPad T440p Back Cover Replacement

The back cover is the protective layer for your...

Written By: Christian Abad



INTRODUCTION

The back cover is the protective layer for your computer that covers many components that will likely be replaced. The process is very simple and you will only need to remove two screws with a Phillips #1 screw driver.

TOOLS:

[Phillips #1 Screwdriver](#) (1)

PARTS:


[04X5403 - Lenovo Laptop Base Bottom Cover - Genuine](#) (1)

Step 1 — Battery




- Flip the laptop so that the back is facing up.

Step 2

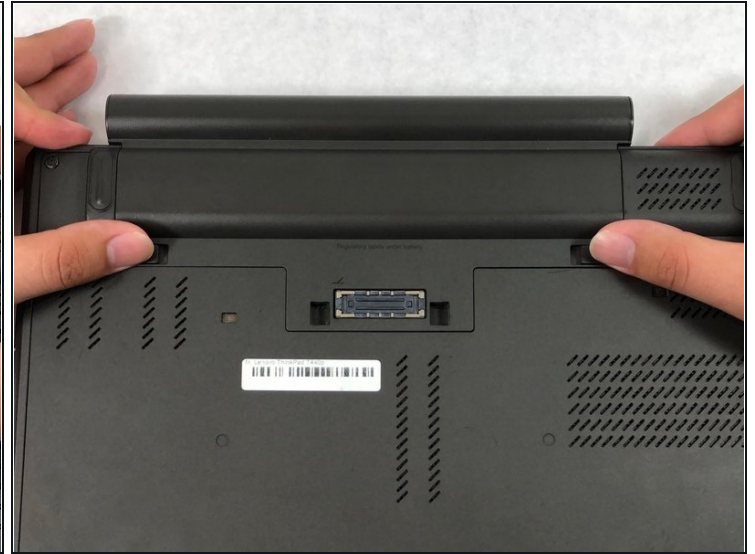


- Slide the battery latches to the unlocked position.

Step 3

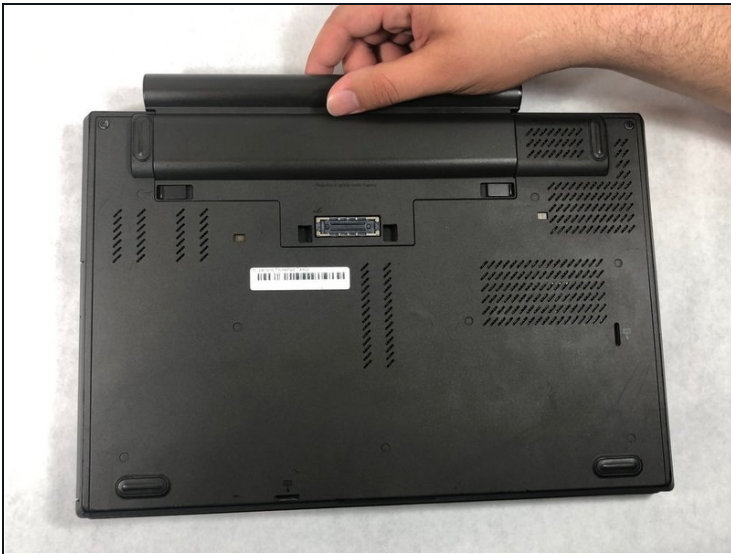

- Slide the battery pack out of the battery slot.

Step 4 — Back Cover

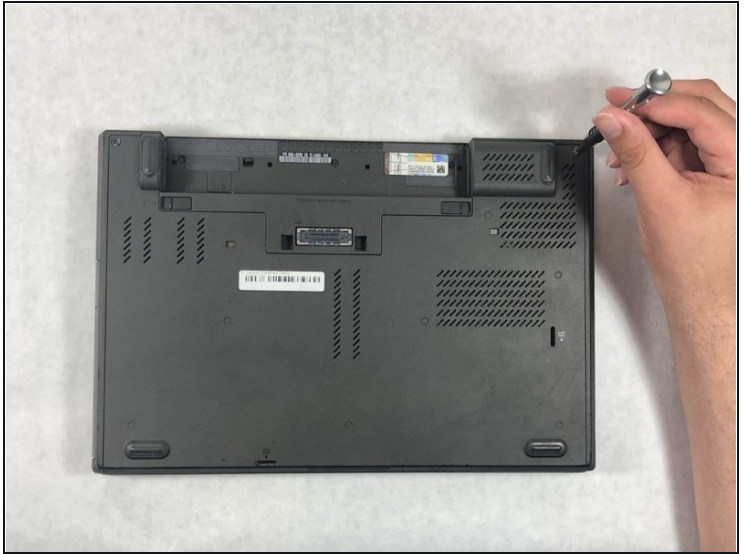

- Use a Phillips #1 screwdriver to remove the two 9mm screws holding the back cover.

Step 5



- Slide down the back cover.

Step 6



- Remove the back cover.

To reassemble your device, follow these instructions in reverse order.