



Corsair Void Pro RGB Earcup Replacement

Overtime, earmuffs for headphones need to be...

Written By: Elizabeth Claypool



INTRODUCTION

Overtime, earmuffs for headphones need to be replaced. Follow these simple steps to learn how to replace your earmuffs. If you plan to replace the earmuffs, a replacement can be found form the Corsair site. It is also important to know how to disassemble the earmuffs in order to do most replacements or repairs for the headphones.

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #0 Screwdriver](#) (1)

PARTS:

[Corsair RGB Earpads](#) (1)

Step 1 — Earcup



- Carefully remove earmuff from headphones by getting a grip under the earmuff cushion and peeling up over the lip that keeps it in place.


Step 2



- Using the Phillips #0 screwdriver, unscrew the seven 6.4 mm screws holding the black speaker cover in place.

ⓘ If you are disassembling the lefthand earmuff, there will be eight 6.4 mm screws to remove.

Step 3

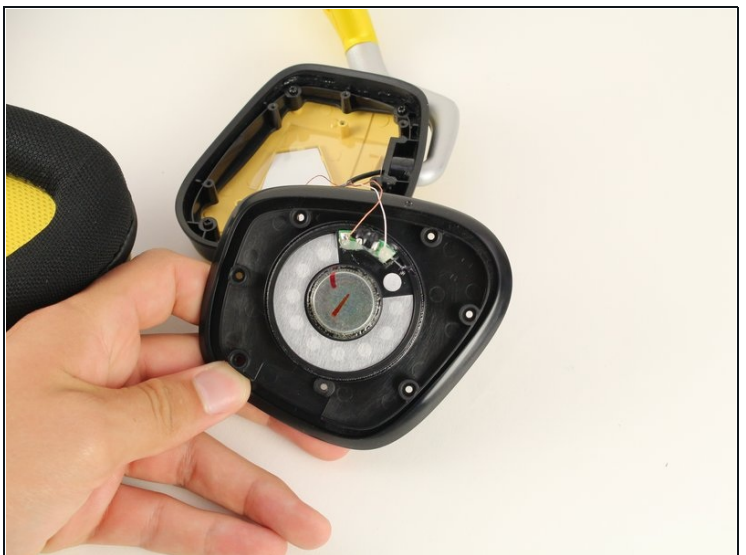

- Remove and set aside the black panel, taking care to keep the wires attached.

ⓘ The panel should lift up without much force. If the panel does not budge, carefully use the iFixit plastic opening tool to dislodge the piece.

To reassemble your device, follow these instructions in reverse order.