



Opening the Galaxy Watch

This guide shows how to open the back cover of the Samsung Galaxy Watch.

Written By: Tobias Isakeit



INTRODUCTION

Use this guide to open the back cover of the Samsung Galaxy Watch.

TOOLS:

- [Tri-point Y00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Opening Procedure



- Remove the four Tri-point #00 screws (4.2 mm length) on the backside of the watch.

Step 2



- Use an opening tool to get between the back cover and the metal housing of the watch.
- Carefully pry the plastic back cover open.


⚠ Don't remove the back cover yet. There is a flex cable running to the core assembly inside.

Step 3



- Lay down the watch and lift the back cover to access the sensor connector on the motherboard.

Step 4

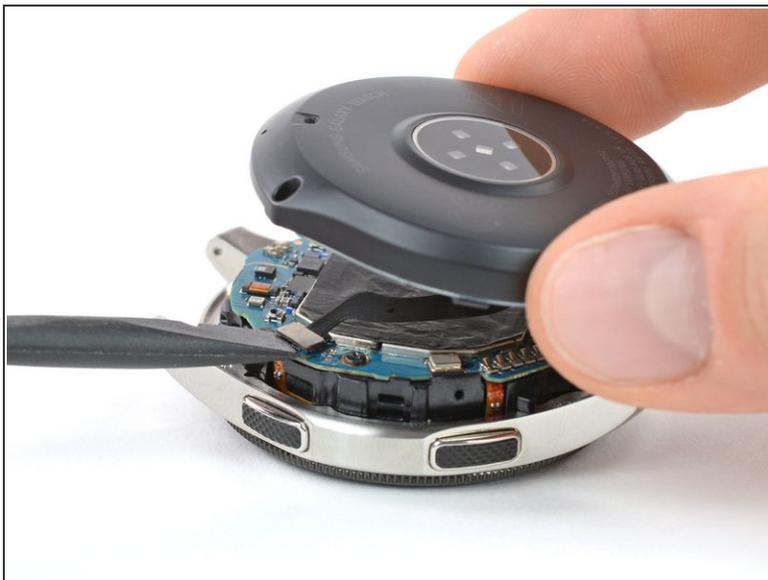

- Use a spudger to disconnect the sensor flex cable from the motherboard.

Step 5



- Remove the back cover.
- ☑ When closing the watch make sure the rubber gasket is undamaged or replace it with a new one.

To reassemble your device, follow these instructions in reverse order.