




Samsung Notebook 7 Spin NP740U3MK01US

RAM Replacement

This guide will show users how to replace or upgrade RAM in their Samsung Notebook 7 Spin NP740U3MK01US.

Written By: William Edwards

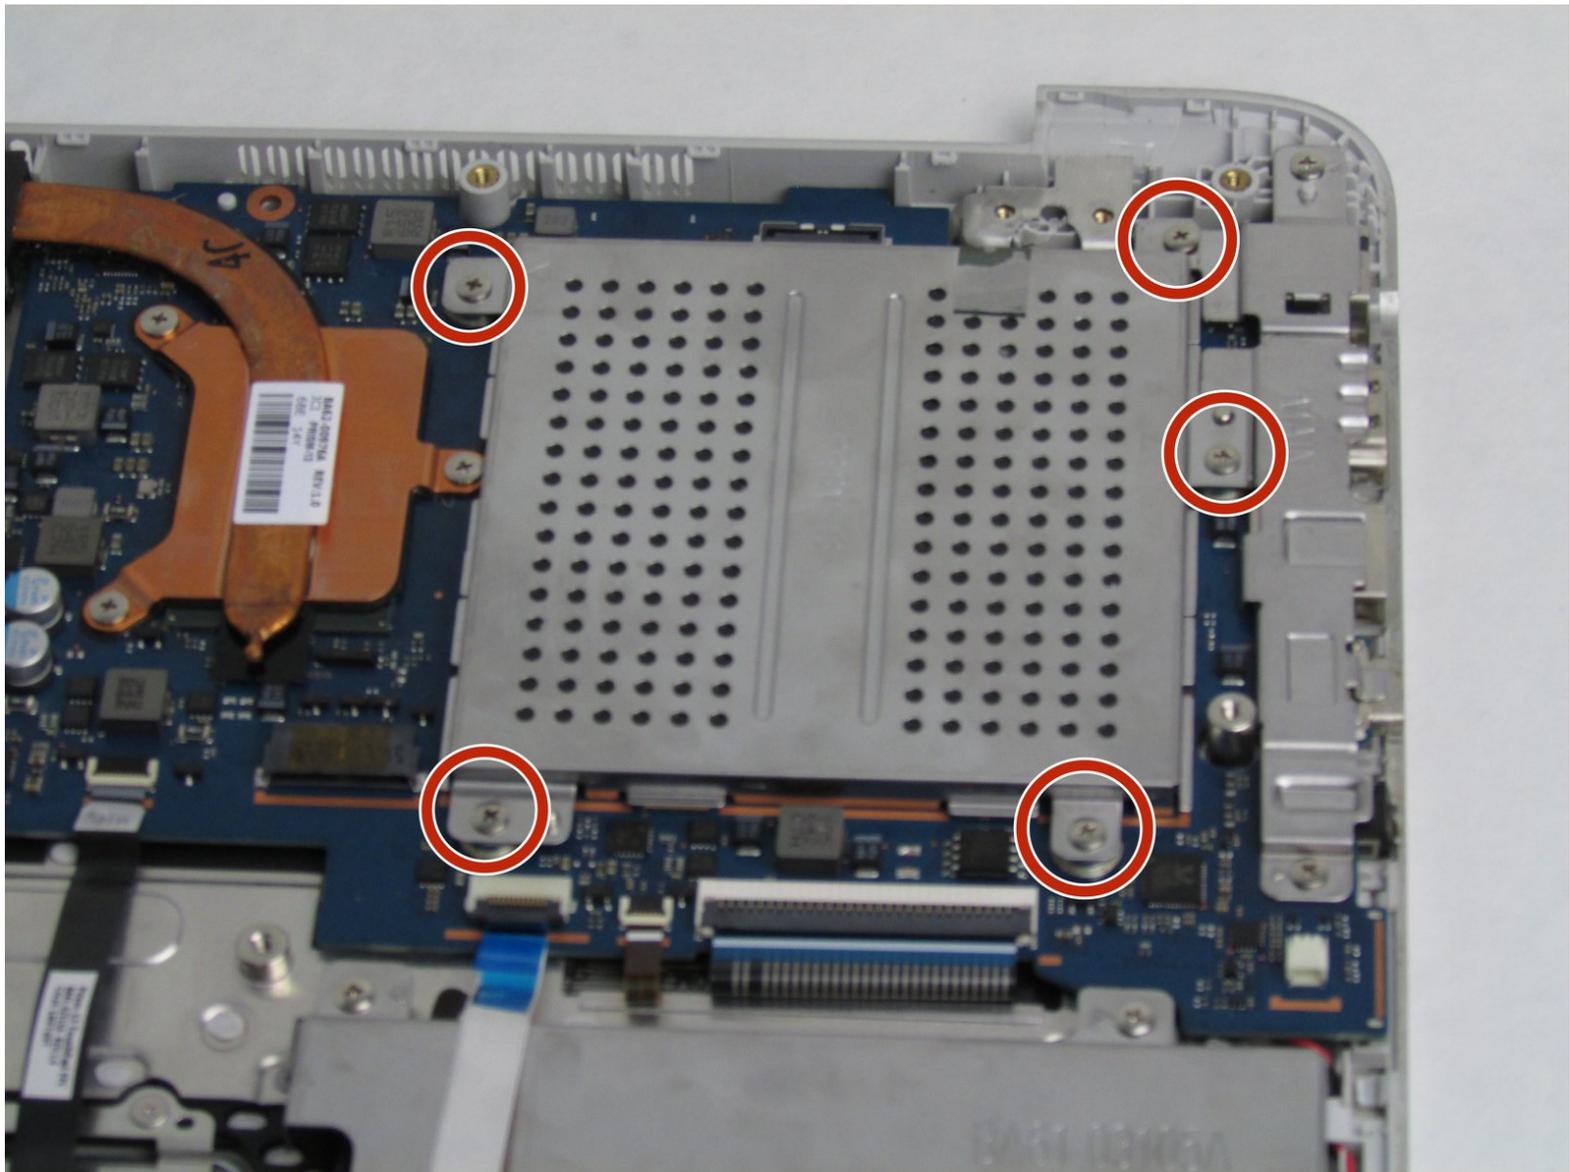

INTRODUCTION

RAM replacement for the Samsung Notebook 7 Spin NP740U3M-KO1US. RAM will potentially need to be upgraded during the normal life cycle of your device. RAM sticks for replacement can be found in the replacement parts link in the Additional Information section on the device page.

If you're experiencing any issues with your RAM, you may need to get it replaced. Follow the instructions in this guide to successfully remove the RAM from the device.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- Flip your laptop over so that the back is face up.

Step 2




- Use a Phillips #00 screwdriver to remove the four 6.5mm screws and the six 4.5mm screws that secure the back plate.

Step 3

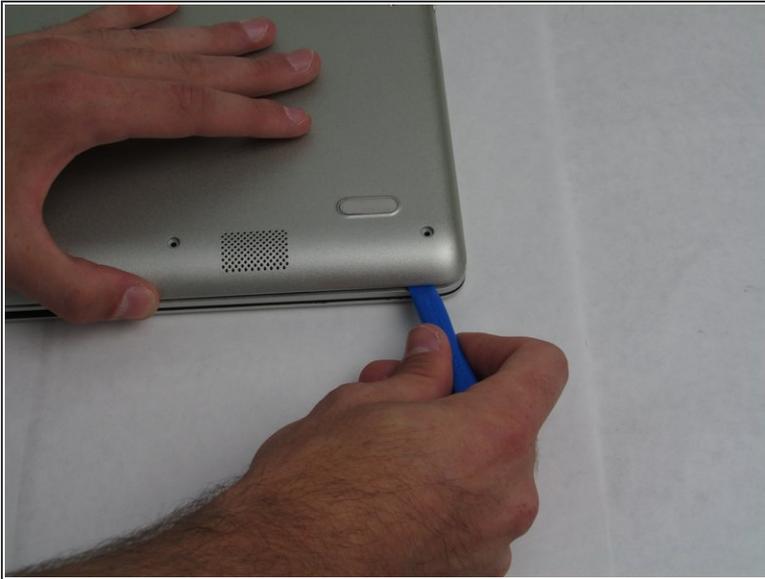

- Use a plastic opening tool to remove the back plate from the laptop.
- ⓘ It is recommended that you start from a corner then run the tool along the edge of the back plate.

Step 4

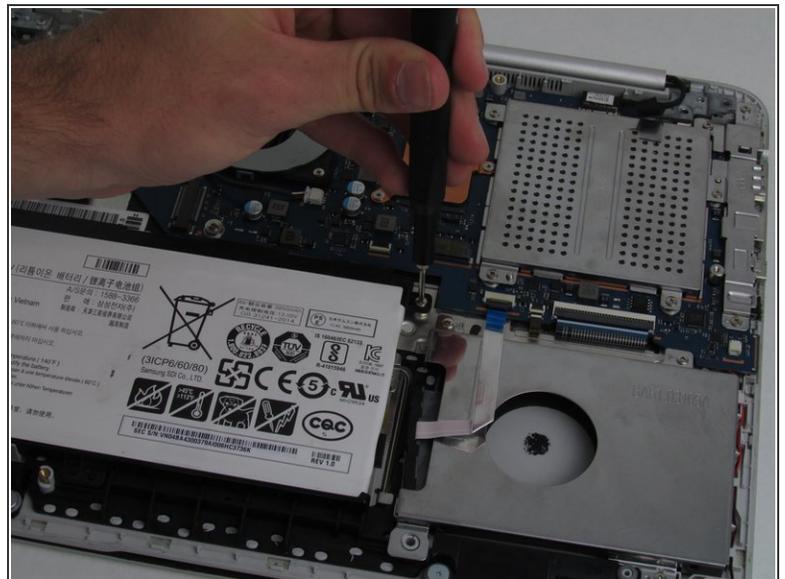


- Use a Phillips #00 screwdriver to remove the three 4.5 mm screws holding the battery in place.

Step 5




- Use a spudger to pry the battery connecting cable from the laptop and remove the battery.
- ⚠ Using the metal spudger may severely damage the internal components in your device.

Step 6 — RAM

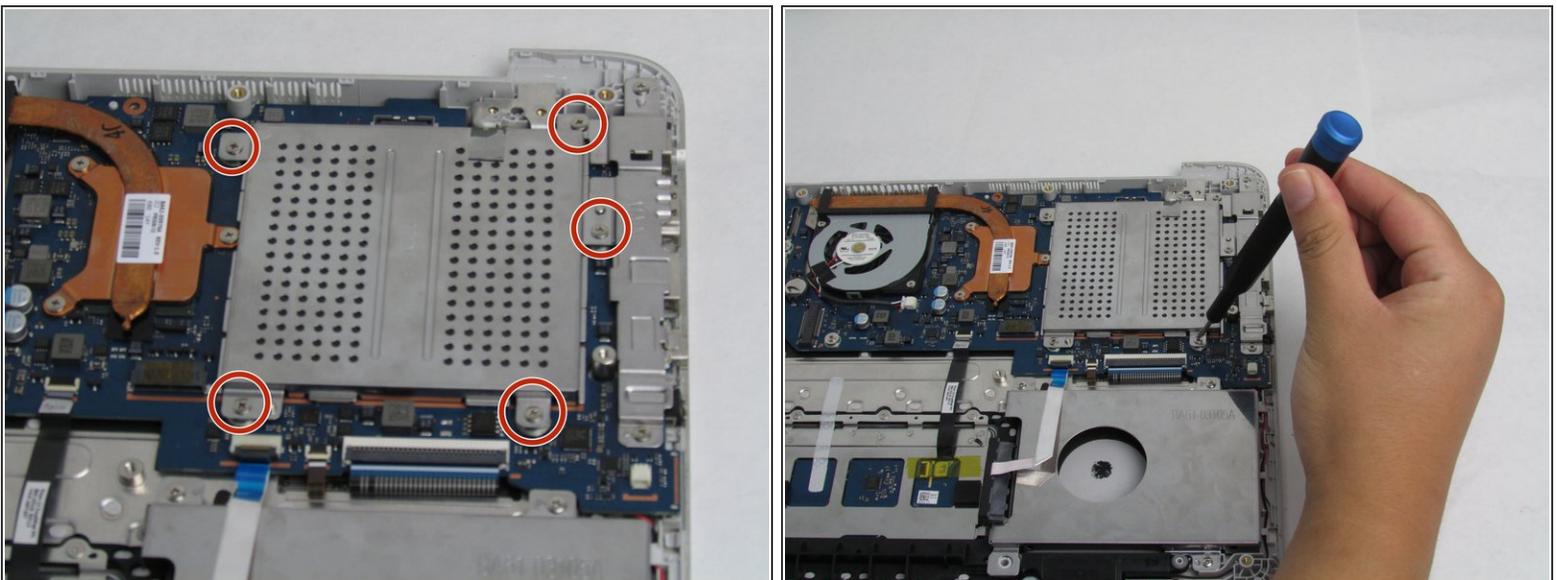

- Use the Phillips #00 screwdriver to remove the five 4.5 mm screws.

Step 7

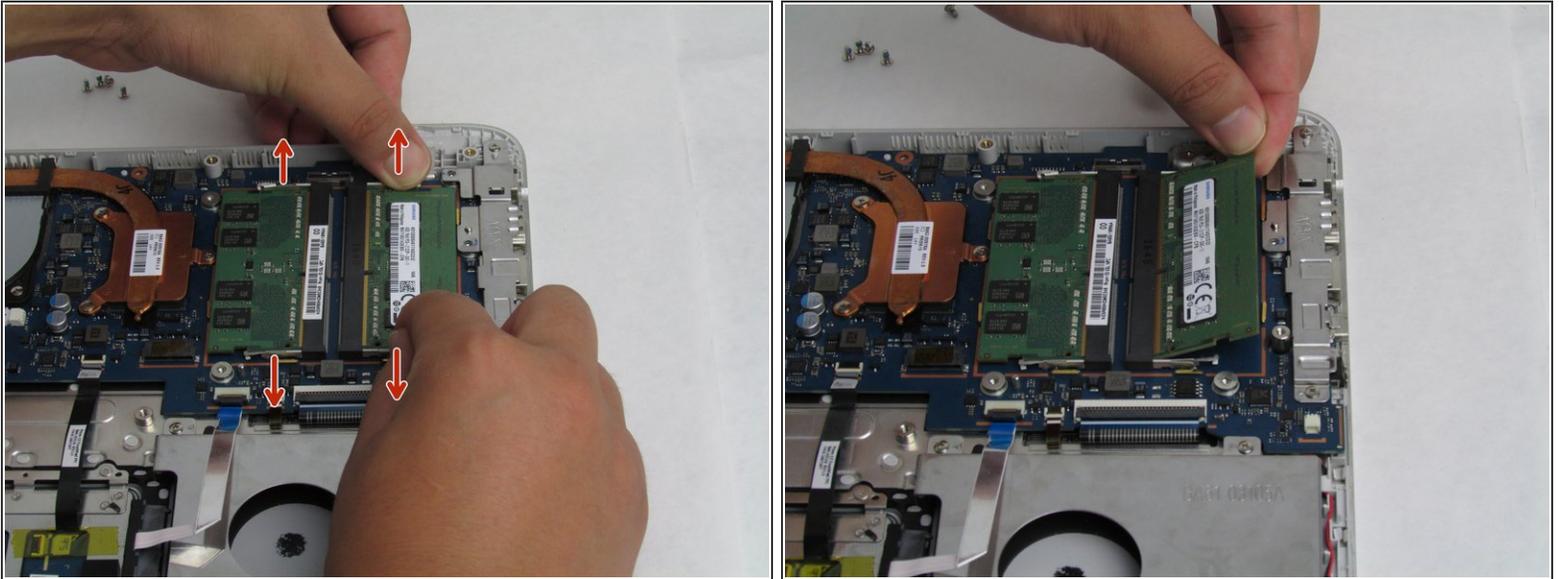

- Push these clamps outwards away from the RAM. The RAM should pop out.
- Remove the RAM from the device. Repeat the same step for any additional RAM.

To reassemble your device, follow these instructions in reverse order.