



Asus Q503UA Battery Replacement

This guide will demonstrate how to replace the battery of an Asus Q503UA Laptop.

Written By: Gilberto Coronado



INTRODUCTION

This guide is designed to help you replace the battery of an ASUS Q503UA-BSI5T17 laptop. In the process of replacing the battery, you will be allowed to easily access the internal components of the laptop. Accessing the internal components will allow you to do internal maintenance such as replacing the hard drive or the motherboard of the laptop.

Replacing the battery may lead to damaging the internal components, so be careful as you follow the steps. It may be advantageous to read through the guide once before beginning to familiarize yourself with the process. Also, be sure to power off your device prior to starting the guide.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
-

Step 1 — Battery Replacement



- Flip the computer upside down. In order to ensure that the correct side is up, you should be able to read the sticker that indicates the serial number on the bottom.

Step 2

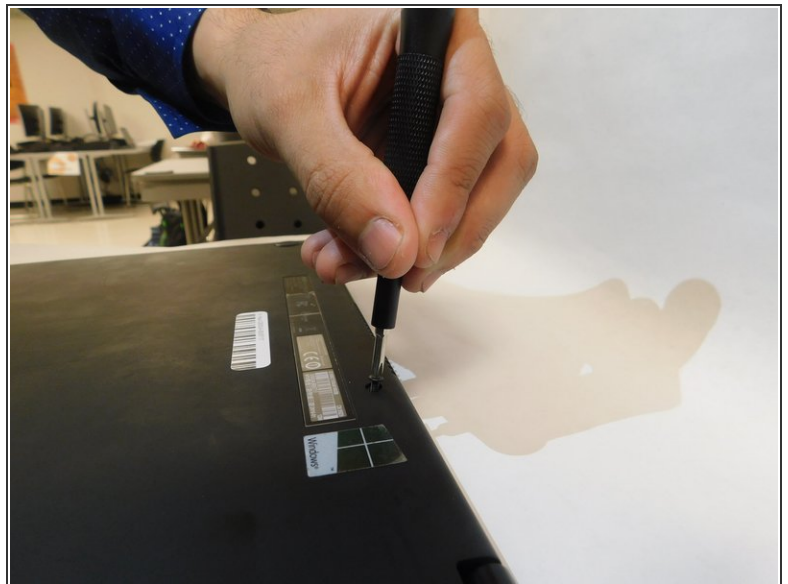

- Remove the ten circled screws along the perimeter of the laptop with a Phillips #0 screwdriver.

Step 3



- Starting from the top right corner, use a plastic prying tool to separate the cover from the laptop. Use light pressure to prevent the plastic from breaking.
- ⓘ You should feel the frame coming loose. If necessary, use spacers to keep the frame from locking back into place.
- Repeat the above step around the laptop until you are able to lift the cover.

To reinstall the back cover, follow these instructions in reverse order.