


Keenovo Bed Heater Installation

This guide overviews the installation of a Keenovo Bed Heater onto a Creality CR-10 S 500.

Written By: Tiny Machines 3D

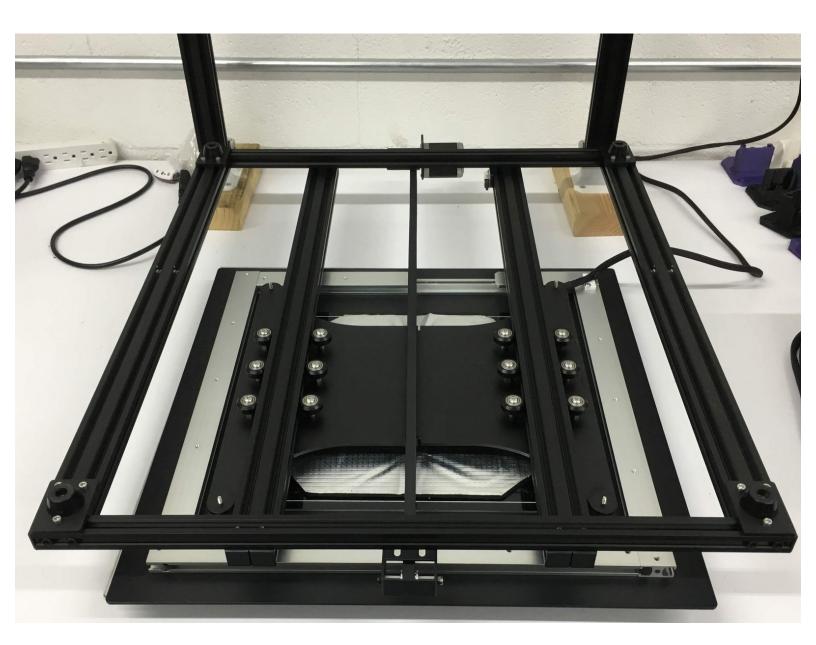





TOOLS:

- 2mm Hex Key (1)
- 2.5 mm Hex Key (1)
- Flush Wire Cutters (1)
- Squeegee (1)
- Isopropyl Alcohol (1)
- Paper Towels (1)
- High Temp (red) RTV Silicone (optional) (1)

Step 1 — Disassembly 1a.

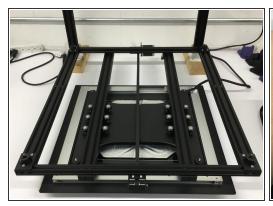




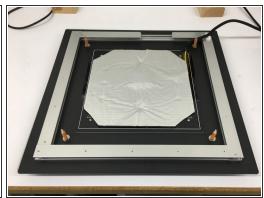

Insert wisdom here.

Step 2 — Disassembly 1b.




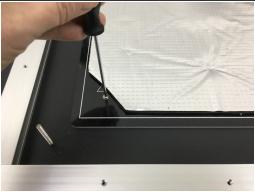




Step 3 — Disassembly 1c.




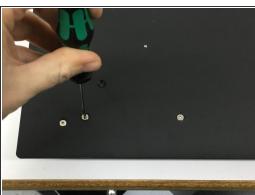

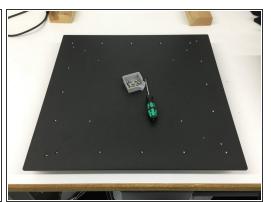

Insert wisdom here.


Step 4 — Disassembly 1d.

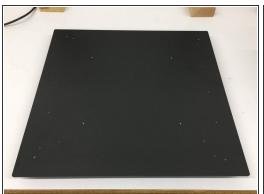







Step 5 — Assembly 1a.

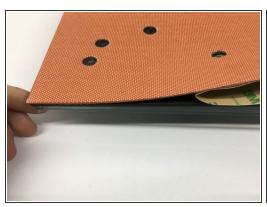


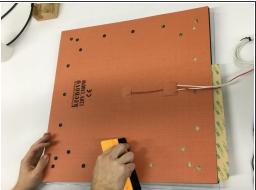

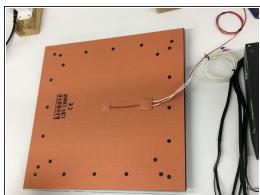


Insert wisdom here.

Step 6 — Assembly 1b.

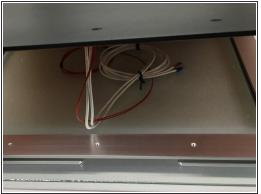





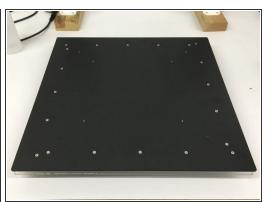

Step 7 — Assembly 1c.




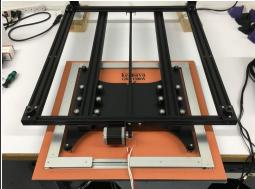

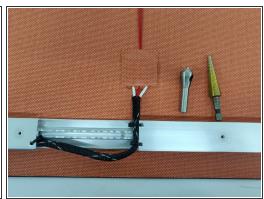


Insert wisdom here.

Step 8 — Assembly 1d.

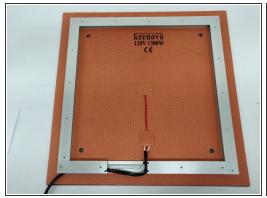



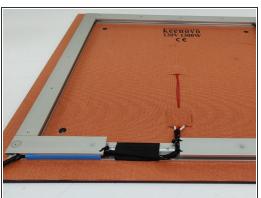

Step 9

