




Toshiba Satellite C55D-A5108 Main Battery Replacement

This guide will explain how to remove the Main Battery in the Toshiba Satellite C55D-A5108 and replace it with a new one.

Written By: Geoffrey Souza

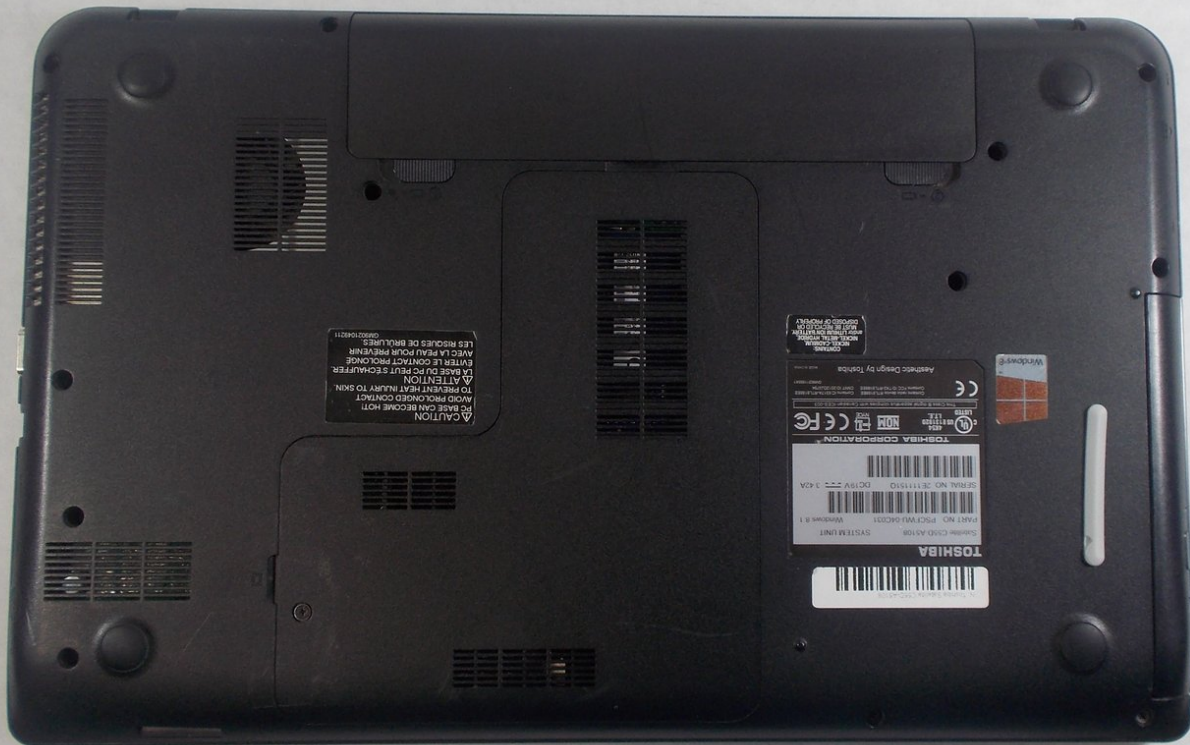

INTRODUCTION

You may want to proceed with this replacement guide if your Toshiba Satellite C55D-A5108 will no longer turn on after charging or if your battery is dying much quicker than normally.


For this replacement guide, please make sure you do not touch the contacts on the battery, as this may cause build up of particles on the contacts preventing proper connection. Also check to make sure the computer is not just out of battery life before attempting this replacement. If you do not feel confident with replacing the battery yourself please find someone that can help you with the process.

Step 1 — Battery




- Flip over the device so that the model stickers are facing up.

Step 2

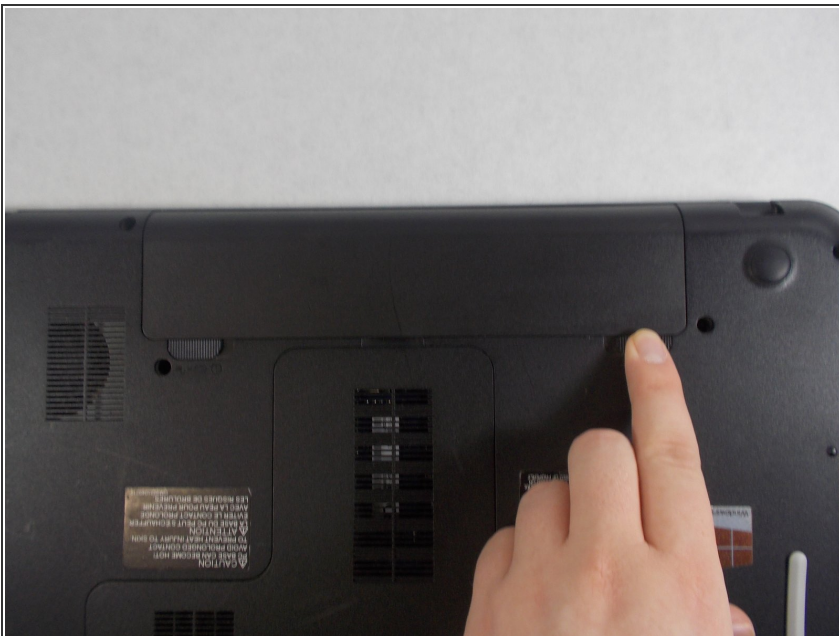

- Move the right notch to the unlock position by sliding it to the right.

Step 3

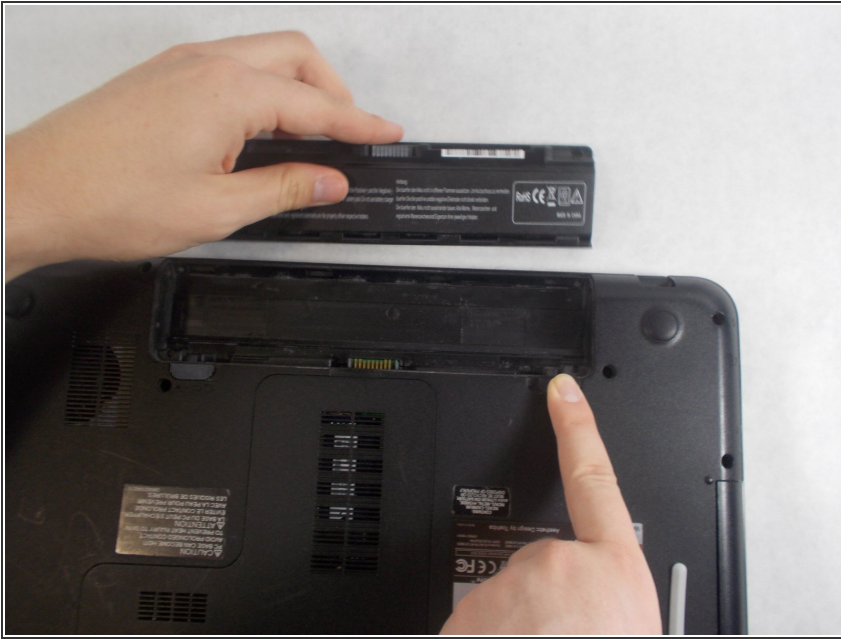

- Hold the left notch in an unlocked position with one hand and use the other hand to slide the battery out.

To reassemble your device, follow these instructions in reverse order.