



Toshiba Satellite C55D-A5108 Back Cover Replacement

Written By: Kristen Gismondi



TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Battery



- Flip over the device so that the model stickers are facing up.

Step 2




- Move the right notch to the unlock position by sliding it to the right.

Step 3



- Hold the left notch in an unlocked position with one hand and use the other hand to slide the battery out.

Step 4 — Hard Drive

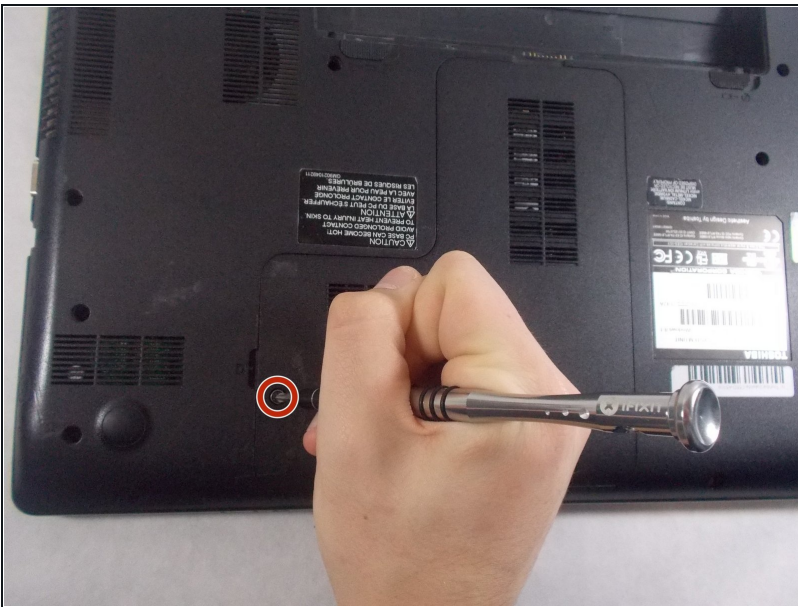


- Remove the Phillips #0 screw from the memory cover.

Step 5



- Grasp the side of the hard drive opposite the circular battery, and carefully pull out the drive by moving it away from the circular battery.

Step 6 — Back Cover

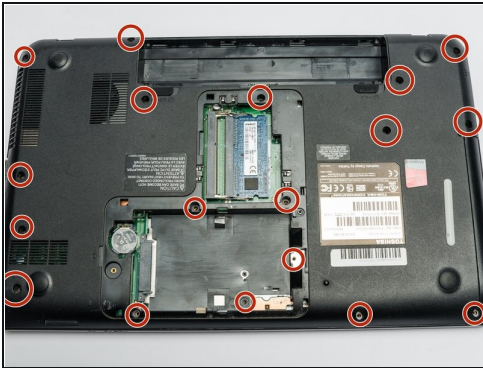

- Remove the 16 screws holding the back cover with a Phillips #0 screwdriver.
- Pry the cover off with an opening tool.
- Gently remove the cover with your hands and place to the side.

To reassemble your device, follow these instructions in reverse order.