



# Lenovo Yoga C930-13IKB Battery Replacement

## With this guide, replacing your Lenovo Yoga...

Written By: Hanna Lazkani



# INTRODUCTION

With this guide, replacing your Lenovo Yoga C930-13IKB battery is quick and simple. Batteries generally deteriorate over time or have complications within their life span. This can result in low battery life and difficulty in holding charge. Check out this [troubleshooting guide](#) for more information on what might be wrong with your battery.

This guide is required for when your battery needs replacing due to quickly dying, failing to charge, or an unresponsive battery. You will remove the back cover first to access the battery, and then remove all fasteners and connections that keep the battery in place.

**For your safety, discharge your battery below 25% before disassembling your device.** This reduces the risk of a dangerous thermal event if the battery is accidentally damaged during the repair. If your battery is swollen, [take appropriate precautions](#).

---

## TOOLS:

[T5 Torx Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)  
[Phillips #00 Screwdriver](#) (1)

## PARTS:

[Lenovo C930-13IKB Battery](#) (1)

---

## Step 1 — Back Cover



- Flip the device over so that the underside is facing up.
- Remove the six 3.5 mm T5 Torx screws.

## Step 2



- Pry off the back cover using the plastic opening tool.
- Loosen the back cover in multiple spots using the opening tool, then remove the whole back.
- ① You may have to run the plastic tool along the edges until you find a small gap to separate the back cover from the laptop.

**⚠ Do not use a metal tool when working with your device.**



### Step 3



- Carefully lift the cover off with your hands.


### Step 4 — Battery



- Unplug the battery from the motherboard by pinching the cables with your fingers and tugging out with force.

① Use the spudger for assistance.

## Step 5

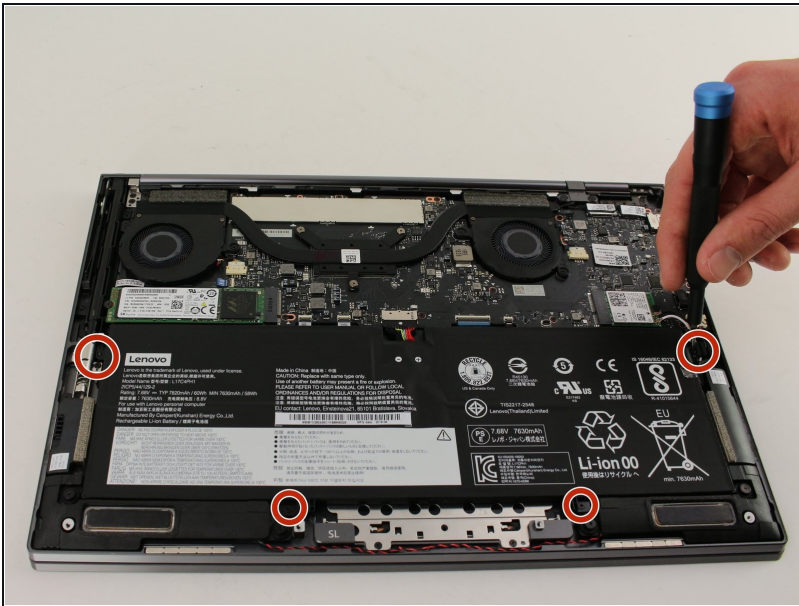

- Unscrew the four 3mm screws with a Phillips screwdriver.

## Step 6



- ① The battery is still held in place with two stretch-release adhesive strips, [similar to ones found in an iPhone](#).
- Use your fingers to pry up the clear plastic pull-tab for one of the stretch release adhesives.
- Grasp the pull-tab and slowly pull away from the battery at a shallow angle. The adhesive strip will stretch to many times its length and slowly release from underneath the battery.
- Repeat the procedure for the second strip on the opposite side of the battery.
- ⚠ Be careful not to bend the battery. Breaking the battery is dangerous.
- Remove the battery with your hands.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.