




Fisher Paykel Neopuff Manometer Replacement

How to replace the manometer on a Fisher Paykel Neopuff.

Written By: Tyler Lin

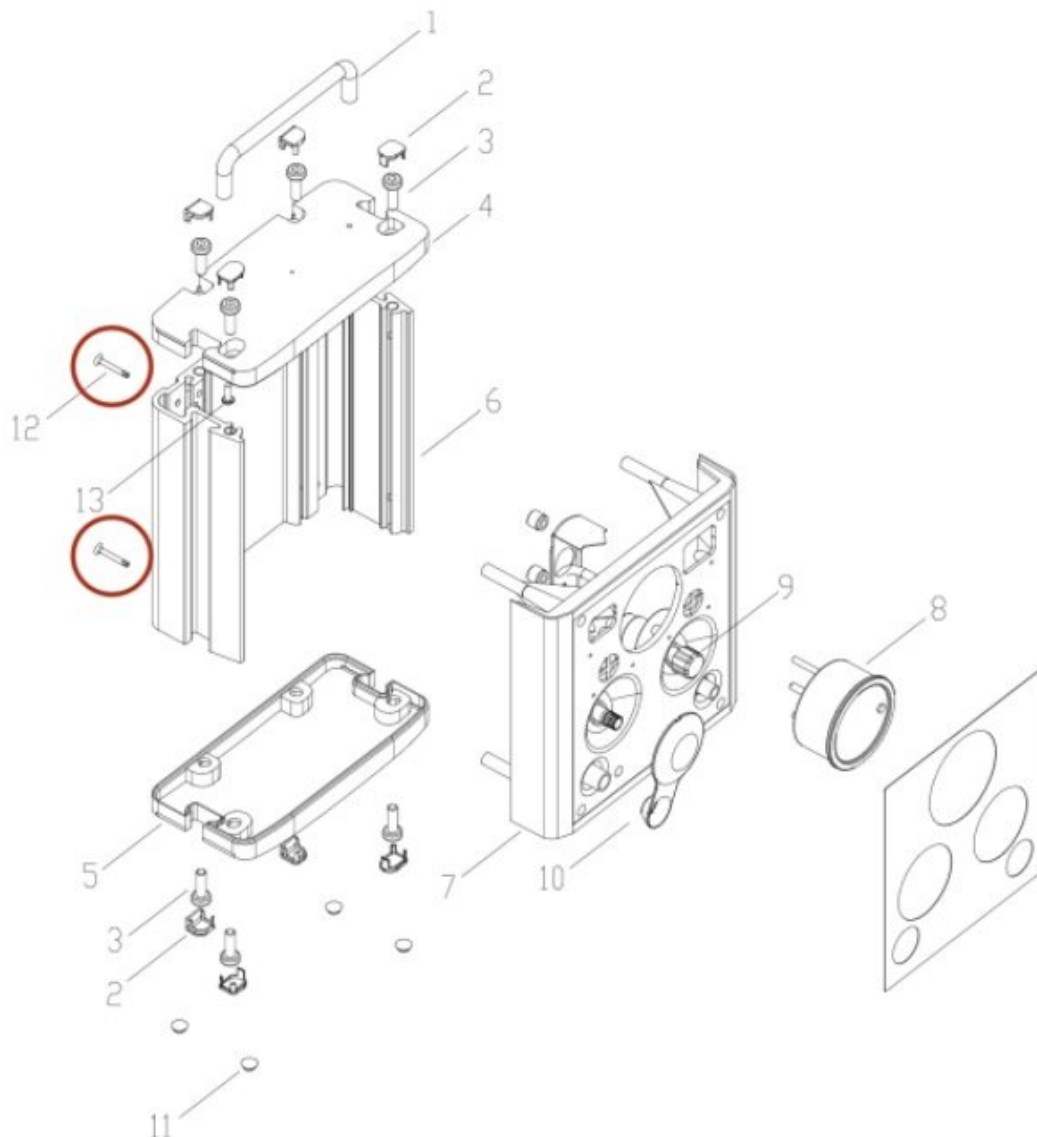

INTRODUCTION


Please refer to page 7 of the device's [document|6918|Technical Manual] for source information.



TOOLS:

- [Philips head screwdriver](#) (1)
-

Step 1 — Manometer

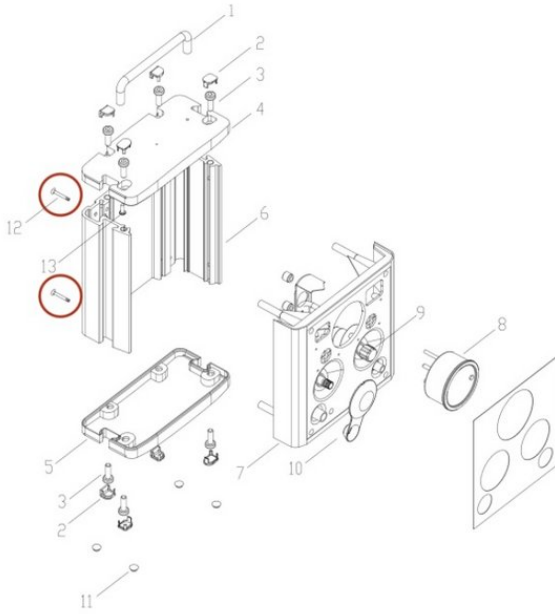


- Remove the back cover, fixed by four screws.

Step 2



- Disconnect the tube from the manometer.

Step 3

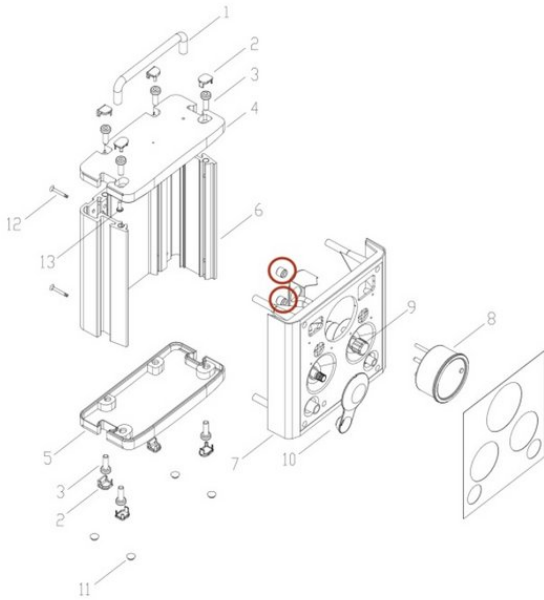

- Remove the manometer by unscrewing the two retaining nuts.

Step 4



- Fit the new manometer into the front panel.

Step 5



- Tighten the retaining nuts.

Step 6



- Reconnect the manometer tube.

Step 7



- Refit the front panel to the back cover with the four screws.

Step 8



- Carry out the manometer performance test. It is recommended to record the lot number from the box label of the replacement manometer on the maintenance checklist.

To reassemble your device, follow these instructions in reverse order.