



# How to Assemble the iMac Cardboard Service Wedge

Assembling the iFixit iMac Cardboard Service Wedge for use during iMac repairs.

Written By: Craig Lloyd



## INTRODUCTION

Follow this guide to assemble the iMac Cardboard Service Wedge, which ships unfolded and flat. Once assembled, this product is not designed to be unfolded.



### PARTS:


- [iMac Intel 21.5" Cardboard Service Wedge](#) (1)
- [iMac Intel 27" Cardboard Service Wedge](#) (1)

## Step 1 — Fold the tabs



- With the blank side facing you, fold the two tabs inward at a 90-degree angle.

## Step 2 — Fold the outer side flaps

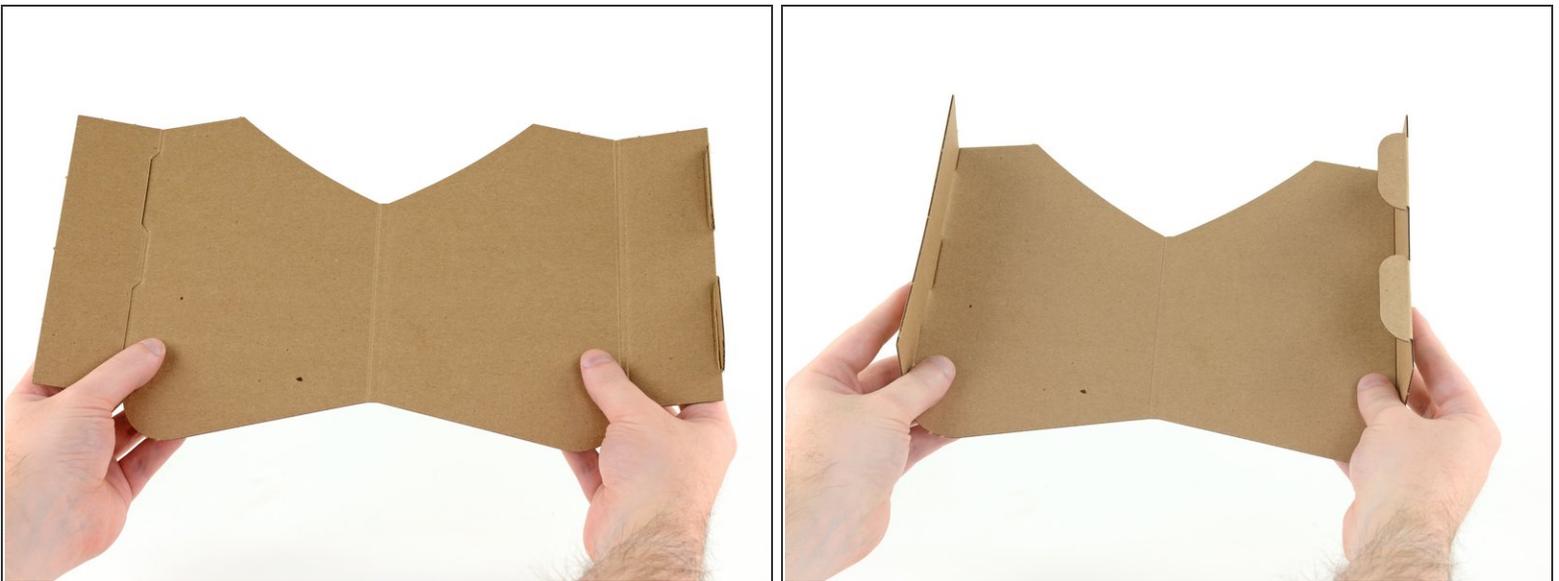

- Fold the two outer side flaps inward at a 90-degree angle.

### Step 3 — Fold it in half



- Fold the two halves together, using the crease in the center as the folding point.
- Overlap the two outer side flaps, making sure the flap with the two small tabs is on top.

### Step 4 — Insert the tabs into the slots



- Insert the two tabs into the slots along the fold.
- ⓘ Make sure the flared edges on either side of the tabs are inserted completely into the slots so that they lock in place and don't slide out.

## Step 5 — Place it under your iMac



- Your iMac Cardboard Service Wedge is ready to go!
- Insert the Service Wedge under the iMac's display to hold it in place while you perform repairs on your iMac.