



# Dreamer Autoshade Motor Set Screw Adjustment


Written By: David



 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
  - [Flathead Screwdriver](#) (1)
-

## Step 1 — Remove motor hub fasteners

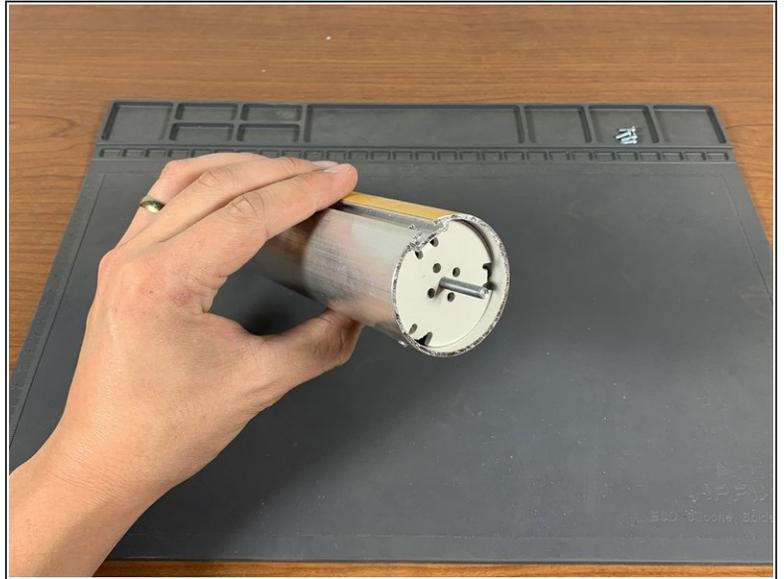

- Remove the four Phillips head screws that fasten the motor hub to the tube adapter.

## Step 2 — Remove driver bearing cap

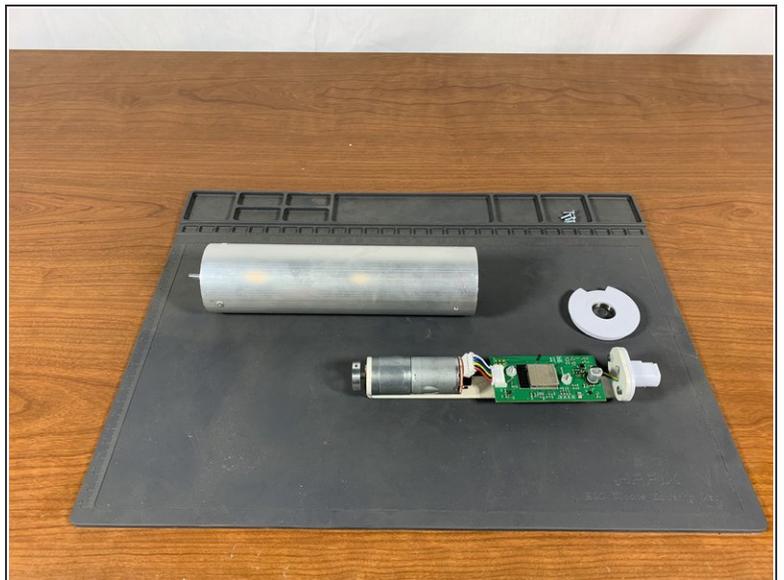

- Using a flathead screwdriver, pry the bearing cap from the tube.

### Step 3 — Tighten Motor Set Screw



- Move the hub to the edge of the shaft so it is flush, and tighten the set screw using a T5 screwdriver bit.
- The hub should fit snugly on the shaft, unable to rotate freely.
- Optional- Add a drop of thread locking liquid to permanently hold the set screw in place after tightening.

To reassemble your device, follow these instructions in reverse order.