


Compaq Presario CQ60 Display Assembly Replacement

Written By: Mike B



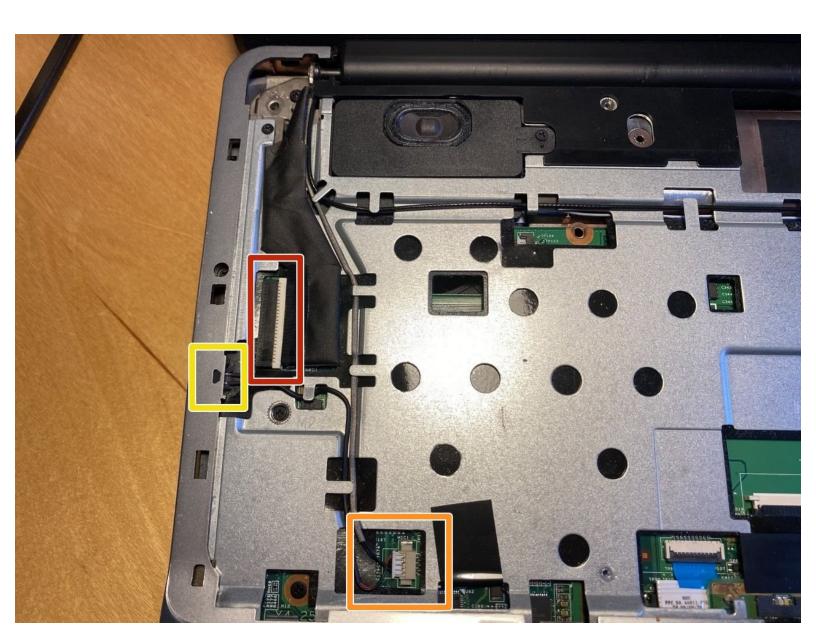

- Phillips #0 Screwdriver (1)
- Spudger (1)
- Phillips #1 Screwdriver (1)

Step 1 — Slide battery latch





- Slide battery latch to left
- Simultaneously lift battery

Step 2







Lift and remove battery

Step 3 — Unscrew keyboard





Remove 3x M2.5x4mm

Step 4 — Lift keyboard







- Lift the keyboard in the middle with a spudger
- Remove 4 clips by bending keyboard in middle, do not force the clips at the sides
- Do not remove the keyboard fully, it is attached via a ribbon cable

Step 5 — Detach ribbon cable







- Lift keyboard slightly
- Push each side of ribbon cable connector
- Fully remove keyboard

Step 6 — Remove screws









- Remove 2x Phillips M2.5x8mm screws from under the display
- Remove 4x Phillips M2x2.8mm screws from the battery compartment

Step 7 — Disconnect ribbon cable

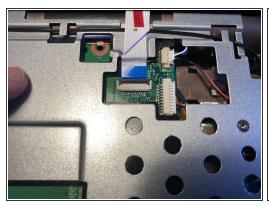


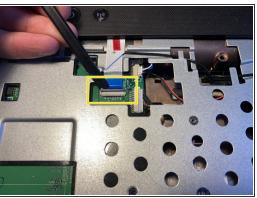



- Turn over the laptop
- Use a spudger to lift the ribbon cable hinged clip
- Pull the ribbon cable out of the connector


Step 8

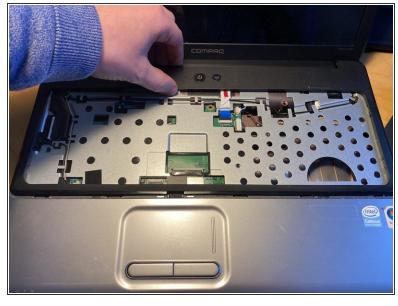



- Lifting the bezel by the screen
- Slide the bezel back towards the screen to release it from the clips

Step 9 — Remove bezel

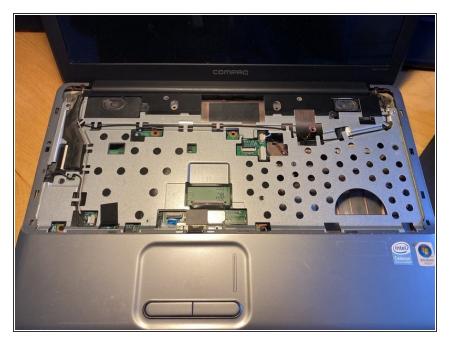

Fully remove bezel

Step 10 — Disconnect left hand cables





- Disconnect the display cable
- Disconnect the microphone connector
- Pull out the microphone LED from it's clip
- Unroute the cables from their holders

Step 11 — Wifi Antennas







- Pull the wifi antennas through from the back of the laptop
- Unroute the antenna cables from their guides

Step 12 — Remove display assembly







- Remove 4x Phillips #1 M2.5x8mm screws from display hinges
- Carefully lift display out making sure no cables are snagged

To reassemble your device, follow these instructions in reverse order.