



Dell Latitude E7450 CMOS (CR2032 coin-cell time battery) Replacement

Written By: Hezekiah Brown


TOOLS:


[Phillips #0 Screwdriver](#) (1)

PARTS:

[CR2032 Lithium Battery](#) (1)


Step 1 — Remove battery and base cover

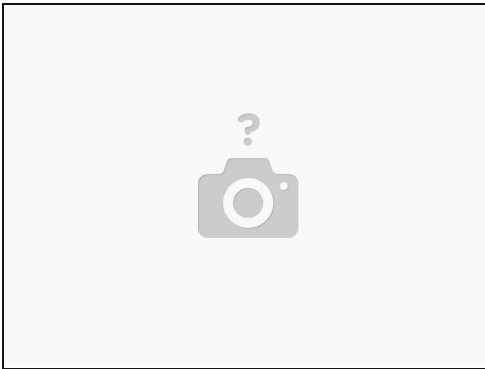

 Before performing this task, make sure you turn off the computer and disconnect every external drive from it, whether it's a USB drive, power charger, or wireless adapter.


- Remove battery and base cover from the computer.

Step 2 — Take off coin-cell battery

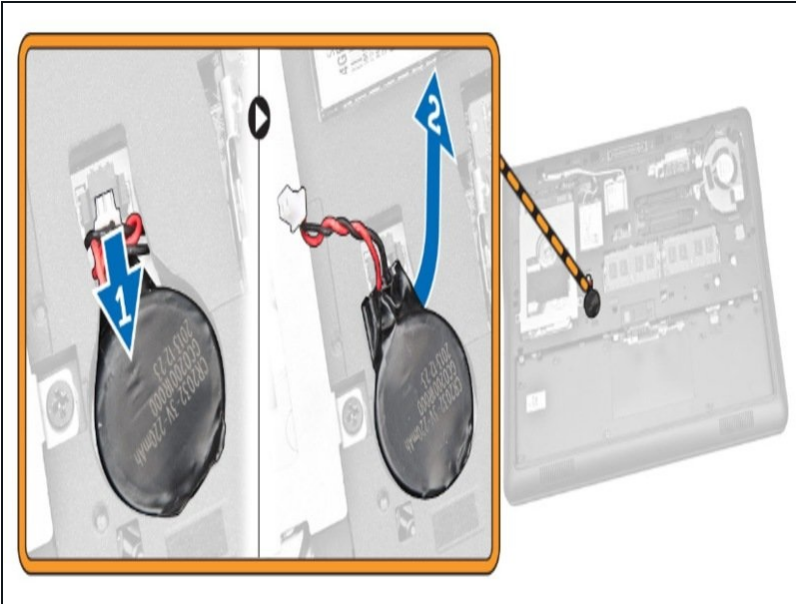

- Disconnect the coin-cell cable from its connector on the system board [1].
- Pry the coin-cell to remove from the computer [2].

Step 3 — Plug in coin-cell time battery

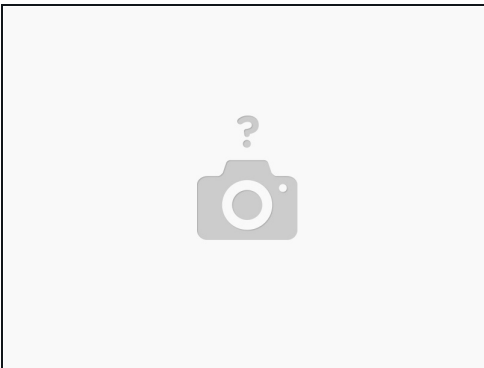

- Plug in the coin-cell time battery's cable to its system board connector.

Step 4 — Install battery and base cover



- Install battery and base cover.

-
- To reassemble your device, follow these instructions in reverse order.