



LG Chocolate 3 Side Buttons Replacement

Use this guide to replace the side buttons. Be...

Written By: Brenna Yagade



INTRODUCTION

Use this guide to replace the side buttons. Be prepared to deal with small parts, including screws and the buttons themselves.

TOOLS:

Phillips #1 Screwdriver (1)

Spudger (1)

Tweezers (1)

Step 1 — Battery



- ① Turn the phone off before starting the replacement process.
- Place the phone face down.
- Press your finger down on the indentation and slide the back plate off.

Step 2



- Using your index finger lift and remove the battery from the phone.


Step 3 — Rear Case



- Use the pointed end of the spudger to pull out the plastic inserts that are located on the left and right-hand corners.

- *i* If needed, use the tip of a push pin instead of the spudger to remove the plastic inserts.

Step 4

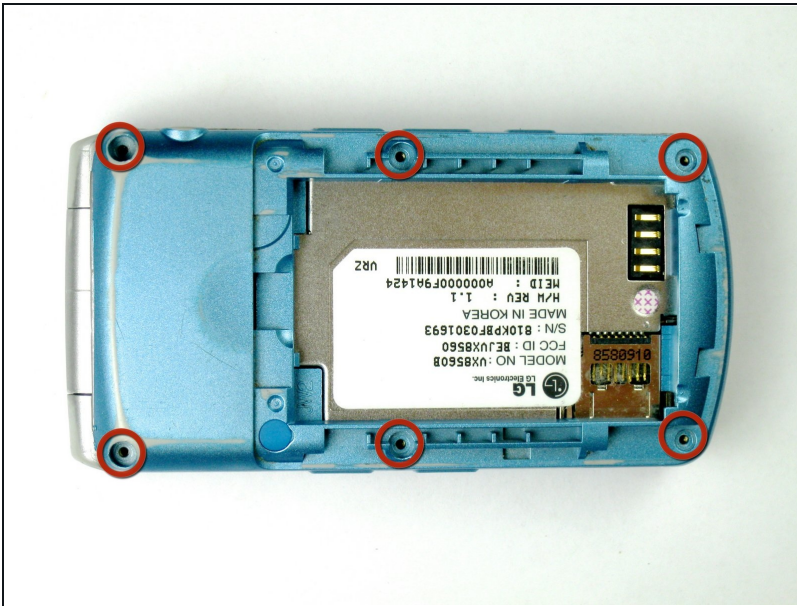

- Using a Phillips #00 screwdriver, remove the six 3mm long screws found along the edges of the phone.

❗ If needed, use [tweezers](#) to remove loose screws from the recessed holes.

⚠ Screws are small, therefore, they should be placed in a secure location to prevent misplacement.

Step 5




- Pull the rear case up using the spudger.

⚠ The rear case is connected to the right side of the phone via red and blue cables, be careful not to pull these cables out.

☑ The volume control buttons on the side might fall out of their sockets. Carefully replace them with a pair of tweezers before you reassemble the rear case.

Step 6

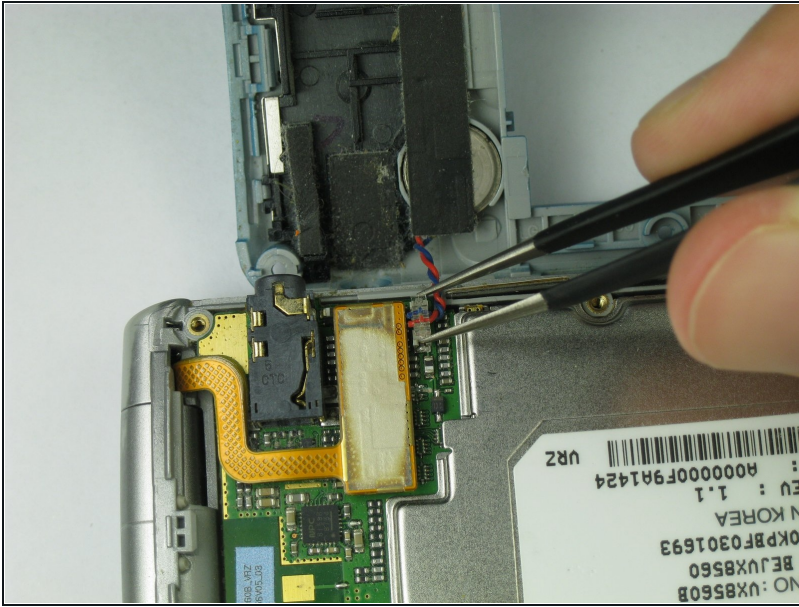

- Use tweezers to pull the clear end of the red and blue speaker cables away from motherboard.

Step 7



- Carefully remove the rear case from the phone.

Step 8 — Side Buttons



- Use [tweezers](#) to remove the music button found on the side of the phone.

Step 9



- Use tweezers to remove the volume control buttons on the opposite side of the phone.

To reassemble your device, follow these instructions in reverse order.