

Lenovo Y520-15IKBN Display Replacement

Written By: Mark A Clement



TOOLS:

Spudger (1)

Phillips #00 Screwdriver (1)

Phillips #1 Screwdriver (1)


Phillips #0 Screwdriver (1)

iFixit Opening Tool (1)

PARTS:

Lenovo Legion Y520 & IdeaPad 700 Battery (1) Lenovo Legion Y520-15 Lower Case (1) Lenovo L13M4P02 Battery (1)

Step 1 — Battery

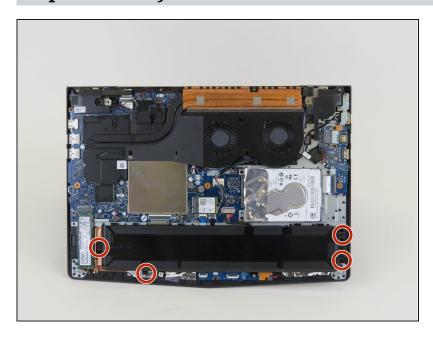

 Remove the four 4 mm Phillips #00 screws securing the battery.

Step 2



- Disconnect the battery connector by pulling the battery cable directly out of its port, toward the battery.
 - \triangle Do not pull on the socket itself or you risk damaging the motherboard.
 - (i) If necessary, apply force and slowly wiggle the connector out of its socket. It should work its way out slowly.

Step 3



• Lift the battery up and out of the chassis.

Step 4 — Display




• Use an opening tool to pry off the display bezel.

Step 5



 Remove the four 4 mm screws with a Phillips #1 screwdriver.

Step 6

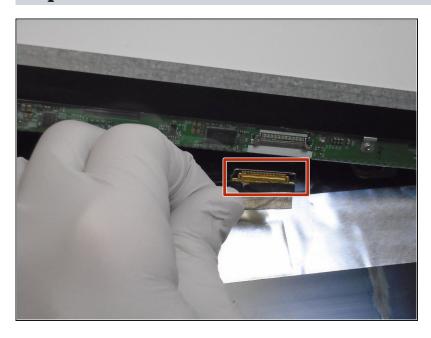

- Flip up the gate on the display ribbon cable, and pull it directly out of its port.
- Remove the display from the computer.

To reassemble your device, follow these instructions in reverse order.