

Playstation 3 Power Supply Replacement

Written By: iDeleted



INTRODUCTION

Power supplies take electricity from a wall socket and convert it so that it may be used by the various components of the PS3.



TOOLS:

• Phillips #2 Screwdriver (1)

Step 1 — Top Cover





Remove the rubber screw cover near the hard drive cover with a spudger.

Step 2



 Remove the screw holding the top cover in place with a Torx T10 screwdriver.

Step 3





- Slide the top cover down about half an inch.
- Lift the cover off of the PS3.

Step 4





- Remove the seven screws in the top cover with a Phillips #2 screwdriver.
- (i) One of the screws is shorter than the others. The short screw is marked in yellow.

Step 5








Guide ID: 1508 - Draft: 2017-12-14

You can now lift off the top cover.

Step 6 — Power Supply

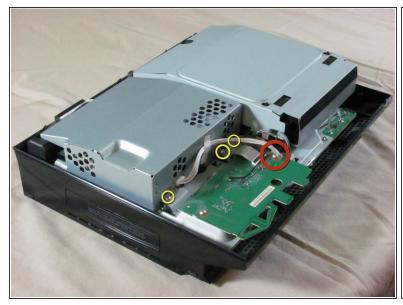




- Unplug the white wires connected to the wireless board. There are two sets of wires: one set in the front, one in the back.
 - Push down the tab on the connector to disconnect the wires.
- Remove the two screws on the front of the power supply.

Step 7



 Remove the screws on the back of the power supply with a Phillips #2 screwdriver.

Step 8

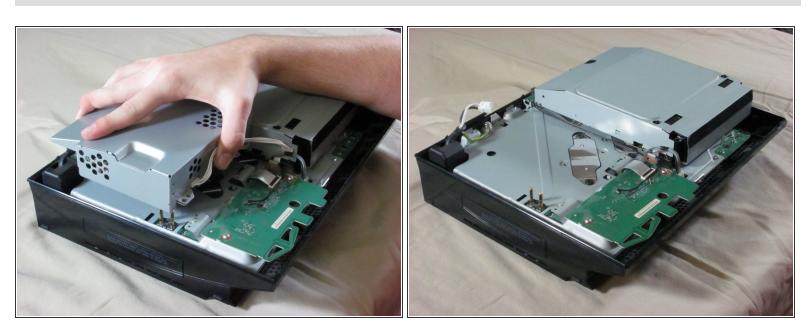

Remove the power supply by lifting it straight up.

To reassemble your device, follow these instructions in reverse order.