




Archived

Canon PowerShot SD850 IS Battery Replacement

Use this guide to remove the battery.


Written By: iDeleted

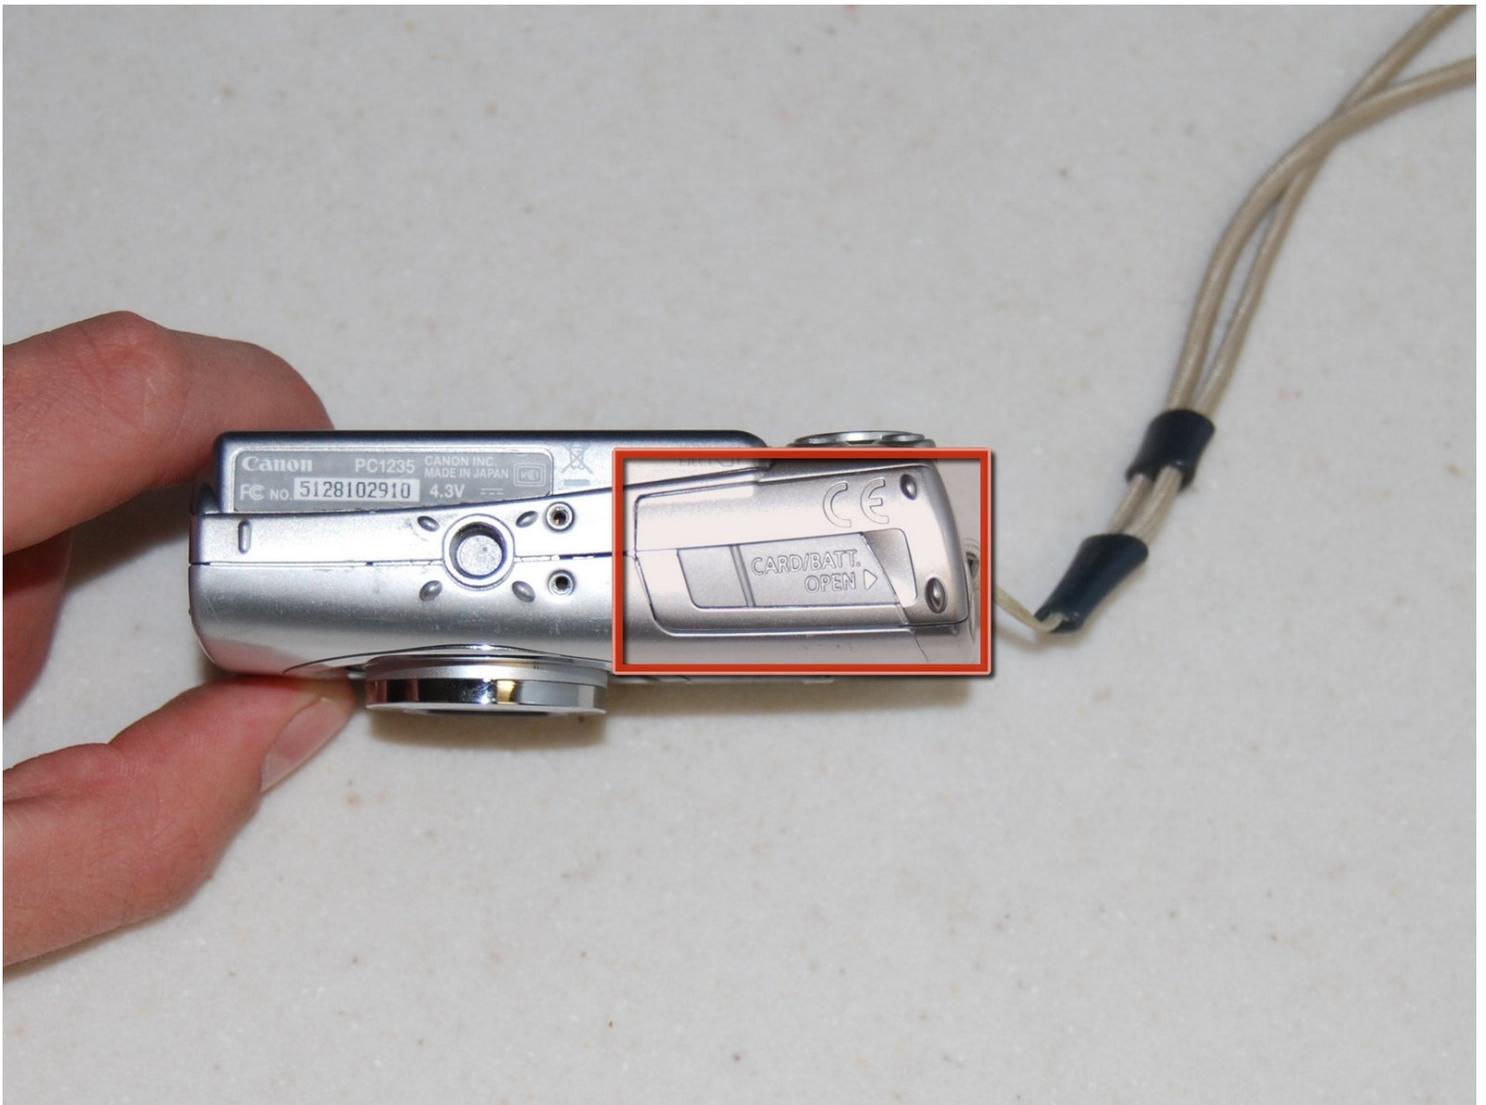

INTRODUCTION

Use this guide to remove the battery.

Step 1 — Battery

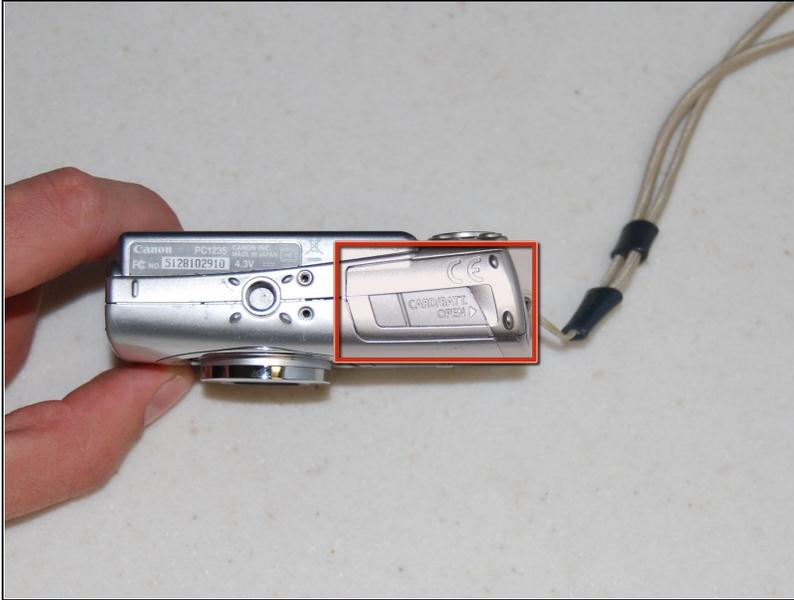


- Identify the battery port on the underside of the camera.

Step 2



- Using your thumb, slide the port to the right and release.

Step 3

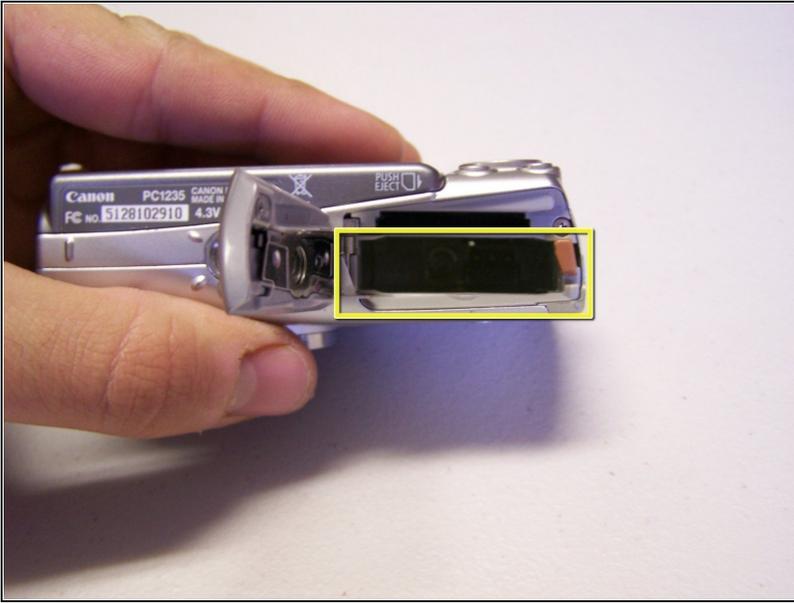

- Remove the battery.